

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 5055-707 Owner's Manual


[Shop genuine replacement parts for Coleman 5055-707](#)



[Find Your Coleman HVAC Parts - Select From 36 Models](#)

----- Manual continues below -----


The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, KS 67219
1-800-835-3278 • TDD: 316-832-8707

© 2005 The Coleman Company, Inc. All rights reserved. Coleman® and  are registered trademarks of The Coleman Company, Inc.

Assembly (cont.)


5a. Assemble screen door latch.

NOTE: Two hex nuts and latch bar will assemble on the inside of the screen door.

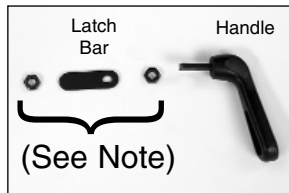

5b. Insert handle from outside.

Loosely assembly one hex nut. The handle should freely turn. Point the handle downward to begin the next step.

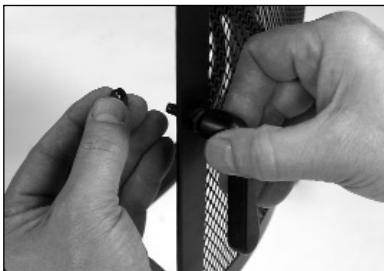

5c. Slip latch bar onto handle threads.


Align "D" slot in latch bar with flat on handle threads. The latch bar should point toward the left. Assemble the second hex nut to finish the assembly. This hex nut functions as a "jam nut", and will tighten against the first hex nut assembled in Step 5b.



5d. Tighten the "jam nut" with a wrench.



5e. Proper installation of the latch assembly.

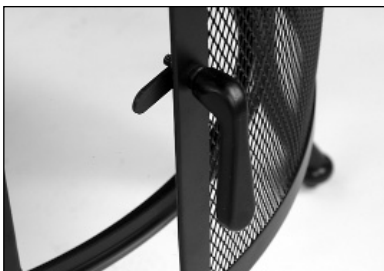

6. Install the firebowl.

NOTE: An inch or two of sand should be used in firebowl beneath the grate.



7. Install two grates.



8. Assemble chimney to dome with four small screws.



NOTE: In some models, the chimney and dome are pre-assembled by the factory.



9. Lay the chimney screen in the chimney.



10. Place dome assembly onto fireplace frame.

