

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



AIR KING PH120 Owner's Manual

[Shop genuine replacement parts for AIR KING PH120](#)



[Find Your AIR KING Humidifier Parts - Select From 46 Models](#)

----- Manual continues below -----



Air-King
Innovators in Home Comfort

OWNER'S MANUAL

OPERATION & MAINTENANCE OF YOUR HUMIDIFIER

NOTE:

Read instructions prior to using your humidifier. Retain instructions for future reference. Always unplug the humidifier before filling or cleaning. If you discover any missing components or damage call 1-800-465-7300 between 8:00am and 3:30pm EST. Monday to Friday.

LIMITED WARRANTY

SHOULD ACCESSORY PARTS BE NEEDED CONTACT YOUR NEAREST SERVICE DEPOT. FOR IN-WARRANTY REPLACEMENT PARTS, A COPY OF PROOF-OF-PURCHASE MUST BE INCLUDED ALONG WITH THE TYPE AND STYLE, WHICH IS LOCATED ON THE BOTTOM OF YOUR APPLIANCE.


The product you have purchased is warranted by the manufacturer for one year from the date of original purchase against defects in workmanship and/or materials. Parts that prove to be defective during the one year period will be either repaired or replaced at our option. The right is reserved by the manufacturer to replace the whole product in lieu thereof.

SHOULD ELECTRICAL OR MECHANICAL REPAIR BECOME NECESSARY DURING THE WARRANTY PERIOD, SEND YOUR COMPLETE PRODUCT POSTAGE OR FREIGHT PAID TO THE NEAREST AUTHORIZED SERVICE CENTRE. PLEASE INCLUDE A COPY OF PROOF-OF-PURCHASE ALONG WITH YOUR APPLIANCE.

This warranty does not apply if the damage occurs because of accident, improper handling or operation, shipping damage, abuse, misuse, or

unauthorized repairs made or attempted, or use of the product in commercial service.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND EXCLUDES ALL LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR ANY CAUSE WHATSOEVER.

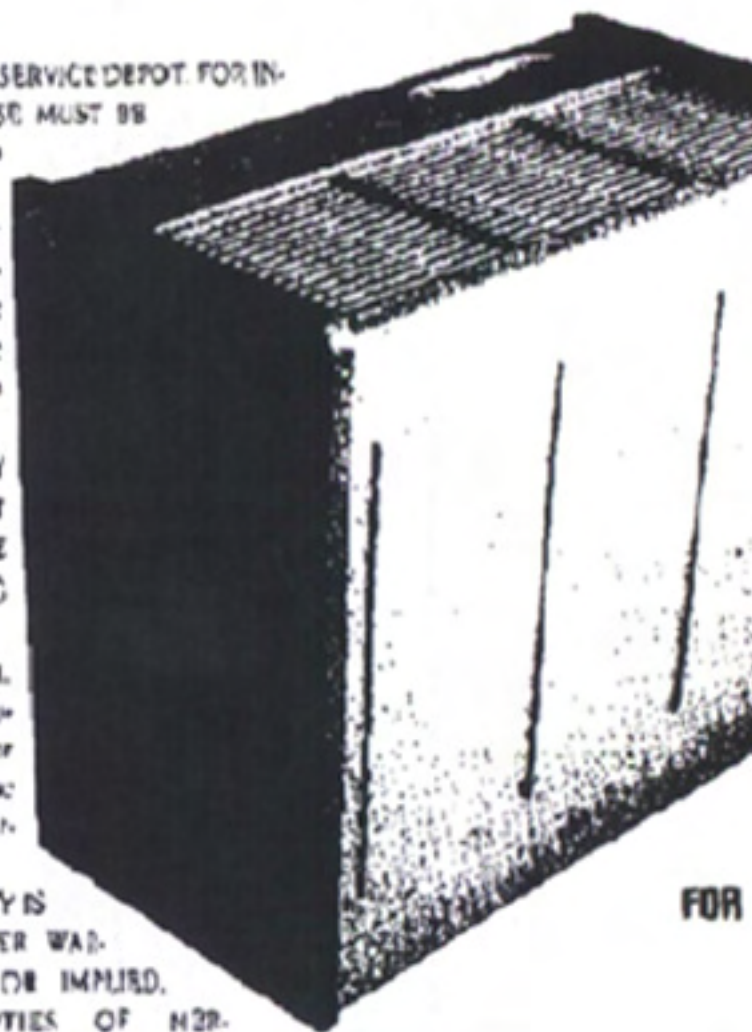

FOR



AIR-KING ASSISTANCE HOT LINE 1-800-465-7300

INSTALLING BUCKET




To install the water bucket into your humidifier, lift the water level float, slide the bucket into the back of the humidifier.

INSTALLING DRUM




When installing the drum, it is very important that the drum rim is placed into the drive pulley groove as this is what makes the drum rotate.

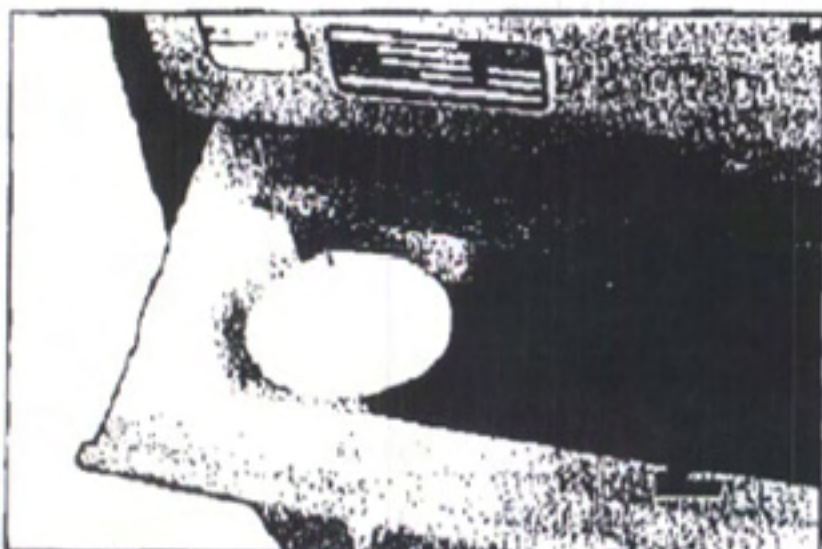

On models with an air baffle, (baffle installed as in picture #7) the float must be on the back side of the baffle. On all other models the float hangs freely.



When lifting the drum in or out of your humidifier, be sure the drum rim is placed into the drive pulley groove as this is what makes the drum rotate.

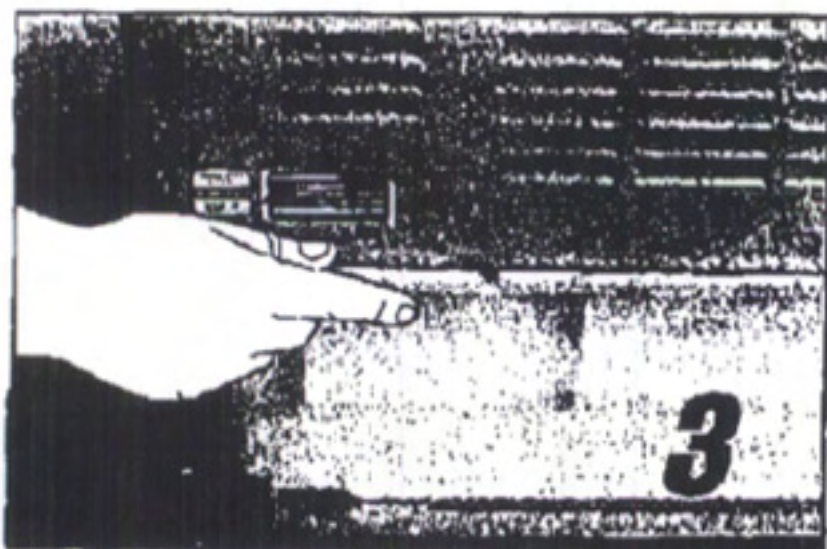

Push the bucket into the humidifier so that the bucket touches the front of the humidifier.



When lifting the drum in or out of your humidifier, be sure the drum rim is placed into the drive pulley groove as this is what makes the drum rotate.



AIR-KING ASSISTANCE HOT LINE 1-800-465-7300


INSTALLING BAFFLE & FUNNEL



Some models include an air baffle to improve performance. You can upgrade your model by purchasing an air baffle through Air-King parts and service 1-800-465-7300.



To install the water funnel, locate "T" slots to the left of the installed drum, push into slots and

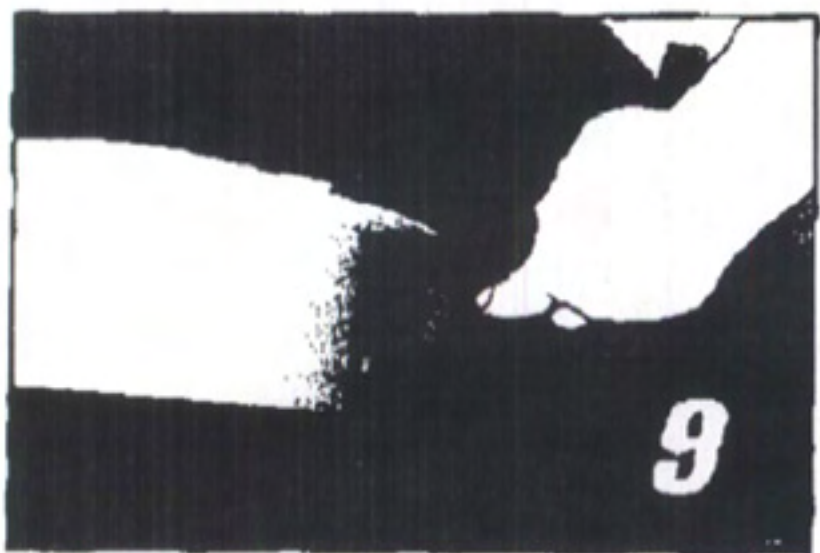


slide down to lock into position. To avoid spills when filling the humidifier with water, pour water into funnel and observe the water level in the bucket.

OPERATING YOUR HUMIDIFIER



Install the grills on top of your humidifier in the slots and plug the unit into an outlet.

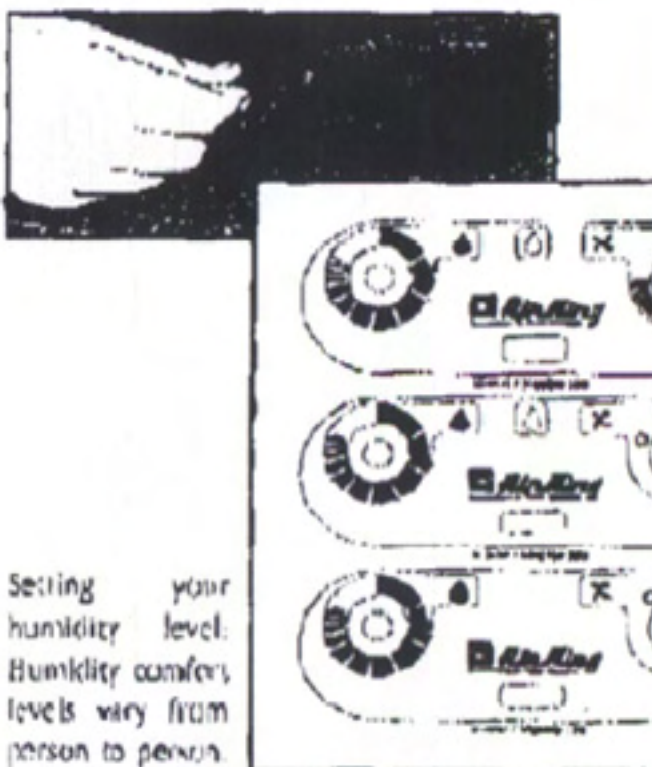

Setting your humidity level: Humidity comfort levels vary from person to person. When you first

turn your humidifier on set the humidistat on high and let the unit run constantly until you feel the humidity level is comfortable. At this point turn the humidistat down until the light clicks, this is your set point. The humidifier will cycle on and off to maintain the selected humidity level. Selecting a fan speed will vary the time it takes for the humidifier to reach the selected humidity level. When the fan is on low speed the humidifier will run longer to reach the selected humidity level. Your humidifier is equipped with a water refill light and/or a water level indicator (depending on model of humidifier, this is to let you know when to refill the bucket with water.

Note: The humidifier will not run if there is no water in the bucket.

CLEANING INSTRUCTIONS

If you are in an area with hard water (high mineral content), extra cleaning will be necessary. 1. Every two to four weeks, more often if needed, humidifier reservoirs should be drained and wiped clean with mild detergent and rinsed. Difficult mineral deposits should be removed with a vinegar and water solution. After cleaning, the reservoir should be well rinsed with clean water. Never use abrasive cleaners on plastic parts. The filter should be cleaned in a water/vinegar solution and rinsed with clean water.

2. At the end of the humidification season or when the humidifier will not be used for a prolonged period, drain reservoir, wipe clean with mild detergent and rinse with warm water. Allow to dry before storing. Remove and dispose of filter.

3. Clean the outside of the humidifier with a soft, clean damp cloth only. **DO NOT** immerse or spray water onto humidifier housing. Electric shock may result or the unit may be permanently damaged.

Many condensation problems can be avoided by cleaning the humidifier drum to slip drum to just dry. When cleaning this unit, use a vinegar + water solution. you will v

HINTS FOR TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSES	REMEDY
UNIT IS NOISY OR DOES NOT RUN SMOOTHLY	<ol style="list-style-type: none"> 1. UNIT NOT ON LEVEL SURFACE 2. GRILL VIBRATING 3. DIRTY OR DRY ROLLERS, DRIVE BELTS OR DRUM RING 4. LOOSE DRIVE SHAFT 	<ol style="list-style-type: none"> 1. LEVEL UNIT 2. ADJUST AS REQUIRED 3. CLEAN DRUM 4. TIGHTEN SH
UNIT DOES NOT TURN ON	<ol style="list-style-type: none"> 1. FLOAT LEVEL SWITCH 2. HUMIDISTAT 3. FAN SPEED CONTROL 4. LOOSE TERMINAL CONNECTOR 	<ol style="list-style-type: none"> 1. ADJUST MOTOR FREQUENTLY 2. TURN FAN ON 3. MAKE SURE AND RELEAS
UNIT DOES NOT SHUT OFF (TOO MUCH MOISTURE)	<ol style="list-style-type: none"> 1. HUMIDISTAT SET TOO HIGH 2. FLOAT BENDING OR STICKING 3. BROKEN OR DISCONNECTED NYLON FLOAT CORD 4. FLOAT LEVEL SWITCH 5. HUMIDISTAT 	<ol style="list-style-type: none"> 1. ADJUST AS REQUIRED 2. ADJUST MOTOR FREQUENTLY 3. OPERATE FREQUENTLY 4. REPLACE OR REPAIR 5. CHECK SWITCH 6. TURN HUMIDIFIER OFF 7. LOWEST POSSIBLE CONDITION
NOT ENOUGH MOISTURE	<ol style="list-style-type: none"> 1. HUMIDISTAT SET TOO LOW 2. FLOAT BENDING OR STICKING 3. FLOAT LEVEL 4. FILTER DRUM NOT ROTATING 5. FILTER DRUM OFF PLATES 	<ol style="list-style-type: none"> 1. REFER TO OWNER'S MANUAL 2. CHECK AND ADJUST 3. CHECK SWITCH 4. CHECK PUMP 5. MAKE SURE ON DRIVE P 6. FILTER ALSO
LEAKING	<ol style="list-style-type: none"> 1. UNIT COVER PLUGGED 2. TANK CRACKED 	<ol style="list-style-type: none"> 1. REFER TO OWNER'S MANUAL 2. REPLACE TANK

