

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# LASKO 1129 Owner's Manual

[Shop genuine replacement parts for LASKO 1129](#)



[Find Your LASKO Humidifier Parts - Select From 20 Models](#)

----- Manual continues below -----

## TROUBLE SHOOTING GUIDE

TROUBLE	PROBABLE CAUSE	SOLUTION
Fan not working or Humidifier doesn't turn on	<ul style="list-style-type: none"> <li>No power</li> <li>Humidistat not set correctly</li> </ul>	Make sure Unit is plugged in Check that the Power Switch is on Set Humidistat to higher humidity level
Water leaking	<ul style="list-style-type: none"> <li>Base is overfilled</li> <li>Filter is old and dirty</li> </ul>	Reduce water level in Base Replace Filter
Foul odor	<ul style="list-style-type: none"> <li>Filter needs to be replaced</li> <li>Base needs to be cleaned</li> <li>Whole Humidifier needs cleaning</li> </ul>	Replace Filter Follow Follow
Filter discoloration	<ul style="list-style-type: none"> <li>Mineral deposits in water</li> </ul>	Replace Filter
Water discoloration	<ul style="list-style-type: none"> <li>Humidifier needs to be cleaned</li> <li>Hard water - Iron in water</li> <li>Some humidifier additives can cause discoloration</li> </ul>	Follow Use filtered or distilled water
Lights don't work:  Humidistat Light Off, Power Light On	<ul style="list-style-type: none"> <li>Humidity is not yet achieved in room</li> </ul>	Let Humidifier continue to run
Power Light Off, Humidistat Light On	<ul style="list-style-type: none"> <li>Room has reached desired Humidity level</li> </ul>	Set Humidity Knob for more Humidity
No water show	<ul style="list-style-type: none"> <li>Hose not connected to Pump</li> <li>Hose not connected to Water Show</li> <li>No Water in Unit</li> </ul>	Connect Hose to Pump Connect Hose to Water Show Refill Unit

### LIMITED WARRANTY

**WHAT THIS WARRANTY COVERS:** This product is warranted against defects in workmanship and/or materials.

**HOW LONG THIS WARRANTY LASTS:** This warranty extends only to the original purchaser of the product and lasts for one (1) year from the date of original purchase or until the original purchaser of the product sells or transfers the product, whichever first occurs.

**WHAT LASKO WILL DO:** During the warranty period, Lasko will, at its sole option, repair or replace any part or parts that prove to be defective or replace the whole product with the same or comparable model.

**WHAT THIS WARRANTY DOES NOT COVER:** This warranty does not apply if the product was damaged or failed because of accident, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, or the use of the product for commercial or nonresidential service. This warranty does not cover shipping costs for the return of products to Lasko for repair or replacement. Lasko will pay return shipping charges from Lasko following warranty repairs or replacement.

**ANY AND ALL WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY), LAST ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE OR UNTIL THE ORIGINAL PURCHASER OF THE PRODUCT SELLS OR TRANSFERS THE PRODUCT, WHICHEVER FIRST OCCURS AND IN NO EVENT SHALL LASKO'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY INCLUDE (I) INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM ANY CAUSE WHATSOEVER, OR (II) REPLACEMENT OR REPAIR OF ANY HOUSE FUSES, CIRCUIT BREAKERS OR RECEPTACLES. NOTWITHSTANDING ANYTHING TO THE CONTRARY, IN NO EVENT SHALL LASKO'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY EXCEED THE PURCHASE PRICE OF THE PRODUCT AND ANY SUCH LIABILITY SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIOD.**

Some states and provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these exclusions or limitations may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state and province to province.

### FOR PARTS:

For Replacement Parts or Filters please call: 1-800-233-2068,

**MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 4 PM EST. "PLEASE DO NOT RETURN PRODUCT TO PLACE OF PURCHASE." Reference model number 1129 when you call.**

### FOR TECHNICAL ASSISTANCE and SERVICE CENTER LOCATIONS:

For any questions, comments or the location of your nearest service center, **PLEASE CALL OUR TOLL-FREE "HOTLINE" AT 1-800-233-0268, MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 5 PM EST.** Please reference model number 1129 when you call.

Appliance Service Dept. • 300 Confederate Drive, Franklin, TN 37065-0569 **PLEASE DO NOT SEND PRODUCT TO THIS LOCATION!**

 
## FILLING

**CAUTION:** Do not pour water through the Exhaust Grill on the Upper Housing. Doing so may cause damage and personal injury.



- CAUTION:**
- Unplug Unit when filling
  - Always place Humidifier on a firm level surface. Locate the Power Cord so the Humidifier is not resting on it, and is away from traffic.
  - Be careful not to overfill.
  - Do not pour water through Exhaust Grill, doing so may cause damage and personal injury.
  - Take extra care to prevent water spillage that may damage furniture or flooring. The manufacturer will not accept responsibility for damage to property caused by water spillage.
  - Always be sure the Power Knob is in the OFF position when plugging Humidifier into a grounded 120 volt AC wall outlet.
  - To prevent risk of electrical shock and injury to persons, do not plug Humidifier into electrical outlet with wet hands.

1. It is recommended that all Humidifiers be cleaned prior to use. Please read **Cleaning Instructions** for Base and Jug cleaning.
2. Use the convenient Carrying Handle found on the bottom of the Water Jug to bring it to a faucet. The Water Jug features a 'Quick Fill/Quick Empty' Spout. To fill, hold Jug upside down by the Handle. Use thumb to press down Stopper Lever, and fill Jug. Fill the Water Jug with cool tap water. **Never use hot water.** (Figure 3)

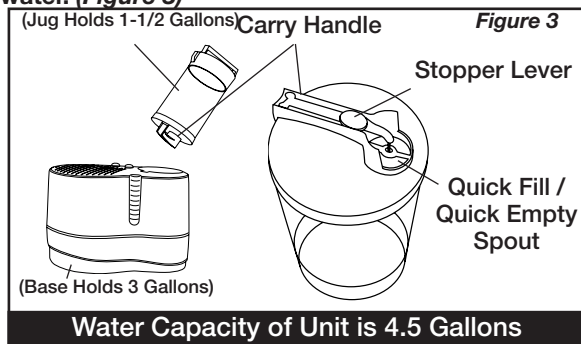


When the Jug is replaced back into the Base it will quickly empty to fill Base.

**NOTE:** While carrying filled Water Jug back to the Humidifier, hold the Handle with one hand, while supporting bottom of Water Jug with other hand.

3. Place the Water Jug securely in the Base. If positioned properly, water will quickly pour into Base and automatically stop when reaching desired amount.
4. When gurgling noise stops lift up the Water Jug to see if it is empty. Refill if empty. When the Unit is full some water will remain in the Jug.
5. Even though your Humidifier will produce approximately 9.0 gallons in a 24 hour period\*, the water capacity (amount of water the Humidifier will hold at one time) is 4.5 gallons. (3 FULL Jugs).

## OPERATION

 1. Turn fan speed knob to desired speed.
    - 3- For fast humidification of a large room or house, approximately 9 gallon per day.\*
    - 2- For normal operation.
    - 1- For quiet, night time operation or after desired moisture level is reached.
- \* Calculations based on ambient room conditions of 70° F and 30% relative humidity in a room of average insulation. The presence of water flow in the Water Show Window indicates the circulation of water to the Filter.

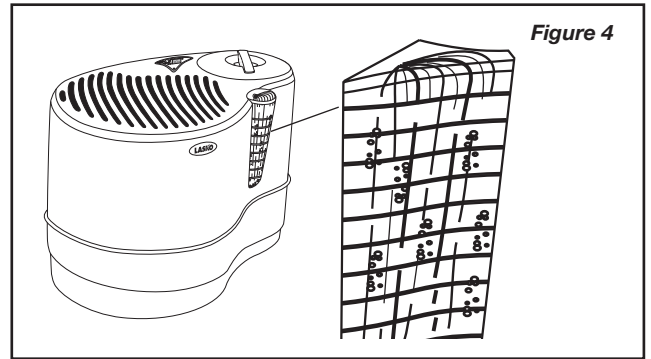


The correct room humidity display will set itself 10 seconds after the power cord is plugged into a 120 V outlet.

2. Push the humidity set button up or down, to adjust the humidity to the desired level. The desired humidity range is 25% to 95%.

The desired humidity level is displayed in small numbers and the correct room humidity % is displayed in large numbers. Once the current room humidity level reaches the desired humidity level, the fan will turn off and the humidity indicator light will come on. This light indicates that the humidifier is still on and will again start when the current room humidity level falls below the desired set level.

 If the current room humidity drops below 25% or goes above 95%, the display will blink off and on until the current room humidity is within the 30% to 90% range.

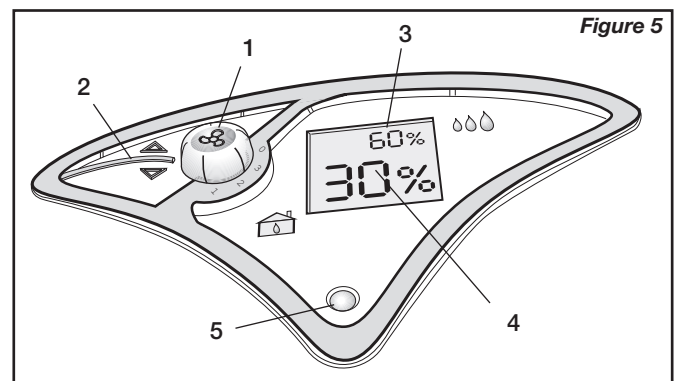

1. Fan Speed Knob
2. Humidity Set Button
3. Desired Humidity %
4. Current Room Humidity %
5. Humidity Indicator Light - Light comes on when desired humidity level is the same or lower than current room humidity while the speed knob is in the on position.