




# PANASONIC

Models: MC-4401

## Nozzle Housing

- 1 ... P-31007 ..... Lower Body
- 2 ... P-6804 ..... Latch
- 3 ... P-70001 ..... Latch Spring
- 4 ... P-18300 ..... Nozzle Lift Lever
- 5 ... P-10007 ..... Wheel
- 6 ... P-18301 ..... Rear Axle Shaft
- 7 ... P-9410 ..... Power Cord
- 8 ... P-18302 ..... Belt, type UB-5, sold each
- 9 ... P-3107 ..... Height Adjust Activator
- 10 ... P-4001 ..... Slide Lever, height adjuster
- 11 ... P-3600 ..... Height Adjust Spring
- 12 ... P-5001 ..... Switch, on/off
- 13 ... P-3005 ..... Switch Cover
- 14 ... P-47007 ..... Handle Release Pedal
- 15 ... P-621001 ..... Right Angle Strain Relief
- 16 ... P-62001 ..... Cord Stopper
- 17 ... P-7405 ..... Stopper, wheel
- 18 ... P-18303 ..... Washer
- 19 ... P-2608 ..... Plastic Axle Holder
- 20 ... P-1610 ..... Front Axle Shaft
- 21 ... P-6140 ..... Screw
- 22 ... P-64007 ..... On/Off Button
- 23 ... P-101007 ..... Furniture Guard
- 24 ... P-1110 ..... Floor Nozzle, upper unit
- 25 ... P-000623 ..... Wire Nut
- 26 ... P-6140 ..... Screw, cord stopper
- 27 ... P-9002 ..... Wheel, nozzle
- 28 ... P-27007 ..... Lower Plate

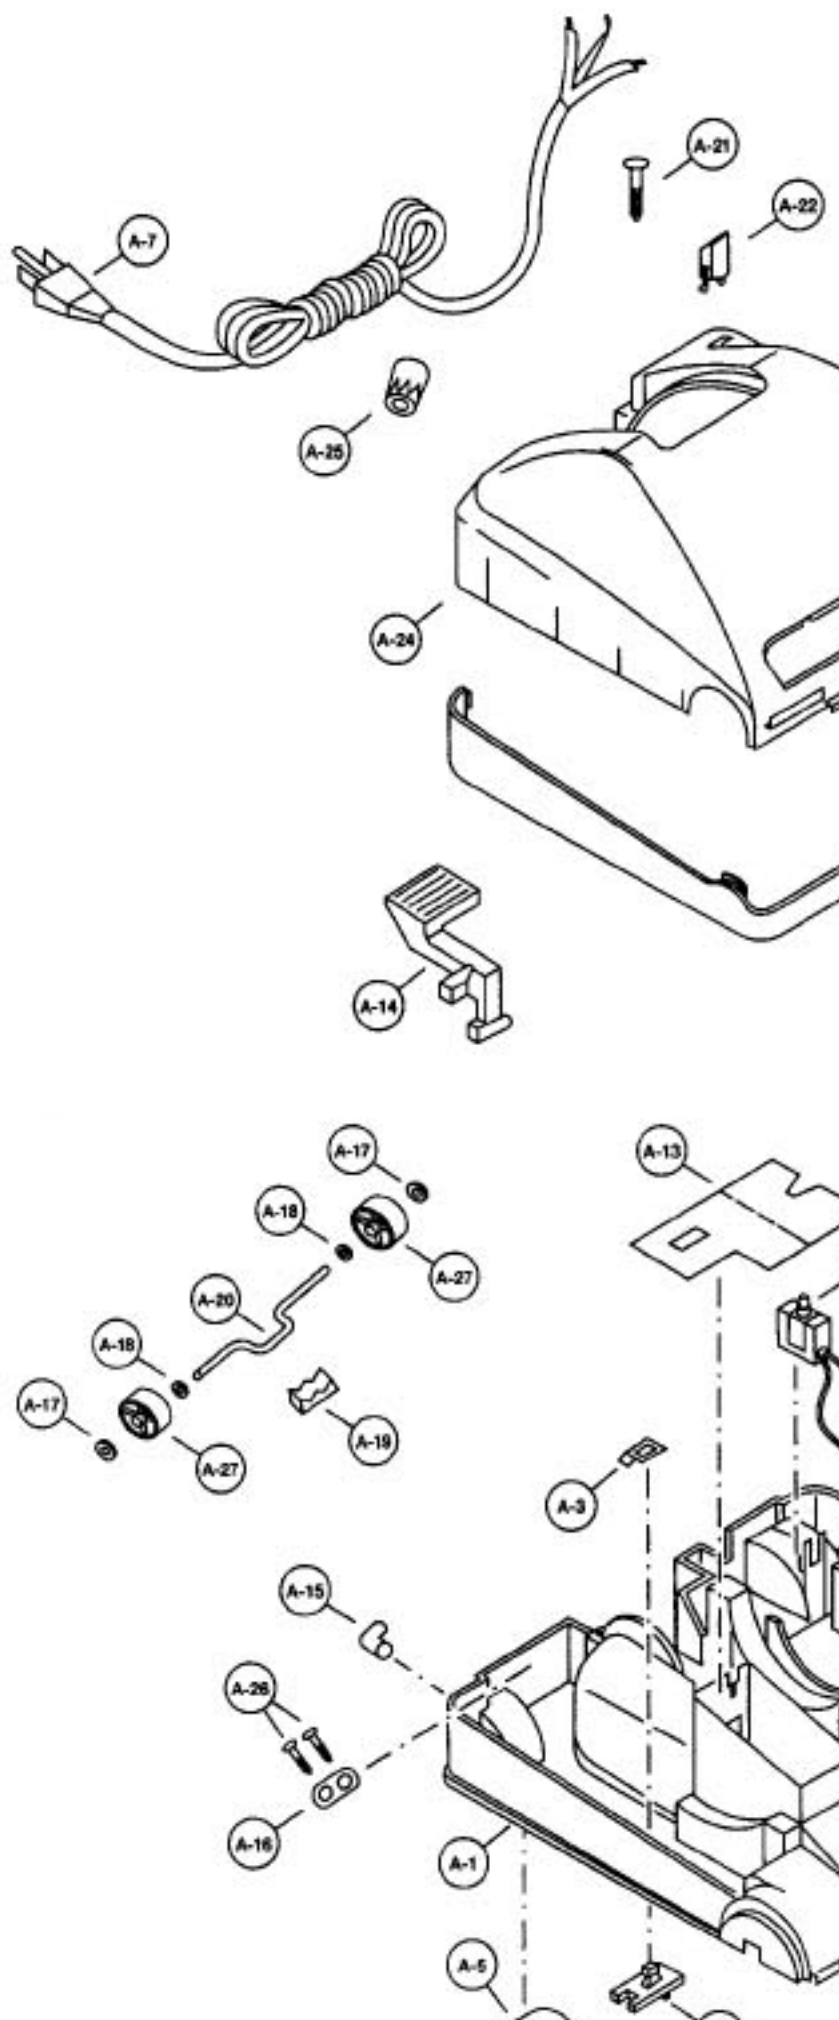



# PANASONIC

Models: MC-4401

## Motor, Motor Housing & Agitator

- 1 ..... P-64000 ..... Suction Inlet Packing
- 2 ..... P-42400 ..... Screw, motor case
- 3 ..... P-2910 ..... Holder, belt end
- 4 ..... P-53107 ..... Fan Case
- 5 ..... P-41490 ..... Hex Nut
- 6 ..... P-18305 ..... Washer, motor case
- 7 ..... P-41508 ..... Impeller
- 8 ..... P-0605 ..... Washer, motor support
- 9 ..... P-2200 ..... Small Seal
- 10 ..... P-54107 ..... Fan Case
- 11 ..... P-63007 ..... Motor Support Cover
- 12 ..... P-18304 ..... Fan Motor
- 13 ..... P-18306 ..... Motor Support Plate
- 14 ..... P-18307 ..... Support, motor, rubber
- 15 ..... P-18308 ..... Support, motor, metal
- 16 ..... P-26001 ..... Motor Cover
- 17 ..... P-51000 ..... Packing, air outlet
- 18 ..... P-71001 ..... Bracket, motor support
- 19 ..... P-6140 ..... Screw

- 20 ..... P-92102 ..... Agitator Assembly
- 21 ..... P-85002 ..... Agitator Body Only
- 22 ..... P-9906 ..... Bearing Unit

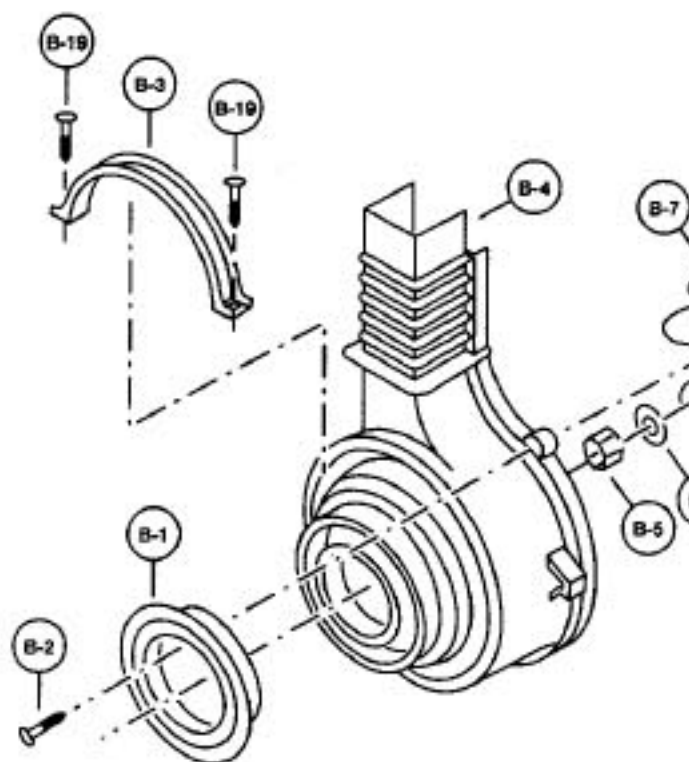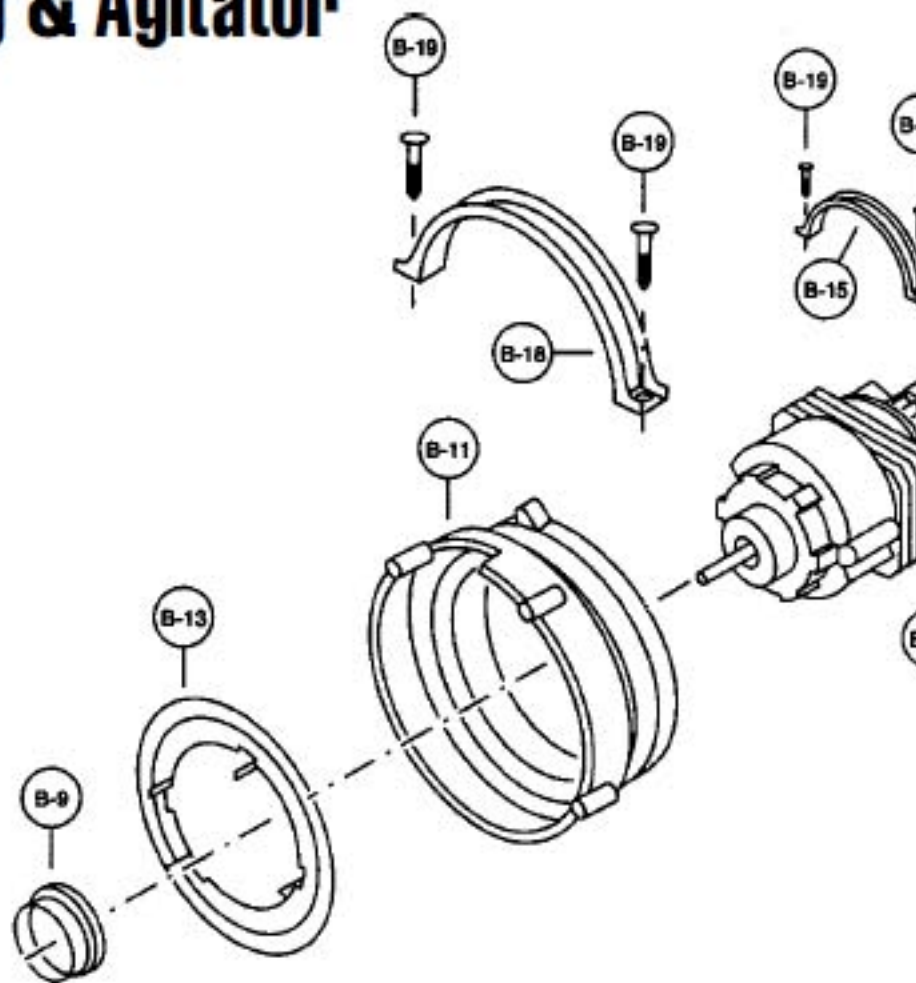

# PANASONIC

Models: MC-4401

## Bag & Handle Assembly

- 1 ..... Shaft, handle
- 2 ..... P-501007 ..... Grip, handle
- 3 ..... P-5307 ..... Upper Cord Storage
- 4 ..... P-11007 ..... Support, bag spring
- 5 ..... P-18309 ..... Bag, cloth
- 6 ..... P-53701 ..... Support Slider
- 7 ..... P-143P ..... Paper Bag
- 8 ..... P-65007 ..... Bottom Bag Cover
- 9 ..... P-6140 ..... Screw, cord hook

