


This Owner's Manual is provided and hosted by Appliance Factory Parts.



GOLDSTAR R-1800 Owner's Manual

[Shop genuine replacement parts for GOLDSTAR
R-1800](#)

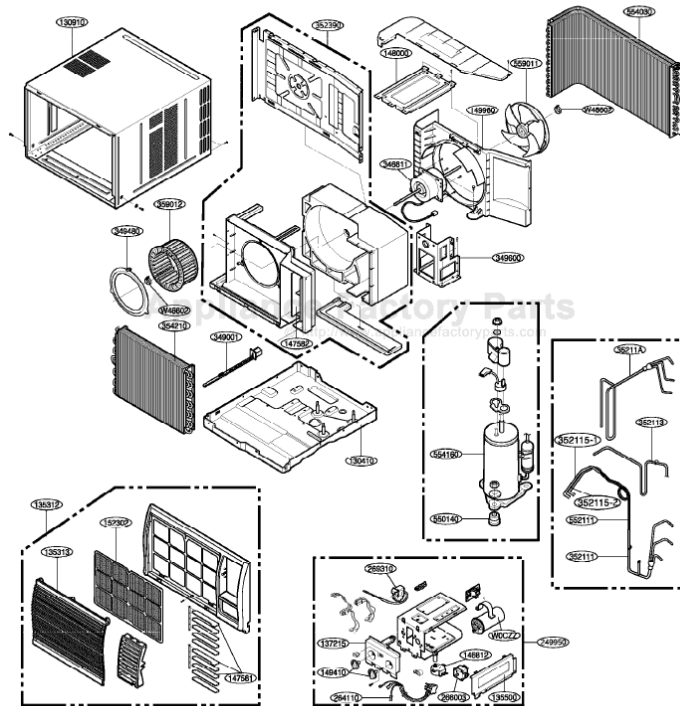


[Find Your GOLDSTAR Air Conditioner Parts - Select From 241 Models](#)

----- Manual continues below -----

5. SCHEMATIC DIAGRAM


5.1 CIRCUIT DIAGRAM

• MODEL : LWM1410BCG(BCL)

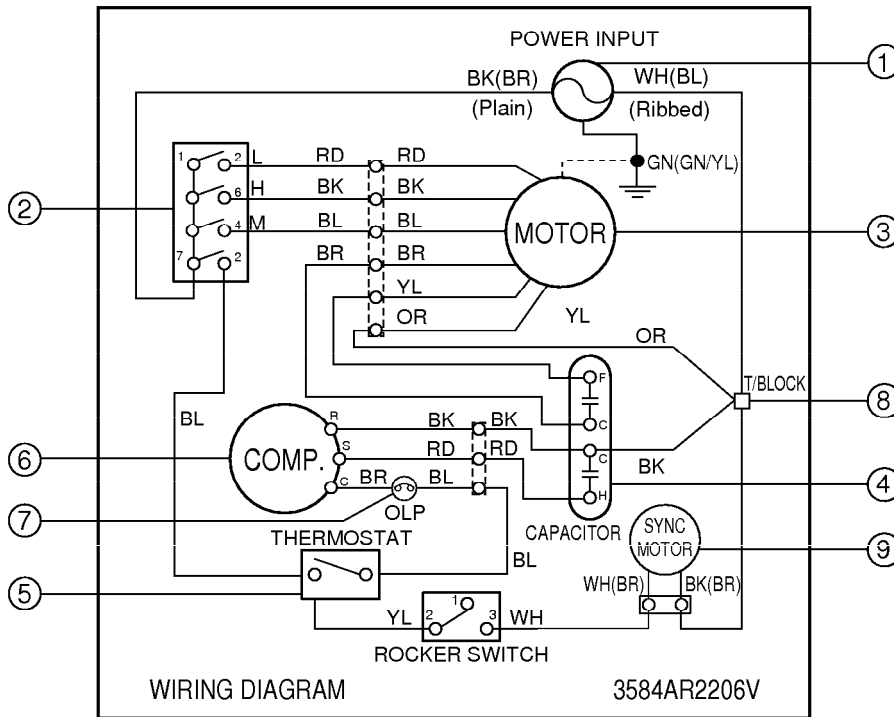


LOCATION NO.	DESCRIPTION	PART NO.	Q'TY PER SET	RE-MARKS
		LWM1410BCG(BCL)		
1	POWER CORD	2H00677S	1	
2	ROTARY SWITCH	2H00598E	1	
3	FAN MOTOR	4681AR6033E	1	
4	CAPACITOR	6120AR2359Q	1	
5	THERMOSTAT	2H01109L	1	
6	COMPRESSOR	5416A20003C	1	
7	OVERLOAD PROTECTOR	6750U-L046A	1	
8	TERMINAL BLOCK	3H00390B	1	
9	SYNCHRONOUS MOTOR	2H01102D	1	

• MODEL : LWM1830BCG(BCL)/ LWN2130BCG(BCL)

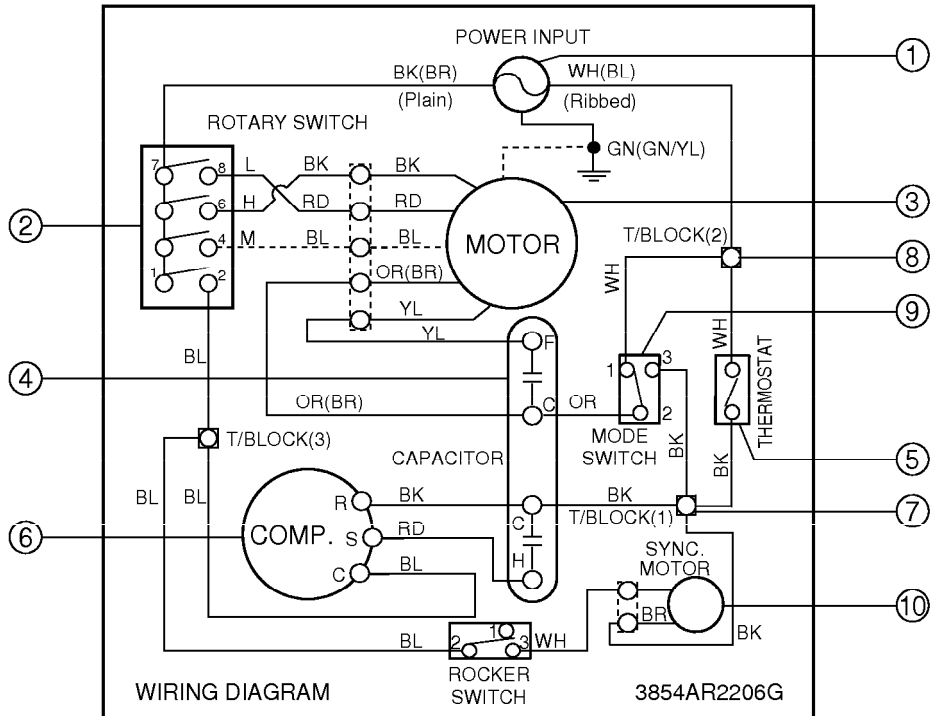

LOCATION NO.	DESCRIPTION	PART NO.		QTY PER SET	RE-MARKS
		LWM1830BCG(BCL)	LWN2130BCG(BCL)		
1	POWER CORD	2H00677Q		1	
2	ROTARY SWITCH	2H00598E		1	
3	FAN MOTOR	4681AR6033B	4681AR6033G	1	
4	CAPACITOR	6120AR2359E		1	
5	THERMOSTAT	2H01109L		1	
6	COMPRESSOR	5417AR2256E	2H02564J	1	
7	TERMINAL BLOCK(1)	3H00390A		1	
8	TERMINAL BLOCK(2)	3H00390B		1	
9	ENERGY SAVER SWITCH	2H01316C		1	
10	SYNCHRONOUS MOTOR	2H01102A		1	

• MODEL : LWM1830BXG(BXL)/ LWN2130BXG(BXL)

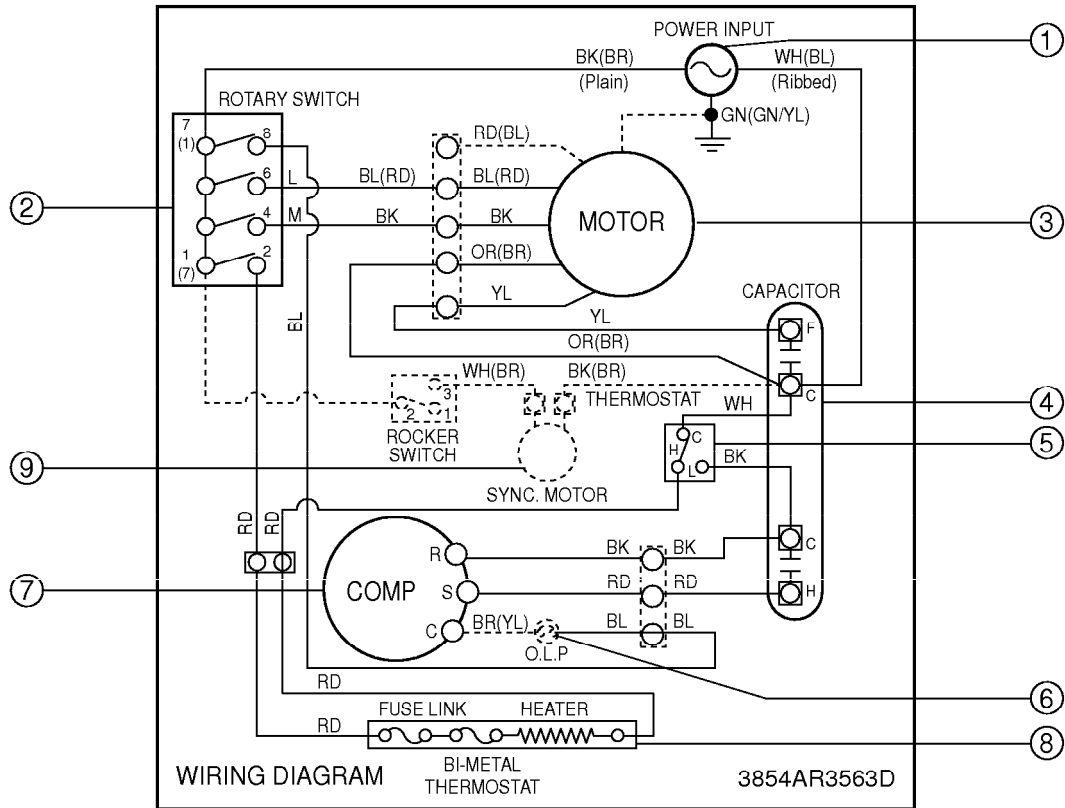

LOCATION NO.	DESCRIPTION	PART NO.		Q'TY PER SET	RE-MARKS
		LWM1830BXG(BXL)	LWN2130BXG(BXL)		
1	POWER CORD	2H00677U		1	
2	ROTARY SWITCH	2H00598F		1	
3	FAN MOTOR	4681AR6033B	4681AR6033G	1	
4	CAPACITOR	6120AR2359E		1	
5	THERMOSTAT	2H01127B		1	
6	OVERLOAD PROTECTOR	-		1	
7	COMPRESSOR	5417AR2256E	2H02564J	1	
8	ELECTRIC HEATER	5300AR1571B		1	
9	SYNCHRONOUS MOTOR	2H01102A		1	