

This Owner's Manual is provided and hosted by Appliance Factory Parts.



Charbroil 08601496 Owner's Manual

[Shop genuine replacement parts for Charbroil
08601496](#)



[Find Your Charbroil Grill Parts - Select From 3592 Models](#)

----- Manual continues below -----



08601496
ASSEMBLY/USE & CARE
MANUAL



FOR OUTDOOR HOUSEHOLD USE ONLY. DO NOT USE INDOORS OR FOR COMMERCIAL COOKING.

CAUTION: Read and follow all safety statements, assembly instructions and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

▲ WARNING

Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

▲ CAUTION

Some parts may contain sharp edges — especially as noted in the manual! Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call **1-800-241-7548**.

Visit us on the web at: www.charbroil.com



	WARNING	
CALIFORNIA PROPOSITION 65		
1. This product is produced with or contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.		
2. This product contains chemicals, including lead and lead compounds, known to the State of California to cause cancer, birth defects or other reproductive harm.		
<u>Wash your hands after handling this product.</u>		

	WARNING	
Do not use 16 or 18 gauge extension cords. Damage to household wiring and/or fire could result.		
DO NOT USE CHARCOAL. A charcoal fire will result and the grill is not designed for charcoal. The fire will create an unsafe condition and damage the grill.		

Estimated assembly time: 30 - 45 minutes



Safety Symbols

The symbols and boxes shown below explain what each heading means. Read and follow all of the messages found throughout the manual.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



Be alert to the possibility of serious bodily injury if the instructions are not followed. Be sure to read and carefully follow all of the messages.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Call Grill Service Center for Help and Parts

- If you need assistance with your product or warranty parts call **1-800-241-7548. Hours of Service Center Operation are 8:00 A.M. To 6:00 P.M. EST Monday - Friday.**
- To order non-warranty replacement parts or accessories please visit us on the web at www.charbroil.com or call 1-800-241-7548 and one of our friendly and knowledgeable agents will be glad to assist you.

IMPORTANT: Fill out the warranty information below.

Model Number _____
Serial Number _____ See rating label on grill for serial number.
Date Purchased _____



This grill is for residential use only. Do not use for commercial cooking.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


READ ALL INSTRUCTIONS

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, controller or heating element in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Call the Grill Service Center for a replacement cord or controller.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Use only with GFI (Ground Fault Interrupter) protected circuit.
- To prevent grill from being splashed or falling into water, do not use grill within 10 feet of a pool, pond or other body of water.
- Keep grill and electric controller dry and out of rain at all times.
- When connecting controller to grill, plug electric controller into grill first, make sure controller is set to OFF, then plug into outlet. When unplugging, turn controller to OFF, disconnect from outlet, then remove controller from grill.
- Unplug grill when not in use and before moving.
- Never remove grounding plug or use with an adapter to two prongs.
- Keep electric plugs off ground and dry.
- Store controller indoors when not in use.
- Do not use water or other liquid spray to clean product without first unplugging electric controller and removing heating element.
- Fuel, such as charcoal briquettes, is not to be used with appliance.
- Use only on properly grounded outlet.

SAVE THESE INSTRUCTIONS

General Safety

1. Do not touch hot surfaces with unprotected hands. Use handles and knobs provided for operation.
2. Never leave grill unattended when ON.
3. Keep children away from grill both when hot and cold.
4. Use long barbeque utensils for cooking.
5. Allow grill to cool before moving, cleaning or storing.
6. Do not cook under a roof.
7. Keep grill 24" (2 feet) away from walls and rails.
8. For outdoor household use only. Do not use indoors or for commercial cooking.
9. Do not use or store gasoline, kerosene or other flammable liquids within 20 feet of this grill when in use.
10. Store grill in weather protected area or under grill cover when not in use and electric controller indoors when not in use.
11. Use only accessory attachments recommended by manufacturer.
12. It is the responsibility of the assembler/owner to assemble, install and maintain grill.

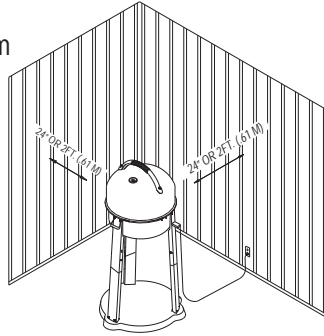

Extension Cord Use and Safety

- For best grill performance use of extension cord is **not** recommended.

If you must use an extension cord for your safety:

- Use only outdoor type with 3 prong grounding plug, rated for 15 amperes or more, approved by UL, marked with a W-A and a tag stating "Suitable for Use with Outdoor Appliance".
- Use the shortest length extension cord required. Do not connect 2 or more extension cords together. A 12 or 14 gauge extension cord of 50 ft. or less is acceptable.
- Keep connections dry and off ground.
- Do not let cord hang over edge of table top or other items where it can be pulled by children or tripped over.

Ground Fault Interrupter

- Since 1971 the National Electric Code (NEC) has required Ground Fault Interrupter devices on all outdoor circuits.
- If your residence was built before 1971, check with a qualified electrician to determine if a Ground Fault Interrupter protector exists.
- Do not use this appliance if the circuit does not have GFI protection.
- Do not plug this appliance into an indoor circuit.



WARNING

Use care when operating your grill. Be sure you read and understand all the information and safeguards in this manual before operating this grill.

Use and Care of Your Grill

Before first use of grill:

- Remove all packaging and sale labels from the grill. Do not use sharp tools to remove stickers.
- Wash cooking grate with warm soapy water, rinse and dry thoroughly.

Before each use of grill:


- Use grill only on a firm and level surface to prevent tipping over.
- To prevent household circuit breakers from tripping, keep electric controller dry and do not use other electrical products on the same circuit.
- Check grease cup to make sure it is empty and is mounted under the drain hole.
- For stick-free cooking, apply a thorough coating of vegetable oil or vegetable oil based spray to the cooking grate.

Turn grill on:



- Ensure electrical controller is turned fully counterclockwise to **OFF** position.
- Plug power supply cord into a properly grounded, GFI protected outlet. If extension cord must be used refer to "Extension Cord Use and Safety" on page 3.
- With controller fully seated in grill, turn knob clockwise. Indicator light should come on.

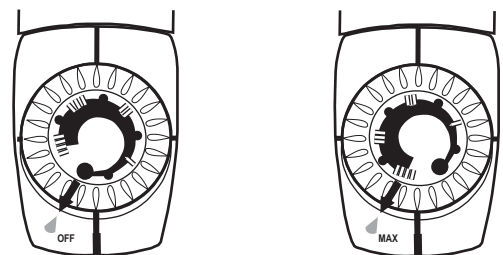

Preheating the grill:

- Keep lid closed.
- Preheat for searing, 15-20 minutes with controller set to **MAX**. (See illustration below)
- For foods requiring a lower cooking grate temperature use a setting lower than maximum. See cooking chart.
- When the controller light turns off, the maximum temperature has been reached for the knob setting. **During use this light will cycle on and off.**



Align settings on controller knob with light/pointer on controller casing as shown

	CAUTION	
<p>Do not use sharp or pointed tools to clean grill. These type cleaning tools may tear or puncture the insulation bowl.</p> <p>Do not use abrasive oven cleaners, steel wool or metal brushes to clean porcelain grates or grill body. They will damage the finish.</p> <p>Replace damaged insulation bowl(s) only with Char-Broil certified replacement parts. Do not attempt to repair damaged parts.</p>		

	DANGER	
<p>In case of fire turn controller to OFF, unplug grill from outlet and allow fire to burn out. Do not use water to put out a fire in this or another electrical appliance.</p> <p>To avoid electrical shock disconnect electric cord and remove electric controller before removing heating element and cleaning grill. Never immerse electric controller or heating element in any liquid.</p> <p>To avoid the possibility of burns be sure grill is cool before removing and/or cleaning electric controller and heating element.</p>		

Controlling grease fires:

Although some flare-up is desirable as burning juices give meat that char-broiled flavor; too much flare-up can result in a fire hazard and overcook meat. To aid in controlling grease fires use the following precautions:

- Keep grill free from grease; chance of fire is greatly increased by grease buildup.
- Trim excess fat off meat and use less fatty cuts of meat to reduce chance of grease fires.
- If flare-up occurs during cooking reduce controller setting and close lid.
- If flare-up continues turn controller to OFF and unplug the power cord.

Cleaning your grill:

Excess build up of burned grease and food particles will reduce the grill's cooking performance. To obtain optimum performance.

- Clean the lower insulation bowl at least once a season, more often with heavy use.

Note: The insulation bowl will darken as it becomes seasoned. Do not attempt to restore a shiny or aluminum appearance when cleaning.

- Best results are obtained by brushing particle buildup downward and through drain hole in bottom of grill.
- Using a mild detergent or hot soapy water, moderately scrub surface of the lower insulation bowl with a plastic or brass bristle brush.
- Clean porcelain grates regularly with warm soapy water or a baking soda and water solution. Use non-abrasive scouring powder for stubborn stains. If a bristle brush is used to clean any of the grill cooking surfaces, ensure no loose bristles remain on cooking surfaces prior to grilling. It is not recommended to clean cooking surfaces while grill is hot.
- Clean porcelain lid and body with a non-abrasive cleaner. Use Cream of Tarter for stubborn stains.

Storing your grill:

- Clean cooking grate.
- Remove electric controller from grill. Store controller indoors.
- Store grill in weather protected area or under grill cover when not in use.

Food safety:

- Food safety is a very important part of enjoying the outdoor cooking experience. To keep food safe from harmful bacteria, follow these four basic steps:

Clean: Wash hands, utensils, and surfaces with hot soapy water before and after handling raw meat and poultry.

Separate: Separate raw meats and poultry from ready-to-eat foods to avoid cross contamination. Use a clean platter and utensils when removing cooked foods.

Cook: Cook meat and poultry thoroughly to kill bacteria. Use a Thermometer to ensure proper internal food temperatures.

Chill: Refrigerate prepared foods and leftovers promptly.

- For more information call: USDA Meat and Poultry Hotline at 1-800-535-4555. In Washington DC 1-202-720-3333—10:00 am - 4:00 pm Eastern time.

Grilling:

- For best results, cook with lid on the grill to hold in heat and provide complete cooking.
- Temperature gauge on the lid indicates approximate cooking temperature inside the grill.
- During initial cooking phase it is common for the gauge to show the temperature falling below original preheat value. As time continues temperature will rise somewhat, indicating food is being properly heated and cooked.
- Controller setting for various foods are dependant upon conditions and personal cooking preferences.

Turn grill off:

- Turn controller knob fully counterclockwise to OFF position.
- Unplug cord from outlet.
- Remove controller from grill and store indoors.


Cleaning electrical controller and heating element bracket:

- Clean controller case by wiping with a damp cloth using a mild detergent or hot soapy water.
- It is not necessary to clean the heating element. However, the element bracket may be cleaned with a damp cloth using a mild detergent or hot soapy water.
- Dry electrical controller and heating element before use.

Parts List

Key	Qty.	Description	Part #
A.....	1.....	Base Assy, W/ Wheels.....	29101089
B.....	1.....	Porcelain Bottom.....	29101090
C.....	1.....	Heating Element.....	29101091
D.....	1.....	Extension Cord W/ Warning Tag.....	29101093
E.....	1.....	Control Panel Leg.....	29101529
F.....	2.....	Cart Leg.....	29101001
G.....	1.....	Top Lid, Porcelain.....	29101097
H.....	1.....	Top Insulation Bowl.....	29101098
I.....	1.....	Top Handle.....	29101015
J.....	1.....	Heat Indicator.....	29101623
K.....	1.....	Grease Cup Kit.....	55710171
L.....	1.....	Handle, Pull, Front.....	29101023
M.....	1.....	Cooking Grate Cast Iron.....	29101652
N.....	1.....	Grill Insert Insulation Bowl, Bottom.....	29101086
O.....	3.....	Inside Bracket, Top Lid.....	29101014
- -.....	1.....	Hardware, Bag.....	42030305
-.....	1.....	Assembly Instructions - English.....	42804436
-.....	1.....	Assembly Instructions - Spanish.....	42804451

Necessary tools for assembly of your grill include a Phillips screwdriver, adjustable wrench or pliers.

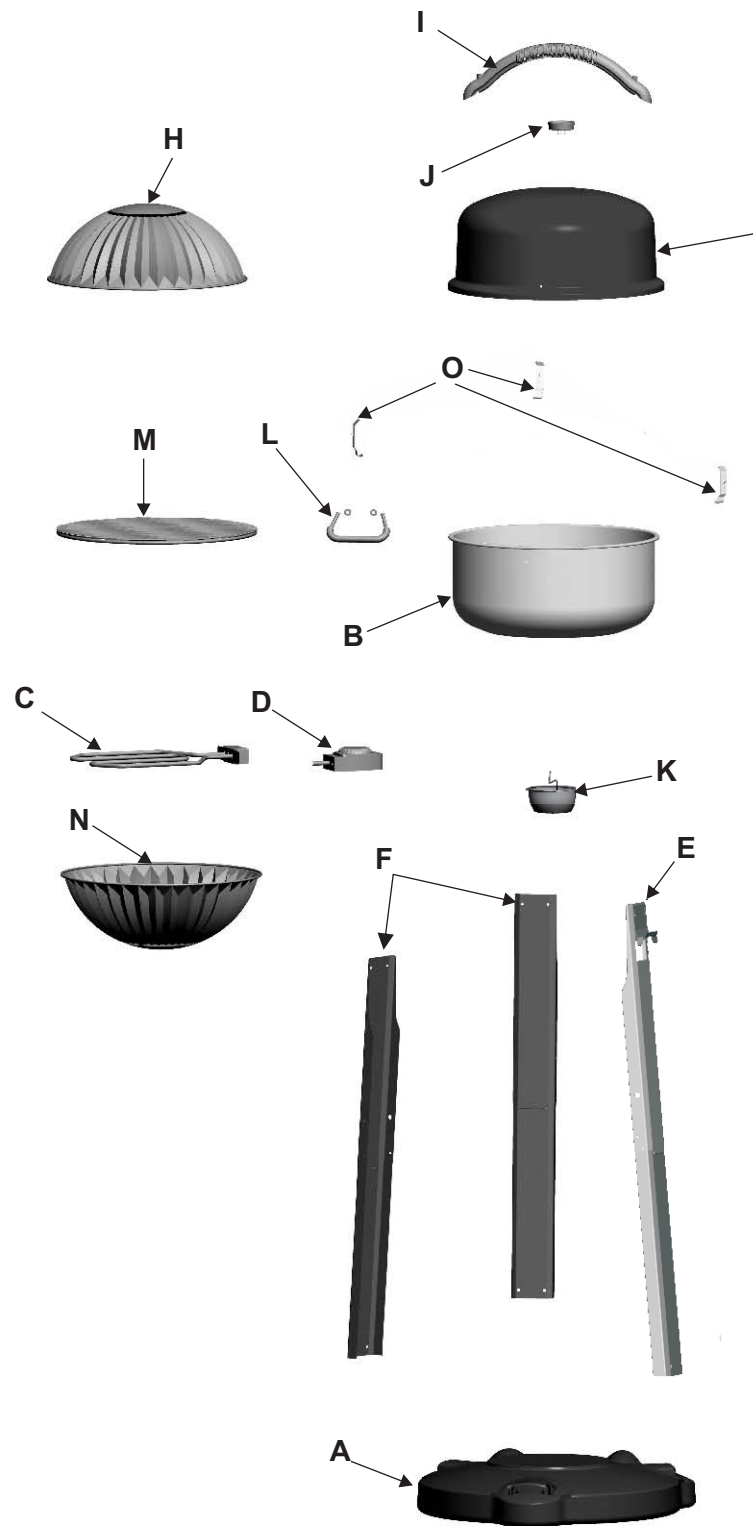

NOTE:

You may have hardware left over after completing assembly of your grill. This is normal as in some cases we have included extra hardware to ensure that you have enough.

1


Items to Assemble

- 1 Top Lid
- 1 Top Handle
- 2 Machine Screws (#10-24 x 1 3/4")
- 2 Lock Nuts (#10-24)

A Attach handle to lid using (2) #10-24x1 3/4" machine screws and (2) #10-24 lock nuts.

Important: Tighten both nuts securely at this time. You will be unable to tighten these items once the insulation bowl is attached.

May be factory assembled.

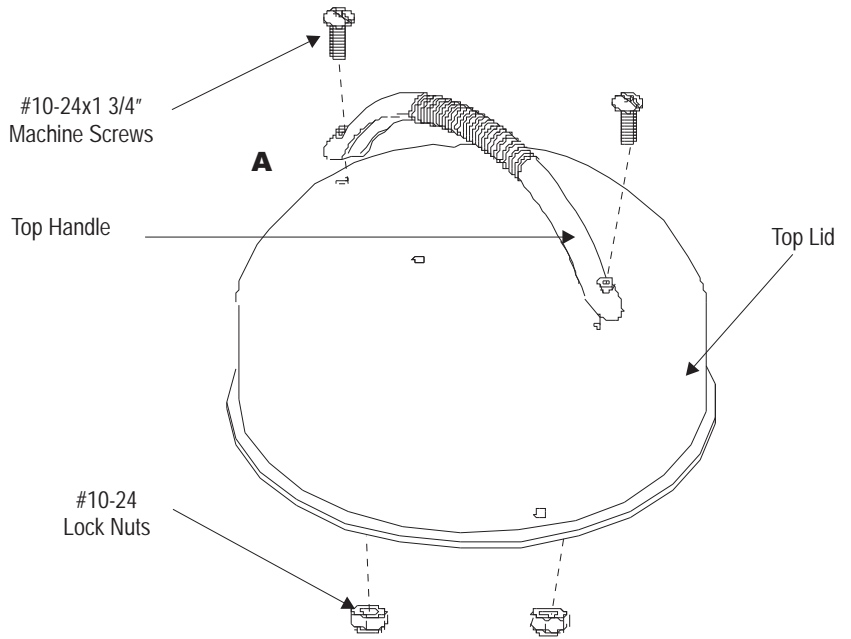

2



Items to Assemble

- 1 Heat Indicator
- 1 Top Insulation Bowl
- 1 Flat Washer
- 1 Wing Nut

A Place temperature gauge. Hold it in place as you turn lid upside down.

B Note: Be sure hole in top insulation bowl is aligned with temperature gauge. Attach wing nut "DO NOT TIGHTEN" until after Step 3.

May be factory assembled.

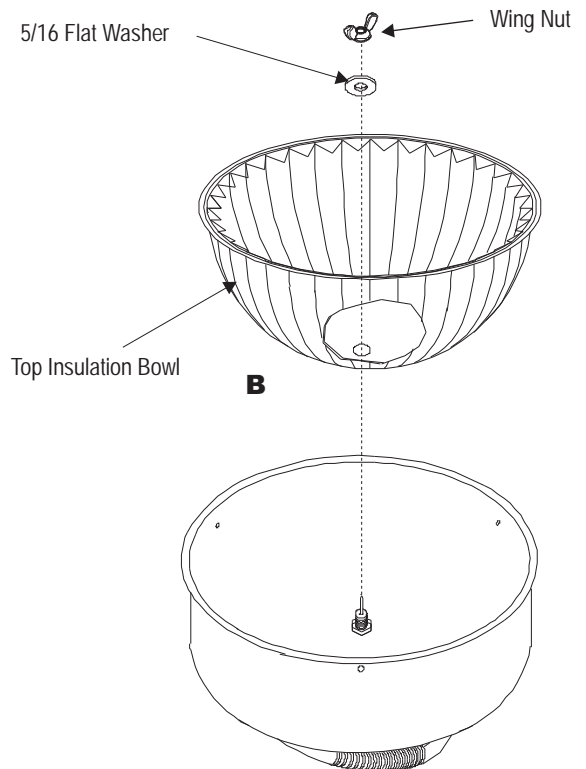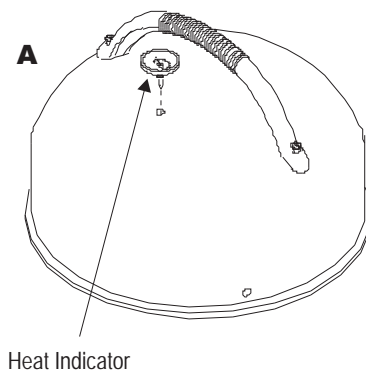


3

- Items to Assemble
- 3 Lid Hangers
- 3 Self-tap Screws


A Place lid hanger bracket on upper lip of insulation bowl. **Note:** Adjust insulation bowl as necessary to align.
B Tighten wing nut.



Qty: 3
#12 x 1/2"

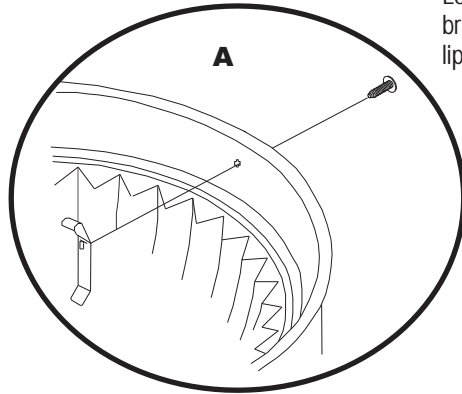


Lower end of lid hanger bracket must rest on upper lip of insulation bowl.

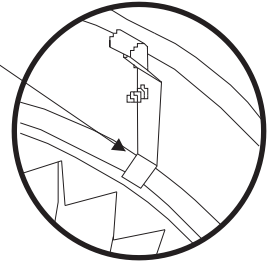

May be factory assembled.


Repeat for all three holes

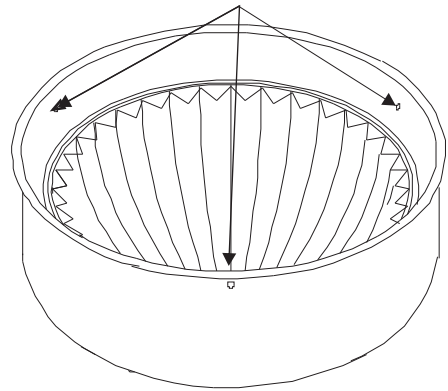

4

- Items to Assemble
- 1 Grill Bottom
- 1 Bottom Insulation Bowl

- A** Fold flaps **inwards and upwards** (90 degrees) so they are horizontal
- B** Align rectangular slots
- C** Push insulation bowl tabs down and under to temporarily hold bowl in place while you work.

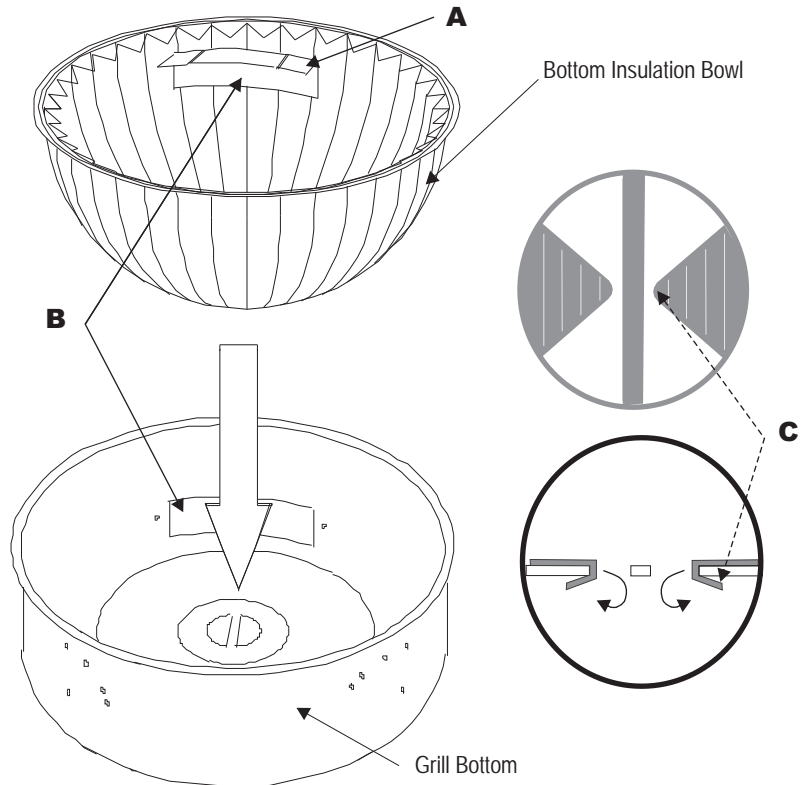


5

Items to Assemble

- 1 Control Panel leg
- 2 Machine Screws (#10-24x1.0")
- 2 Lock Nut (#10-24)
- 2 Tee Nuts
- 2 Self-Tap Screws

- A** Unfold the control leg and lock. Secure legs using (2) #10-24x3/8" self-tap screws.
 - B** Align rectangular slots on control leg and grill bottom.
 - C** Attach (2) #10-24 machine screws through leg, place (2) 10-24 lock nuts onto screws and attach to grill bottom with tee nuts.
- (Hex nuts will be between leg and grill bottom. Only finger tighten hex nuts).

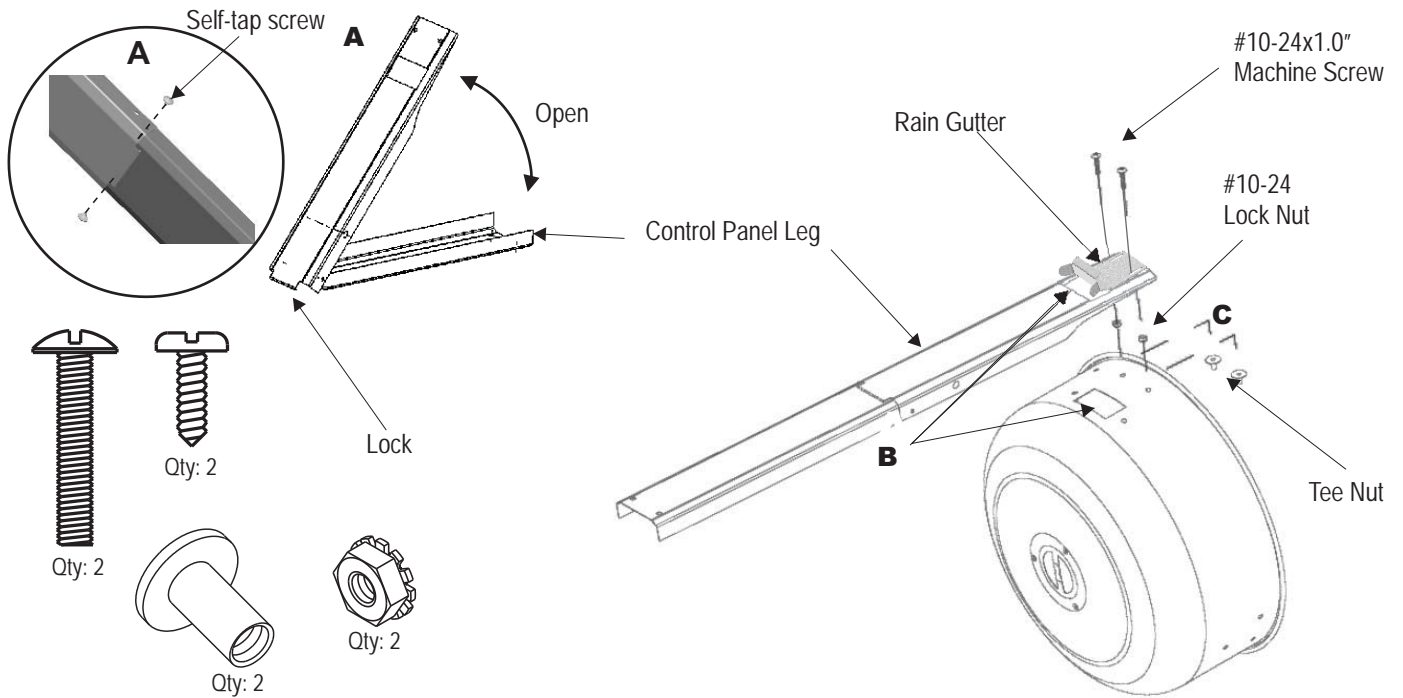


6

Items to Assemble

- 1 Handle
- 2 Cart Leg
- 4 Machine Screws (#10-24x1.0")
- 4 Lock Nut (#10-24)
- 4 Tee Nuts
- 4 Self-Tap Screws

- A** Unfold legs. Secure legs using (2) #10-24x3/8" self-tap screws. Attach handle to one leg using (2) #10-24 machine screws and (2) 10-24 lock nuts. Only finger tighten nuts.
- B** Attach leg with handle to grill bottom using tee nuts.
- C** Attach other leg with machine screws, finger tighten hex nuts between leg and grill bottom. Tighten tee nuts.

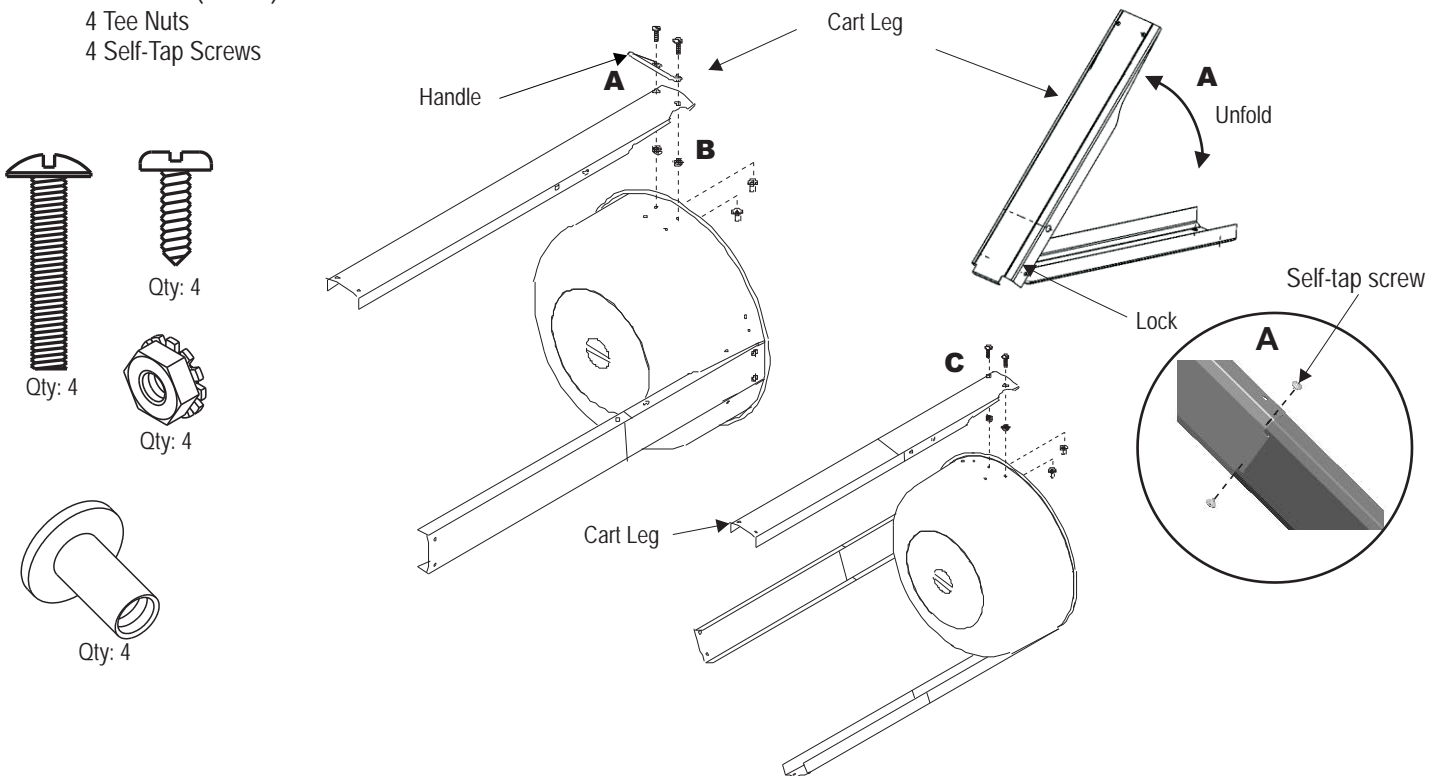


7

Items to Assemble

- 1 Base Assy
- 6 Machine Screws (#10-24x1.0")
- 6 Lock Nut (#10-24)

Turn upside down to assemble base.

- A** NOTE: Leg with handle must be opposite wheels in base.
- B** Slide legs into slots in base support, attach each leg with screws and nuts.

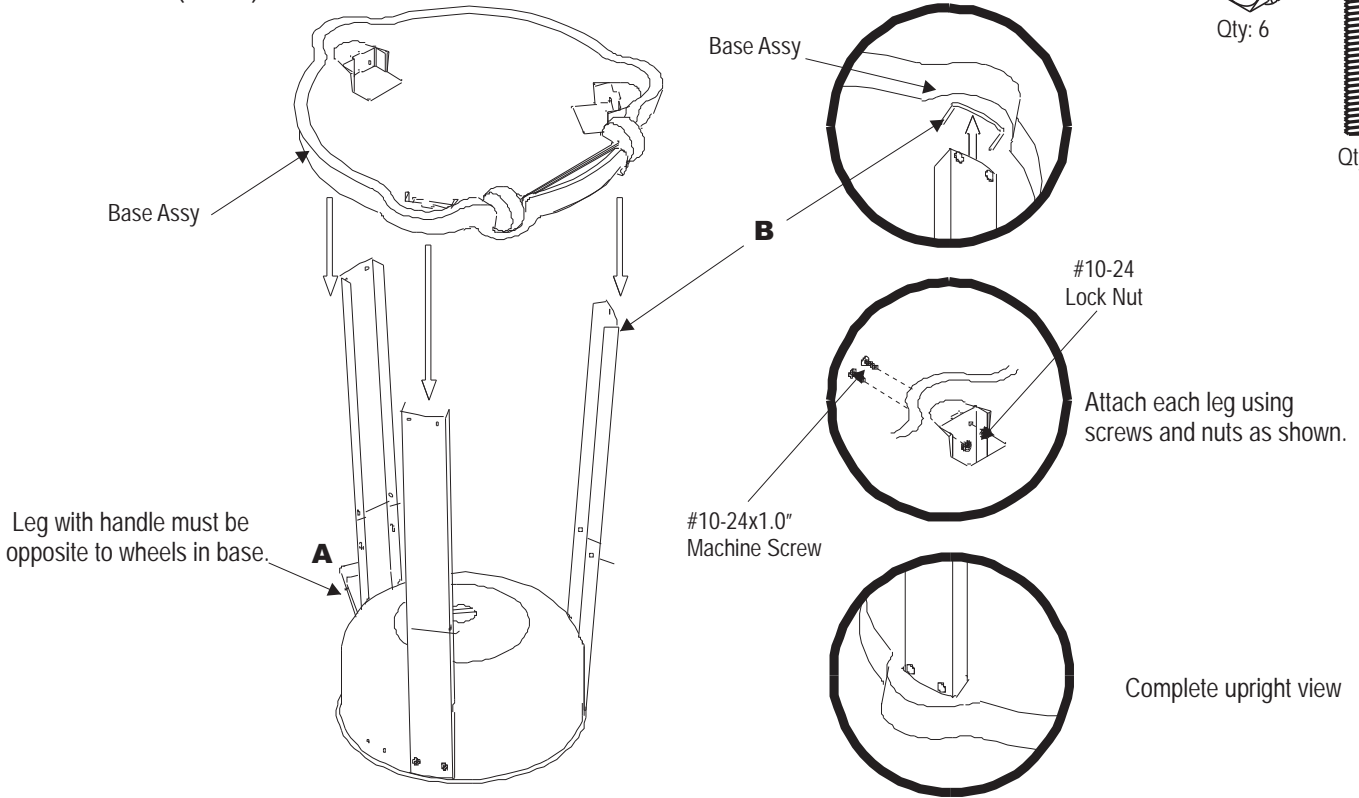



8

Items to Assemble

- 1 Heating Element
- 2 Self-Tap Screws

IMPORTANT: Orient heating element so that the notch is on top. ("BOTTOM" is stamped on underside of bracket.)


B Slide element bracket through slot in side of insulation bowl and into rectangular slot in grill body. Element bracket mounts snugly against inside of grill body. Push insulation side flaps down flush with bowl.

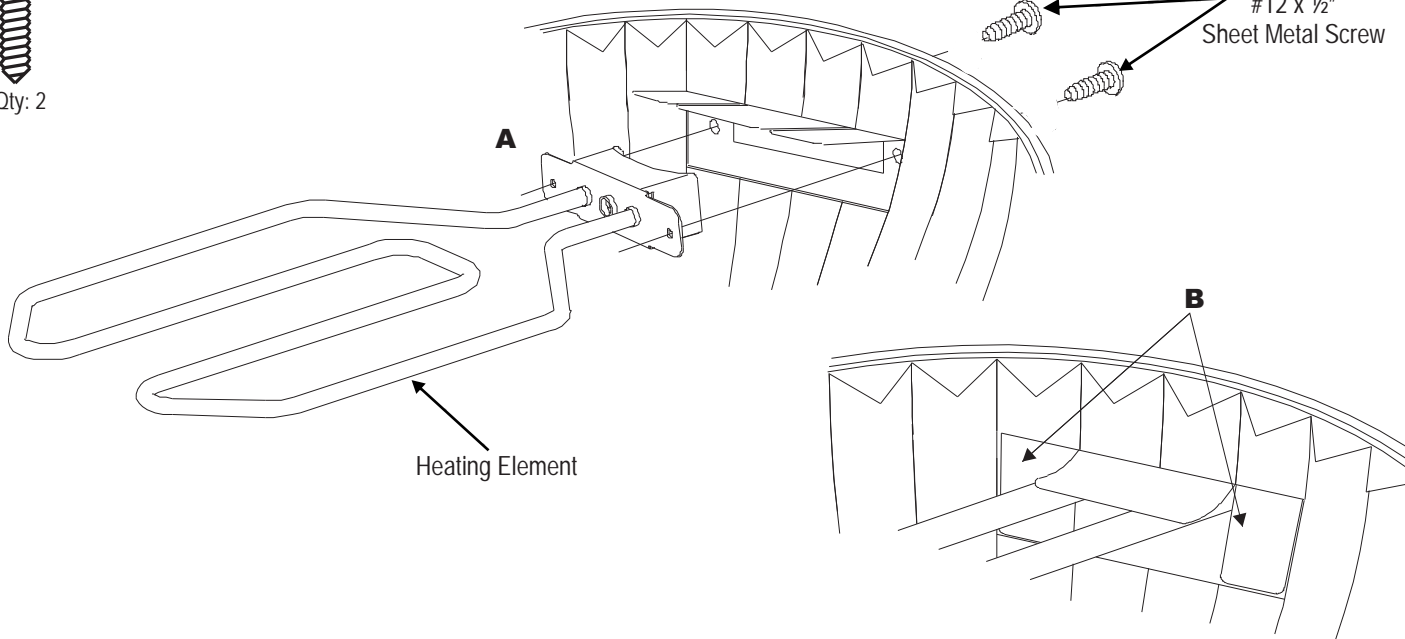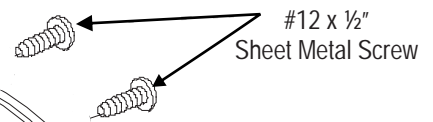

9

Items to Assemble:
1 Cooking Grate



A Cooking grate rests on tee nuts.

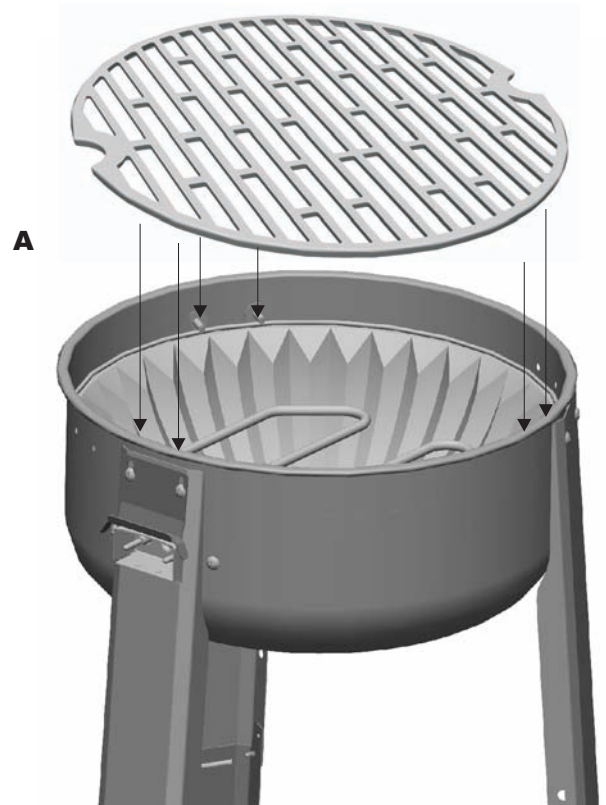

10

Items to Assemble:
1 Grease Cup Kit




A IMPORTANT: Bend tabs of insulation bowl straight down toward grease cup to avoid grease spillage.
B Clip grease cup bracket onto bar at notches

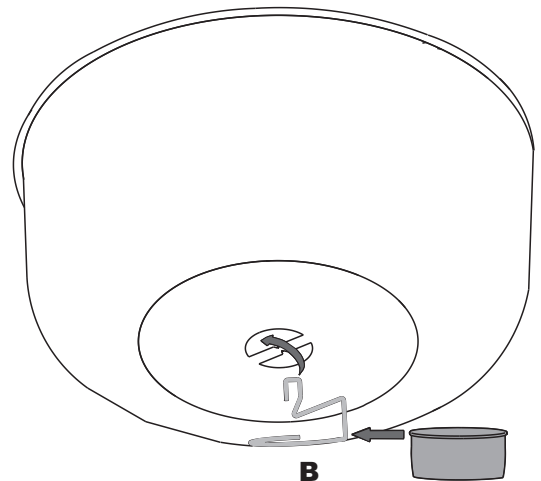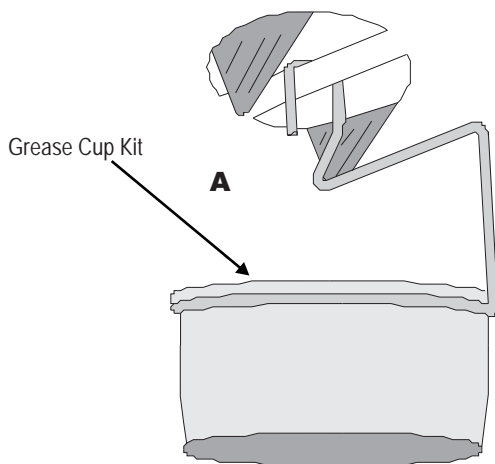

NOTE: Legs not shown for clarity

11 Items to Assemble:
1 Extension Cord

- A** Insert controller into element bracket.
- B** Remove protective film from controller prior to use.
- C** Raised lip of controller should be inserted until it is snug against element bracket.

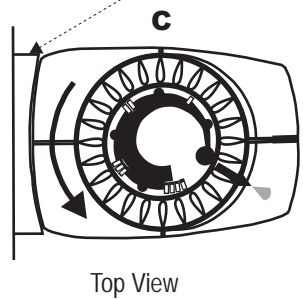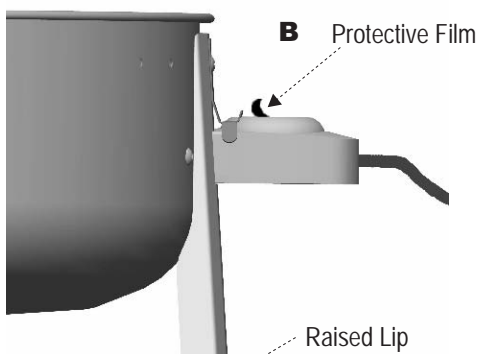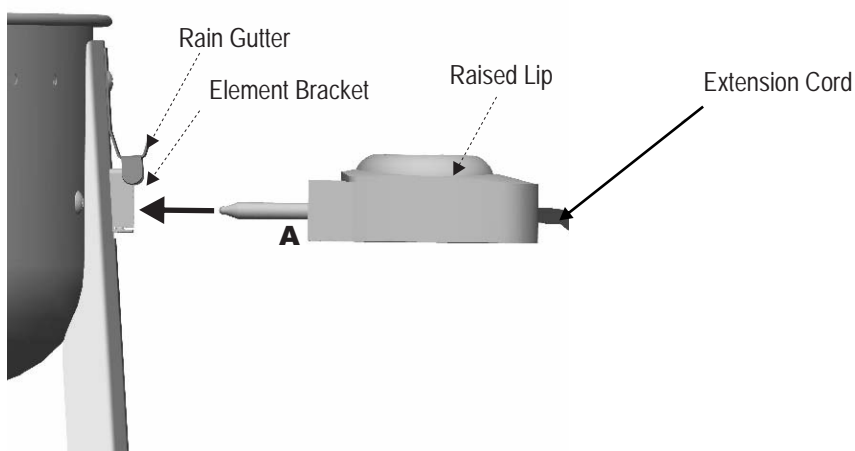


Ensure that controller knob is fully rotated counterclockwise to the OFF position prior to plugging controller into grill and outlet.

Congratulations, you have now completed the assembly of your grill. You can now look forward to hours of enjoyable cooking. For your safety and optimum grill performance finish reading the instructions on the following pages before using your new grill.


Electric Patio Caddie Cooking Chart

Cooking times and temperatures may vary according to specific recipes, cooking conditions, or barbecue equipment used. Take this into consideration to insure best results.

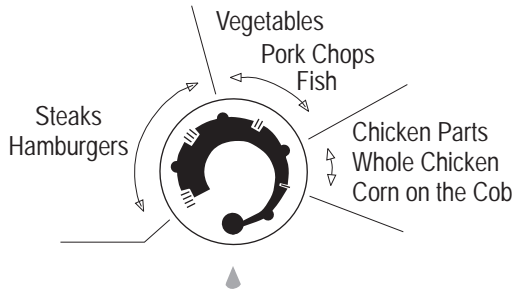

Cooking Zones

First preheat on HIGH to maximum sustained temperature. Then place food on grill and adjust controller to obtain desired temperature on cooking chart below.

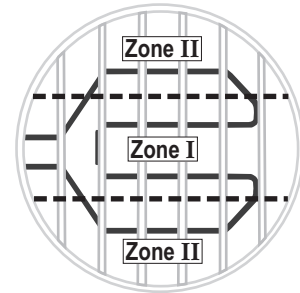

Item	Size/Quantity	Temperature	Time	Zone	
Steak (T-bone, ribeye, sirloin, Filet mignon, etc.)	1 inch	500°F - 600°F	Rare: 7-10 minutes Medium: 12-15 minutes Well: 18-20 minutes	I	
Steak (T-bone, ribeye, sirloin, Filet mignon, etc.)	1/2 inch	500°F - 600°F	Rare: 6-7 minutes Medium: 8-10 minutes Well: 12 minutes	I	
Hamburgers	1/2 inch	450°F - 500°F	Medium: 8 minutes Medium/Well: 10 minutes Well: 12 minutes	I	
Pork Chop	1 inch	350°F - 450°F	25 minutes, Internal temp. 160°F	I Dry Rub	II * Marinade
Pork Chop	1/2 inch	350°F - 450°F	20 minutes	I Dry Rub	II * Marinade
Boneless, Skinless, Chicken Breast	8 ounces	350°F - 375°F	10 minutes per side	I Dry Rub	II * Marinade
Whole Chicken	1 each	350°F - 375°F	10 minutes per pound Internal temp. 180°F	I Dry Rub	II * Marinade
Tuna/Sword Fish	1 inch - 8 ounces	350°F - 450°F	Rare: 7 minutes Medium: 12 minutes Well: 15 minutes	II	
Whole Rainbow Trout Filet	8 ounces	350°F - 450°F	8-12 minutes	II	
Shrimp, Medium, Peeled and de-veined	8 ounces	400°F - 425°F	3-5 minutes	II	
Corn on Cob	1 each	350°F - 400°F	30 minutes	II	
Baking Potatoes	1 each	350°F - 400°F	1 hour	II	
Mushrooms, Button, Whole	8 ounces	350°F - 400°F	6 minutes	II	
Yellow Onions	1 each	350°F - 400°F	12-15 minutes	II	
Tomatoes	Half	350°F - 400°F	15 minutes	II	
Zucchini/Yellow Squash,	1 medium size	350°F - 400°F	8-10 minutes	II	

*Increase cooking time 5 minutes or to desired doneness.

Troubleshooting

Problem	Possible Cause	Prevention/Solution
Grill not heating	<ul style="list-style-type: none"> • Controller turned off. • No power. • Faulty controller or heating element. 	<ul style="list-style-type: none"> • Turn controller knob to maximum setting. • Be sure controller is fully seated in heating element bracket and grill is properly plugged into outlet. • Check for tripped household circuit breakers or GFI (Ground Fault Interrupter). Reset or replace if necessary. • Try another outlet. • Replace controller or heating element.
Circuit breaker trips or fuse blows	<ul style="list-style-type: none"> • Power surge. • Another appliance plugged into same circuit as grill. • Moisture or water in controller or electrical connections. • Damaged cord or electrical connections. 	<ul style="list-style-type: none"> • Turn controller to OFF position before plugging into electrical outlet. • Do not use other electrical appliances on the same circuit. • Keep controller and all electrical connections dry. Do not operate unit when raining. • Replace damaged controller or extension cord.
Grill will not cook properly	<ul style="list-style-type: none"> • Lid off of grill. • Insufficient preheat or temperature set too low. • Inappropriate extension cord. • Excessive buildup on insulation bowl. 	<ul style="list-style-type: none"> • Place lid on grill while cooking. • Preheat 15-20 minutes. Increase controller setting. • Replace with appropriately rated cord (15 amps). • Clean lower insulation bowl.
Flare-ups	<ul style="list-style-type: none"> • Excess fat in meat. • Excessive cooking temperature. • Grease build up. 	<ul style="list-style-type: none"> • Trim fat from meat before grilling. • Adjust (lower) temperature as needed. • Clean grill.
Controller indicator light is OFF	<ul style="list-style-type: none"> • Normal controller cycling. • No power. • Faulty controller. 	<ul style="list-style-type: none"> • Increase knob setting or wait for light to cycle on. • See "Grill not heating". • Replace controller or heating element.
Persistent grease fire	<ul style="list-style-type: none"> • Grease trapped by food build up. 	<ul style="list-style-type: none"> • Turn controller knob to OFF. Keep lid on and let fire burn out. After grill cools, clean insulation bowl. • Do not apply water to fire. Personal injury may result.

The following are trademarks registered by W.C. Bradley Co. in the U.S. Patent and Trademark Office: Char-Broil®; America's Legendary Barbeque Company®; American Gourmet®; Bandera®; BrushHawg®; CB940®; Char-Diamonds®; Char-Broil Charcoal/Gas®; DiamondFlame®; Everybody Grills®; Everybody Outside®; FastStart®; Fireball®; Firenzy®; FlavorMaster®; Grill2Go®; Grill2Go® Express®; Grill Lovers®; H2O Smoker®; Keepers of the Flame®; New Braunfels Smoker Company®; Oklahoma Joe's®; Patio Bistro®; Patio Caddie®; Patio Kitchen®; Precision Flame®; Quantum®; Santa Fe®; Sear and Grill®; Sierra®; Signature Series®; The Big Easy®; The Minute Grill®; Trentino®; Wild West Tradition®; and the following marks:



The following are trademarks of W.C. Bradley Co.: Commercial Series™; Designer Series™; Grill2Go® Advantage™; Longhorn™; Double Chef™; QuickSet™; Ready When You Are™; Hog and Yard Bird™; You Bring the Party™; SureFire™; Universal Grill Parts™

TEC™ is a trademark of Tec Infrared Grills.

Protected under one or more of the following U.S. Patents: 4,989,579; 5,421,319; 5,458,309; 5,579,755; 5,996,573; 6,114,666; 6,135,104; 6,209,533; 6,279,566; 6,331,108; 6,484,900; 6,526,876; 6,595,197; 6,640,799; 6,640,803; 6,729,873; 6,739,473; 6,749,424; 6,863,100; 6,935,327; 6,951,213; 6,792,935; 7,047,590; D364,535; D372,637; D373,701; D377,735; D383,035; D397,910; D405,643; D406,005; D406,009; D413,043; D413,229; D414,982; D415,388; D416,164; D416,441; D417,587; D417,588; D422,516; D423,876; D428,303; D430,772; D435,396; D436,004; D438,059; D438,060; D438,427; D439,110; D442,505; D443,179; D443,354; D443,464; D447,384; D447,385; D447,909; D448,610; D448,614; D448,615; D448,616; D448,975; D449,492; D450,544; D451,759; D454,028; D454,031; D455,205; D455,206; D456,202; D456,222; D456,223; D457,789; D458,520; D458,760; D458,802; D459,088; D459,148; D459,149; D459,161; D459,163; D459,586; D459,943; D460,312; D460,313; D460,318; D461,359; D465,123; D465,693; D466,307; D466,439; D466,752; D473,414; D474,371; D477,498; D477,501; D477,504; D477,506; D477,746; D478,471; D478,472; D480,914; D491,410; D494,009; D494,413; D498,523; D500,359; D504,048; D530,098; D535,000; Canada: 87,743; 87,744; 97,504; 99,355; 102,037; 104,200; 2,315,567; 2,336,036; France: 010,231; 010,422; 010,590; 010,849; 1,089,646; Germany: 1,089,646; South Korea: 384,565; China: 99,127,066.5; United Kingdom: 2,099,402; 1,089,646. Other Patents Pending.

© 2008 W.C. Bradley Company

TM REVISION 00

LIMITED WARRANTY

This warranty only applies to units purchased from an authorized retailer. Manufacturer warrants to the original consumer-purchaser only that this product shall be free from defects in workmanship and materials after correct assembly and under normal and reasonable home use for the periods indicated below beginning on the date of manufacture*. The manufacturer reserves the right to require that defective parts be returned, postage and or freight pre-paid by the consumer for review and examination.

<u>SCOPE OF COVERAGE</u>	<u>PERIOD OF COVERAGE</u>	<u>TYPE OF FAILURE COVERAGE</u>
All Parts	90 days from date of purchase*	PERFORATION, MANUFACTURING, AND MATERIAL DEFECTS ONLY

*Note: The warranty period of coverage will be extended to begin on the date of purchase on the condition that the consumer registers the product and supplies a copy of the original dated sales receipt.

The original consumer-purchaser will be responsible for all shipping charges for parts replaced under the terms of this limited warranty.

This limited warranty is applicable in the United States and Canada only, is only available to the original owner of the product and is not transferable. Manufacturer requires proof of your date of purchase. Therefore, you should retain your sales slip or invoice. Registering your product is not a substitute for proof of purchase and the manufacturer is not responsible for or required to retain proof of purchase records.

This limited warranty applies to the functionality of the product ONLY and does not cover cosmetic issues such as scratches, dents, corrossions or discoloring by heat, abrasive and chemical cleaners or any tools used in the assembly or installation of the appliance, surface rust, or the discoloration of stainless steel surfaces.

This limited warranty will not reimburse you for the cost of any inconvenience, food, personal injury or property damage.

ITEMS MANUFACTURER WILL NOT PAY FOR:

1. Shipping cost, standard or expedited, for warranty and replacement parts
2. Service calls to your home.
3. Repairs when your product is used for other than normal, single-family household or residential use.
4. Damage, failures, or operating difficulties resulting from accident, alteration, careless handling, misuse, abuse, fire, flood, acts of God, improper installation or maintenance, installation not in accordance with electrical or plumbing codes, or use of products not approved by the manufacturer.
5. Any food loss due to product failures or operating difficulties.
6. Replacement parts or repair labor costs for units operated outside the United States or Canada.
7. Pickup and delivery of your product.
8. Repairs to parts or systems resulting from unauthorized modifications made to the product.
9. The removal and/or reinstallation of your product.

DISCLAIMER OF IMPLIED WARRANTIES and LIMITATION OF REMEDIES

Repair or replacement of defective parts is your exclusive remedy under the terms of this limited warranty. Manufacturer will not be responsible for any consequential or incidental damages arising from the breach of either this limited warranty or any applicable implied warranty, or for failure or damage resulting from acts of God, improper care and maintenance, grease fire, accident, alteration, replacement of parts by anyone other than Manufacturer, misuse, transportation, commercial use, abuse, hostile environments (inclement weather, acts of nature, animal tampering), improper installation or installation not in accordance with local codes or printed manufacturer instructions.

THIS LIMITED WARRANTY IS THE SOLE EXPRESS WARRANTY GIVEN BY THE MANUFACTURER. NO PRODUCT PERFORMANCE SPECIFICATION OR DESCRIPTION WHEREVER APPEARING IS WARRANTED BY MANUFACTURER EXCEPT TO THE EXTENT SET FORTH IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTY PROTECTION ARISING UNDER THE LAWS OF ANY STATE, INCLUDING IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, IS HEREBY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Neither dealers nor the retail establishment selling this product has any authority to make any additional warranties or to promise remedies in addition to or inconsistent with those stated above. Manufacturer's maximum liability, in any event, shall not exceed the purchase price of the product paid by the original consumer.

NOTE: Some states do not allow an exclusion or limitation of incidental or consequential damages, so some of the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights as set forth herein. You may also have other rights which vary from state to state. In the state of California only, if refinishing or replacement of the product is not commercially practicable, the retailer selling this product or the Manufacturer will refund the purchase price paid for the product, less the amount directly attributable to use by the original consumer-purchaser prior to discovery of the nonconformity. In addition, in the state of California only, you may take the product to the retail establishment selling this product in order to obtain performance under this limited warranty.

If you wish to obtain performance of any obligation under this limited warranty, you should write to:

**Consumer Relations
P. O. Box 1240
Columbus, GA 31902-1240**

Consumer returns will not be accepted unless a valid Return Authorization is first acquired. Authorized returns are clearly marked on the outside of the package with an RA number and the package is shipped freight/postage pre-paid. Consumer returns that do not meet these standards will be refused.



Here's what you can find at
www.charbroil.com

- **Register your Char-Broil® product**
- **Get information about our products**
- **Our replacement parts**
- **Reliable customer support**
- **Delicious recipes**
- **Char-Broil® on-line store**
- ***Sizzle On The Grill*™ E-newsletter**
- **And much more!**



Please visit us at **www.charbroil.com** and click on the ***Buy Online*** link to find grilling tools and accessories, maintenance items, covers, grill parts, Char-Broil® grills and cookers, and of course, the famous Oklahoma Joe's® sauces, rubs, and marinades. We also have a ***Special Offers*** section, so be sure to check often for specials deals.



In addition to the online store, charbroil.com offers you a wealth of information regarding Char-Broil® gas, charcoal, electric, and new infrared grills and cookers.

Be sure to check out our many grilling recipes and don't forget to sign up for our exciting newsletter ***Sizzle on the Grill*™** to stay updated on new recipes, contests, and the latest happenings here at Char-Broil®.



Charbroil.com also offers on-line customer support for Char-Broil® products.

Thank you for support, and HAPPY GRILLING!

www.charbroil.com
For all your grilling needs!

Please register your product online at:

www.charbroil.com/register

(If you register online, you do not need to send in this registration card.)

PLEASE FILL OUT THIS CARD AND ATTACH A COPY OF YOUR SALES RECEIPT. RETURN IT WITHIN 10 DAYS OF PURCHASE. FAILURE TO RETURN MAY AFFECT YOUR WARRANTY COVERAGE. FOR WARRANTY SERVICE PROOF OF PURCHASE WILL BE REQUIRED. THIS WARRANTY IS NON-TRANSFERABLE.

LLENE ESTA TARJETA Y DEVUELVALA DENTRO DE LOS 10 DIAS DE LA COMPRA. SI NO LA DEVUELVE, PUEDE VERSE AFECTADA SU COBERTURA DE GARANTIA. PARA EL SERVICIO DE GARANTIA ES NECESARIO QUE PRESENTE SU COMPROBANTE DE COMPRA. CONSERVE LA FACTURA. ESTA GARANTIA ES INTRANSFERIBLE.

VEUILLEZ COMPLETER CETTE CARTE ET LA RETOURNER DANS LES 10 JOURS SUIVANT L'ACHAT. LA COUVERTURE DE VOTRE GARANTIE POURRAIT EN ETRE AFFECTEE SI VOUS NE LE FAITES PAS. POUR OBTENIR LE SERVICE SOUS GARANTIE, UNE PREUVE D'ACHAT DOIT ETRE PRESENTEE. VEUILLEZ CONSERVER VOTRE FACTURE. LA PRESENTE GARANTIE N'EST PAS TRANSFERABLE.

1 First Name/Nombre/Prénom _____ Initial/Inicial/Initiale _____ Last Name/Apellido/Nom de famille _____

Address (number and street)/Dirección (número y calle)/Adresse (numéro et rue) _____ Apt Number/Nº de apart./Nº d'appt. _____

City/Ciudad/Ville _____ State/Estado/Province _____ Zip Code/Código Zip/Code postal _____

2 E-mail Address/Dirección de correo electrónico/Adresse électronique

If you voluntarily provide us with your email address, you give us permission to use your email address to send you offers that may interest you.

Si nos informa voluntariamente su dirección de correo electrónico, nos da permiso para usarlo a fin de enviarle ofertas que pueden interesarle.

Si vous choisissez de nous fournir votre adresse électronique, vous nous donnez la permission de l'utiliser pour vous faire part d'offres spéciales susceptibles de vous intéresser.

(Example: your name @ your host.com) (Ejemplo: su nombre@su host.com) (Exemple : votre nom@votre hôte.com)

10 Attach copy of your sales receipt here

Adjunte aquí la copia de su recibo de compra
Veillez attacher une copie de votre reçu ici.

3 Phone Number/Número telefónico/Numéro de téléphone

_____-_____-_____-_____-_____-_____

6 Date of Purchase/Fecha de compra/Date de l'achat

____/____/____

4 **IMPORTANT! ¡IMPORTANTE! IMPORTANT!**
Write Serial Number and Model Number in spaces below.
Escriba en los espacios de abajo el número de serie y el número de modelo.
Inscrivez le numéro de série et le numéro de modèle dans les espaces ci-dessous.

7 Store Name/Nombre de la tienda/Nom du magasin

8 Purchase Price/Precio de compra/Prix d'achat

\$ _____ .00

5 Your Gender/Sexo/Sexe :

1. Male/Masculino/Masculin

2. Female/Femenino/Féminin

9 Which product are you registering?

¿Qué producto está registrando?

Quel produit enregistrez-vous?

1. Gas Grill/Parrilla a gas/Gril au gaz
2. Electric Grill/Parrilla eléctrica/Gril électrique
3. Smoker/Ahumador/Fumoir
4. Charcoal Grill/Parrilla a carbón/Barbecue au charbon
5. Charcoal Smoker/Ahumador a carbón/Fumoir au charbon
6. Outdoor Fireplace/Chimenea para exteriores/Foyer extérieur
7. Cooker/Fryer / Cocina/freidora / Cuisneur/Friteuse
8. Other/Otro/Autre

Mail to: / Envíelo a:
Consumer Warranty Service
P. O. Box 1240
Columbus, GA 31902-1240

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here .

Gracias por completar este cuestionario. Sus respuestas nos ayudarán, a nosotros y a otras compañías, a llegar a usted con ofertas que puedan resultarle de interés. Si prefiere no recibir estas ofertas, por favor marque aquí .

Merci d'avoir bien voulu remplir ce questionnaire. Vos réponses nous aideront et aideront d'autres compagnies à vous communiquer des offres spéciales susceptibles de vous intéresser. Si vous préférez ne pas recevoir d'informations concernant ces offres spéciales, veuillez cocher ici .

REGTEMP REV00