

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC NI-R72NR Owner's Manual

 
[Shop genuine replacement parts for PANASONIC
NI-R72NR](#)



[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

1. Fill the iron as described in "HOW TO FILL"
2. Set the iron vertically and make sure the temperature selector dial is set to OFF.
Plug the AC cord into the electrical outlet.
3. Set the temperature selector dial to the "☁" indication area.
4. Preheat the iron until the indicator light goes out, usually about 1-2 minutes.
5. Simply pump the jet of steam button when it is desired.
But pump the jet of steam button several times before using for the first time at each ironing session.
6. Allow at least 5 seconds between uses of jet of steam to prevent water spotting. Use a press cloth if necessary.

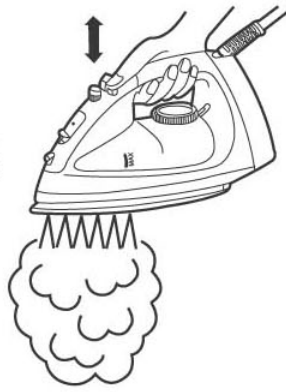

VERTICAL STEAM

To get better results when using vertical Jet of steam, hang the garment on a clothes hanger. Curtain and drapes may also be steamed once they're hung. Hold the iron away from your body close to but not touching the fabric. Pull the fabric tight with your free hand and pump the Vertical steam button (Jet of Steam Button) at 5-second intervals as you pass the iron over the wrinkled fabric.

 
WARNING

Never iron clothes on the body or point your iron at anyone when steaming. Keep hands and body away from steam areas while using vertical steam feature.

SELF-CLEANING

With the self-cleaning feature you can flush out mineral residue from the steam generating chamber and the steam vents.....refreshing your iron each time for a longer steaming life. It is very important to operate the self-cleaning feature after each steam ironing to prevent mineral accumulations from hardening.


1. Check water level. Water level should be at 1/2 full mark.
When water level is below 1/2 full, fill with water according to the instructions in "How to Fill".
2. Preheat at "6" setting. (in about 1-2 minutes)
Makes sure that the steam button is in the Dry position.
3. Set the dial to OFF and remove the AC plug.
4. Hold the iron horizontally over the sink.
5. Pump the "Jet of Steam" button quickly (at least 3 times per second) about 20-30 times.
6. While self-cleaning, pitch the iron up and down slowly to help clean the entire inside and let the water drip out of the soleplate vents.

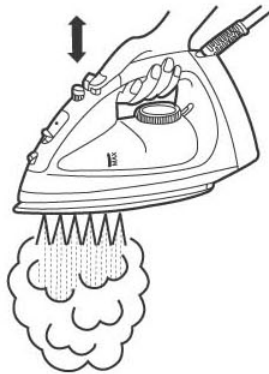

- 8 -

COMPONENTS IDENTIFICATION

 NI-R50NR/R51NR/R53NR/R54N/R71NR/R72NR

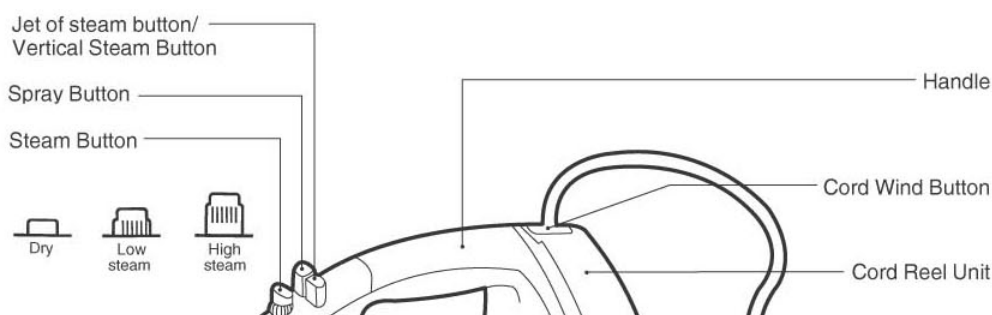

7. Check that all water and steam the
After self-cleaning is finished du
8. Iron on a towel to remove any dro
9. Cool as usual and store the iron o
or with water in it.

NOTE:

If water still remains inside the sole
by vaporizing the remaining water s
instructions under "AFTER EACH U

Stay Clean Vents (NI-R7

The built-in Anti Calcium Cassette in
in the vaporizing chamber of the iron
This system makes it possible to us
steam vents clogging.

HOW TO CARE FOR Y

AFTER EACH USE

1. Turn iron off and unplug.
2. Empty iron immediately after usin
3. Depress the steam button down i
4. Wait until the iron has cooled bef
the soleplate from scratches, cor
5. After letting iron cool completely,
vertically in a safe place after win

MAIN BODY

After unplugging and cooling the iron
use a mild detergent.

NEVER USE ANY HARSH C

SOLEPLATE

Starch and other residue may be ea
To avoid scratching the finish never
place the iron on a rough surface.
If synthetics are ironed at too high a
the iron soleplate is often covered w
The best way to remove synthetic re
over an old cotton rag.

CAUTION:

Never use steam iron cleaners in th

CAUTION DURING US

- (1) When retracting power cord, alw
wind button with the other hand
- (2) If cord does not retract complet
the reel.
- (3) Unwind the power cord in the
outlet.
- (4) If the power cord seems hard
released.
- (5) Do not allow small children to h
cord to "whip" and cause injury.

GENERAL HINTS BEF

1. Read this instruction book to bec
2. Most ordinary tap water can be