 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# PANASONIC NT-T13P Owner's Manual

[Shop genuine replacement parts for PANASONIC  
NT-T13P](#)

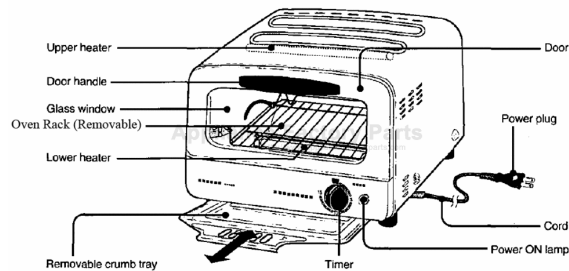

[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

# Operating Instructions

TOASTER OVEN  
**NT-T13P**



**Panasonic®**

Before using this unit, please read these instructions completely.  
This product is intended for household use only.

Thank you for purchasing a *Panasonic* Toaster Oven, NT-T13P.  
For your own safety and convenience, please read these instructions carefully before operating.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Use extreme care when removing oven tray and whenever disposing of hot grease and oils.
12. To disconnect, turn all controls to "off," then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Do not assume you know how to operate all parts of the Toaster Oven. Some features may work differently from those you are accustomed to.
15. Oversized foods or utensils must not be inserted in the appliance as they may create fire or electrical hazard.
16. A fire may occur if appliance is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any item on top of the appliance when in operation.

17. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a shock hazard.
18. Before using this appliance, move it four to six inches away from the wall or any object on the counter top. Remove any object that may have been placed on top of the appliance. Do not use on surfaces where heat may cause a problem.
19. Extreme caution should be exercised when using containers constructed of other than metal or glass.
20. Replace cardboard lids on food containers with aluminum foil; cardboard lids may burn. When using aluminum foil, keep foil from touching heating elements.
21. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
22. Do not place any of the following materials in the oven: paper, cardboard, plastic, etc.
23. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
24. In order to turn the appliance off, turn off the timer.
25. Do not use water on grease fires; smother fire or use dry chemical or foam type extinguisher.
26. Do not put food too close to the heating elements to prevent smoking, spattering, and the possibility of fats on foods catching fire.
27. Always make sure the toaster oven is turned off before opening the oven door.
28. Always use a pot holder or oven mitt to install or remove oven tray or any cooking container.

## **SAVE THESE INSTRUCTIONS**

A short cord is provided in accordance with Underwriters' Laboratories Safety Standards to reduce the hazards of becoming entangled or tripping over a longer cord. An extension cord may be used if the rating is equal to or greater than the rating of this appliance and if care is taken to arrange the extension cord so that it cannot be pulled or tripped over accidentally.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

# Table of Contents

IMPORTANT SAFEGUARDS.....	1–2
Safety Precautions.....	3–6
Part Names and Handling Instructions.....	7
Operating Procedure.....	8
Cooking Guide.....	8–9
Maintenance .....	9
Specifications .....	9
Warranty .....	10

## **Safety Precautions** Please observe these precautions fully.

In order to prevent harm or injury to those using the appliance or to any other persons and/or property, please be sure to read the following safety instructions.

- Possible consequences of incorrect usage are laid out in the following pages, each marked with a sign according to the degree of danger.



### **WARNING**

This sign warns of possible death or serious injury to persons and/or property



### **Attention**

This sign warns of possible damage or injury to persons and/or property

- The following signs indicate the kinds of instructions you should follow.



These signs indicate actions which are prohibited.

 


These signs indicate actions which should be avoided at all costs.

# ⚠ WARNING


## Handling

**Do not put oil into the pan.**

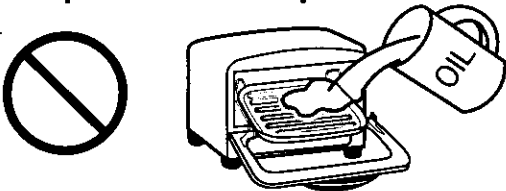


There is danger of a fire hazard.

**Do not allow children to use the toaster oven. Do not use the toaster oven within the reach of children.**

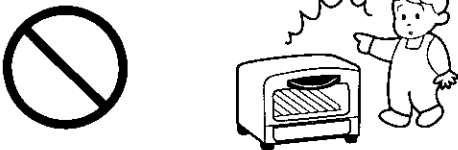 

There is risk of children getting burned, shocked or injured.

**Do not place the toaster oven in water. Avoid water splash.**

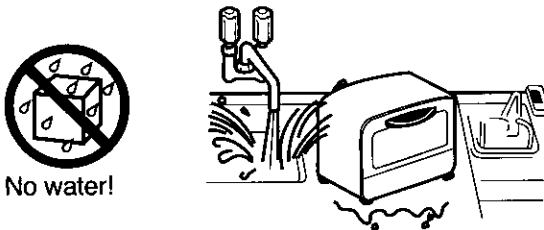 


There is danger of a short circuit or an electric shock.

**Never try to disassemble, repair or remodel the toaster oven.**



 Disassembly is prohibited.

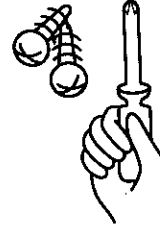


There is danger of fire or malfunction, causing injury.

• About repair, consult the store from which the toaster oven was purchased.

## Location

 
**Do not use the toaster oven near flammable materials such as curtains.**

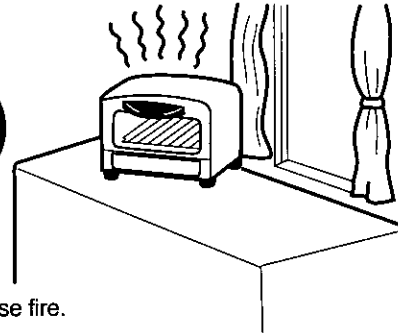

This may cause fire.

## Power Cord

 
**Make sure the power plug is correctly inserted into the wall outlet.**

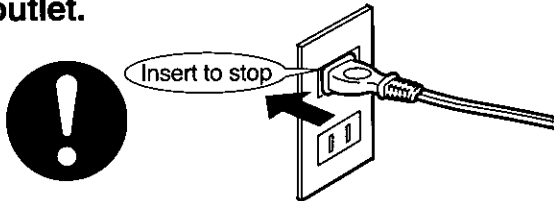

If the plug is inserted improperly it may cause electric shock or generate heat resulting in fire.

• Do not use a damaged plug or a connection in a loose outlet.


**Clean dust from the power plug regularly.**

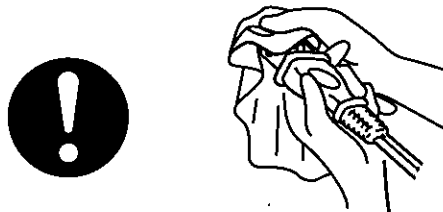 

A build-up of dust on the plug will attract condensation, which could cause cable damage resulting in fire.

• Remove the plug and clean with a dry cloth.

**Never do anything that might cause damage to the cord or power plug.**

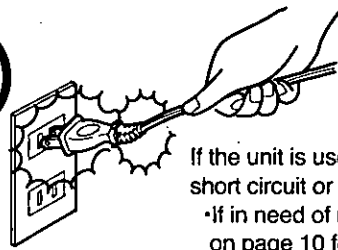 

Do not modify it, place hot objects near it, bend it, twist it, stretch it, place heavy objects on it, or bundle it together.


If the unit is used when damaged, electrical short circuit or fire may result.

• If in need of repair, see Limited Warranty on page 10 for details.

**Do not connect or disconnect the power plug with wet hands.**




 No wet hands

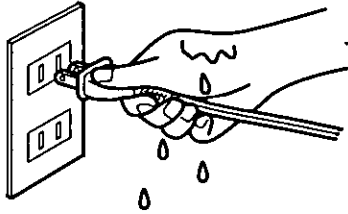

• This may result in electric shock.

**Use a single outlet that matches the power rating of the unit.**

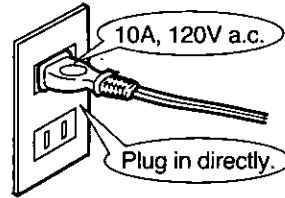 

Heat generated when plugging in multiple appliances into one outlet may result in fire.

## **⚠ ATTENTION**

 
### **Wall outlet and power cord**

**When unplugging the unit, pull by the power plug – not the cord.**



Electric shock and short circuit may result in fire.

**When the unit is not in use, unplug the power plug from the wall outlet.**

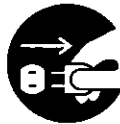

Deteriorating insulation may result in electric shock and /or fire.

Remove the power plug.

### **Location during use**

**Do not place the unit on unstable surfaces or surfaces that can be affected by heat. It may cause a fire.**



There is danger of a fire hazard.  
• Do not place the toaster oven on carpet, vinyl sheet, or resin.

### **Handling**

**Always use with crumb tray.**



There is danger of the table burning or possible fire.

**Do not touch the metallic parts or the glass window during or immediately after use.**



Do not touch!

There is danger of getting burned.  
• Make sure the toaster oven is not hot before performing maintenance.

**Do not heat more than necessary.**



Overheating will cause the food to catch fire.

When the toaster oven is in use, do not leave it unattended.



There is a chance the food will catch fire.

In particular, when baking something that is apt to easily catch fire, do not leave the toaster oven unattended.

Watch the progress of cooking.

•When you need to leave, be sure to turn off the timer.

Do not bake bread with butter or jam.



There is a chance the bread will catch fire.



Do not heat canned or bottled goods directly.



Use this unit only for cooking or warming food.

Do not broil raw fish or meat directly.



Oil may catch fire.

 
•When grilling fish or meat, wrap in foil. (See page 9.)



Always clean the unit after use.

## Note

- Keep the toaster oven away from flammable materials (wooden wall or furniture) to avoid chance of a fire hazard.
- One side (right or left) of the toaster oven should be free from any obstacle.

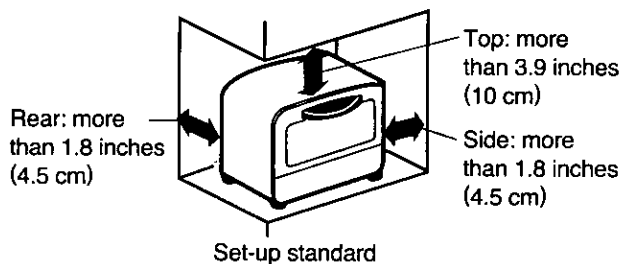


Instructions on cooking with timer:

- Turn off the timer, then unplug the power plug if the food you are cooking develops smoke or catches fire.
- Do not open the door until the flame dies down. (If air enters the interior of the toaster oven, the flame will become larger.)
- Do not pour water on the toaster oven. (The glass window will break.)

- Keep the toaster oven further away from the wall than indicated above, if the wall or furniture is coated with vinyl or resin. (The wall or furniture could become deformed or discolored.)
- Do not put flammable materials on or under the toaster oven.



# Part Names and Handling Instructions

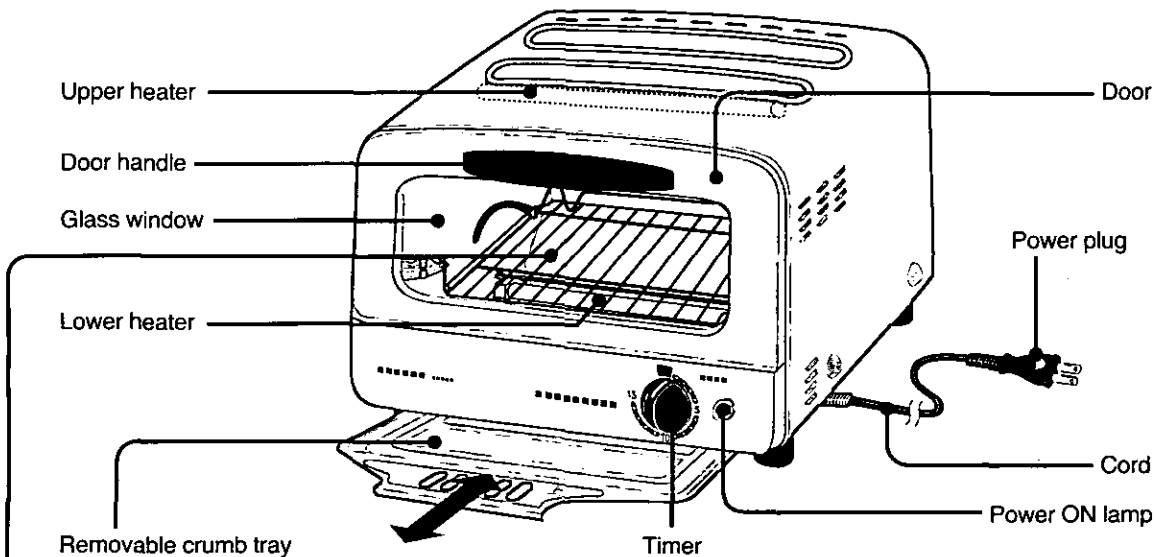 


- Insert the tray up to the far end securely. (If the tray is not properly set, it may result in poor cooking.)
- Pull the tray toward you to remove.
- Make sure the toaster oven is cold before removing the tray.
- Do not use the cord in a tight bundle. (The cable will become hot and cause malfunction of the toaster oven.)

## Note

 - The heaters automatically turn off and on during operation to control the temperature during cooking. This is not a malfunction.
- Do not open the door during cooking. (Cooking will be uneven.)
- Do not pour water on the glass window while it is hot. (The glass might break.)
- When operating the unit for the first time, please turn it on for about 5 minutes with the oven cavity being completely empty (load-free operation). It is no indication of a malfunction if smoke occurs under this condition. When the load-free operation is completed, wait until the unit has cooled down and then operate it normally.

Oven rack (removable)

## To attach

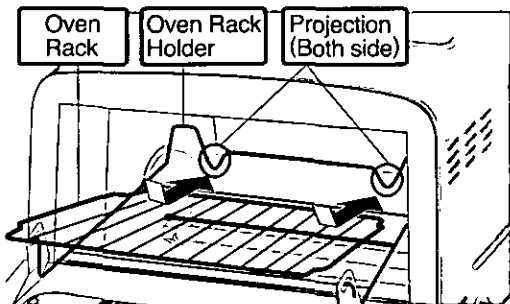


- ① Open the door.
- ② Lift up the front of the oven rack and slide it under the projections on the oven rack holder so that it sits onto the oven rack holder.

## To remove

 
- ① Open the door.
- ② Lift up the front of the oven rack and remove it from the projections on the oven rack holder.

## Accessory

1 oven tray


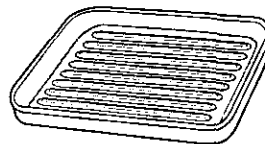


 - The tray has a grooved surface for warming cold fries efficiently. (The food might get groove patterns on its bottom.)
- It is good practice to put a sheet of aluminum foil on the oven tray to prevent contamination and press it down firmly with finger along the grooves.

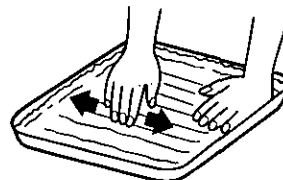


# Operating Procedure

  - 1** Insert the power plug into the wall outlet.  
Put the food inside the toaster oven.

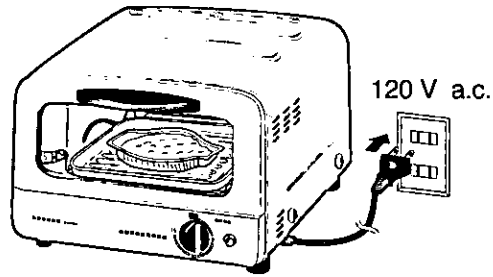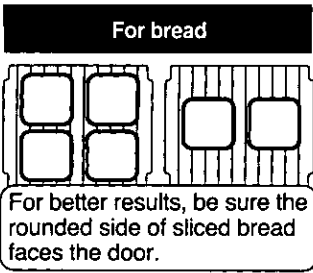


 - 2** Set **TIMER** to desired cooking time.

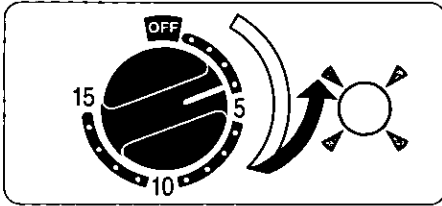

- Set timer to start cooking process. Power ON lamp will turn on during cooking.
- For less than 5-minute cooking, turn past 6 then set to the desired time.
- To stop cooking, turn the timer OFF.

 - 3** When cooking time is finished, the bell will sound and the timer will be automatically turned off.  
Take out the food with a pot holder (mitten).

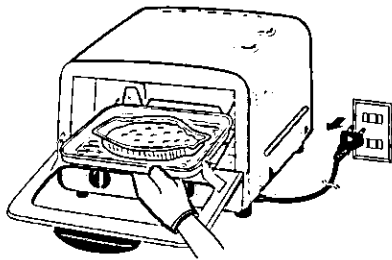

After using, unplug the power plug from the wall outlet.

\*The timer moving sound can be heard for some time even after the unit has been turned off, but this is not a malfunction.

# Cooking Guide

Cooking	Recipe	Quantity	Cooking time
Toast without oven tray	Toast	1 slice	2.0 ~ 2.5 min
		4 slices	3.0 ~ 4.0 min
	Bagel	1 slice	2.0 ~ 2.5 min
		2 slices	2.5 ~ 3.0 min
	English Muffin	2 slices	3.0 ~ 3.5 min
		4 slices	4.0 ~ 4.5 min
Warm without oven tray	Hamburger Buns	1 piece	1.5 ~ 2.0 min
		4 pieces	2.5 ~ 3.0 min
	Hot Dog Buns	1 piece	1.5 ~ 2.0 min
		4 pieces	2.5 ~ 3.0 min
	Croissant*	1 piece	1.5 ~ 2.0 min
		2 pieces	2.0 ~ 2.5 min

Cooking	Recipe	Quantity	Cooking time
Reheat with oven tray	Pizza	1 piece (1/8 size of 8 inch pizza)	2.5 ~ 3.0 min
	Chicken Nuggets	Full tray	3.0 ~ 3.5 min
	Egg Roll*	2 pieces	2.5 ~ 3.0 min
	Hot Chicken Sand*	Half foot long	2.5 ~ 3.0 min
	Macaroni and Cheese	1 piece	6.0 ~ 8.0 min
	Fried Potatoes	Full tray	2.5 ~ 3.0 min

Note : • Cooking time may vary depending on the type and quantity of foods.

• Adjust time while cooking.

\* Croissants, egg rolls, and hot chicken sandwiches could be left for one to two minutes in the unit after cooking, so that the heat reaches all parts and the taste will be even better.

### Cooking time

- There is no need for preheating.
- The standard time varies with the temperature, quality, quantity of food and material of the cooking tray. Adjust properly by watching how the food is heated.
- If it takes more than 15 minutes to cook the food, set the timer again, checking from time to time.
- If you want to cook continuously, the food might not be browned enough or the inside might not be heated properly.
- It is advisable to open the door and keep it open for a while to cool down the inside of the toaster oven, before starting the cooking again.
- If the food has not been sufficiently heated, use the timer to heat it further, checking from time to time.

### Note:

- Do not try to bake meat or fish which releases oil without wrapping. When baking meat or fish, wrap it in foil to prevent oil from splashing, and put it on the oven tray.
- Do not use the toaster oven for steaming.  
(Steam will cause malfunction.)



- When cooking with foil, such as when baking large potatoes, use caution to prevent the foil from coming in contact with the heater.  
(The foil might melt away and adhere to the surface of the heater, causing malfunction.)

## Maintenance: Remove the power plug and make sure the toaster oven is cold.

- Wipe the exterior and interior of the toaster oven with a well-wrung towel.
  - \* Do not use benzene, thinner or polishing powder; otherwise the surface will be damaged.
- When the toaster oven is severely stained or dirty, wipe with a towel saturated with a diluted solution of neutral kitchen detergent.
- When cleaning the bottom of the interior, remove the oven rack and crumb tray.
  - \* Do not touch the heaters to avoid damaging them.

- Crumb tray, oven tray, oven rack (See page 7 for how to remove.)  
Wash them with a diluted solution of neutral kitchen detergent and sponge and dry well.
  - \* Do not use metal brush or nylon brush. (The surfaces of the trays or gridiron might be damaged.)
  - \* In particular, wash the crumb tray frequently.  
Do not use a dirty tray; otherwise the table might be burned or might result to a lighter color of browning at the lower surface of bread.

## Specifications

Power supply	120V a.c. 60Hz	
Power consumption	800 W	
Weight (approx.)	6 lbs. (2.7 kg)	
Dimensions (W x D x H)	Outer dimensions	13" x 10.8" x 9.3" (330 mm x 275 mm x 235 mm)
	Inner dimensions	10.2" x 8.7" x 4" (260 mm x 220 mm x 100 mm)
Timer	15-minute timer with bell	
Automatic temperature regulator	Thermostat	

Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation  
of America  
One Panasonic Way  
Secaucus, New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric Corporation  
of Puerto Rico, Inc.  
Ave. 65 de Infanteria, Km. 9.5, San Gabriel  
Industrial Park, Carolina, Puerto Rico 00985  
Tel. (787)750-4300/Fax.(787)768-2910

## PANASONIC TOASTER OVEN

### Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will repair or replace this product with new or refurbished equivalent product, free of charge, in the USA or Puerto Rico for one (1) year from the date of original purchase in the event of a defect in materials or workmanship.

For assistance in obtaining service in the U.S.A. please contact:

**Panasonic Services Company Panasonic Plus Department**  
20421 84th Avenue South Kent, WA 98032  
Tel. 1-800-833-9626/Fax: 1-800-237-9080

If service is needed, during the warranty period the purchaser will be required to furnish a purchase receipt or other proof of date of original purchase. The warranty is extended only to the original purchaser.

The purchaser will be responsible for shipping the unit to the above address.

For assistance in Puerto Rico contact, Panasonic Sales Company at the address or telephone number listed above.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover oven tray, normal wear and does not cover damages which occur in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, set-up adjustments, maladjustment of customer controls, improper operation or maintenance, modification, power line surge, improper voltage supply, lightning damage, commercial use, such as; hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a (PASC) Factory Servicenter, or damage that is attributable to acts of God.

#### **LIMITS AND EXCLUSIONS**

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO THE MEMORY MEDIA. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the company address indicated above.

For assistance, please call 1-800-211PANA  
or send e-mail to: [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)  
or visit us at [www.panasonic.com](http://www.panasonic.com)

---

**Panasonic Consumer Electronics Company,**  
**Division of Matsushita Electric Corp. of America**  
One Panasonic Way, Secaucus, NJ 07094

Printed in the Philippines

BZ51-147  
SP0302-0