 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



PANASONIC SR-G06G Owner's Manual

[Shop genuine replacement parts for PANASONIC SR-G06G](#)

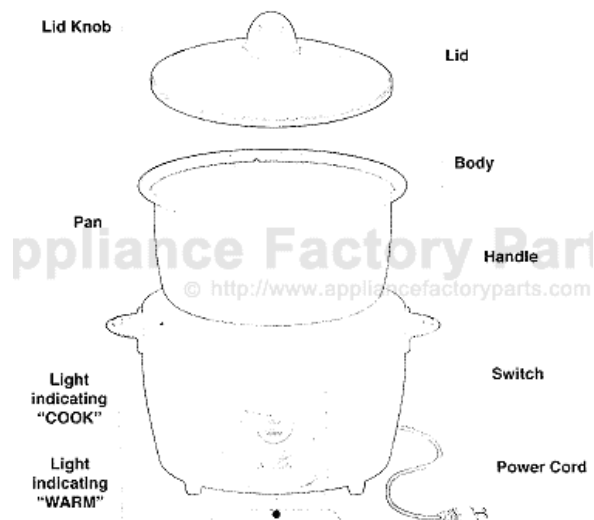

[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

Customer Services Directory

USA

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicecenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/consumersupport>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:
1-800-211-PANA (7262),
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm. EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:
1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday-Friday 9 am to 8 pm, EST.)
Panasonic Services Company
20421 84th Avenue South,
Kent, WA 98032
(We Accept Visa, MasterCard, Discover Card, America Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

Service in Puerto Rico

**Panasonic Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,
Carolina, Puerto Rico 00985
Phone (787)750-4300, Fax (787)768-2910**

Thank you very much for purchasing
Panasonic Rice Cooker/Steamer
Muchas gracias por haber comprado
la Olla para Cocer y Vaporizar Arro.



CONTENTS

Important Safeguards.....
Cautions.....
Parts Identification.....
How to cook.....
How to clean.....
Troubleshooting.....
Specifications.....
Memo.....

Before operating this unit, please read the instructions completely.

Panasonic Corporation of North America
Internet : <http://www.panasonic.com/consumersupport>

QY00A286
MA10904 0

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

NOTE

- A. A short power-supply cord (or cord set) is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug: (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If it still does not fit, contact a qualified electrician.

Do not attempt to defeat this safety feature.

Cautions : T : p

Before use, remove the paper between the cast heater and the cast heater clean a Be sure to keep the rice cooker of the reach of children especially when cooking rice.

Always keep the outside body and the cast heater clean a Any foreign matter found should immediately.

Avoid exposing the rice cooker to water or placing the rice near water supply. The rice cooker should not with cloth or any object when

The rice cooker should not placed on uneven surface. Do not use the pan directly an open flame.

Cautions

- To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.

Parts Ident

ENGLISH

If the indicator light does not turn on while pressing the switch, do not place any object on the switch, as it may cause the rice cooker to malfunction. The problem should be corrected by a qualified electrician. Be careful of the steam when the rice cooker is being used.

other object



 
Do not damage the power cord and do not attempt to repair it if it is damaged. Consult your nearest authorized service facility for repair the cord or plug. Ensure that the plug fits all the way into the wall outlet.




Prevent ants or insects from getting in the rice cooker, as they may cause the rice cooker to malfunction.

Do not substitute the pan with other container, as it will cause the rice cooker to malfunction. Only the pan included with the rice cooker should be used.

Do not leave the lid overturned in a place where it can reflect the sunlight. This may cause damage to walls or furniture.

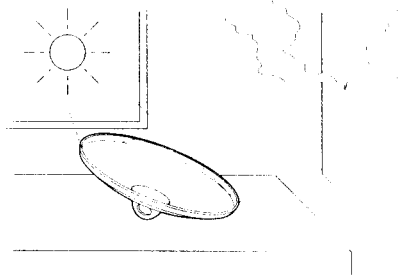

 Do not apply force onto the center of pan. It will be damaged.

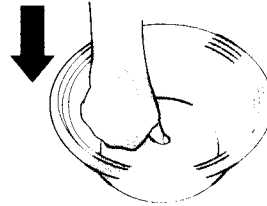

Lid Knob







 
Pan

Light indicating "COOK"

Light indicating "WARM"

Accessories

ENGLISH
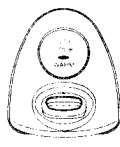
<p>1 Measure rice with the measuring cup provided. Then rinse the rice thoroughly using other container.</p>	 <p>Correct Incorrect</p>	
<p>2 Put the rinsed rice in the pan and add water according to the scales shown in the table below.</p>	<p>Scales by Graduations on the Pan</p> <p>Example: To cook 3 cups of rice, add water up to the Graduation "3"</p>  <p>Level Indicator Maximum level. Do not cook with more than this level of water.</p> <p>Note: Capacity (liter) varies according to the size of each model.</p>	<ul style="list-style-type: none"> ■ Adjust the quantity of water to your personal taste. ■ Soak rice in water at least for 30 minutes.
<p>3 Place the pan into the body. Make sure the pan is directly in contact with the cast heater by turning it slightly from right to left until it settles properly.</p>		<ul style="list-style-type: none"> ■ Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. Any foreign matter between the pan and cast heater may damage the unit.
<p>4 Close the lid firmly.</p>		<ul style="list-style-type: none"> ■ If lid is not securely closed, cooking will be affected. ■ Do not open the lid when in use.
<p>5 Plug in and press the switch. The light indicating "COOK" will be on. The cooking will start immediately.</p>		<ul style="list-style-type: none"> ■ Do not plug in the unit until you are ready to cook. Otherwise, rice may be ruined. ■ If the pan is not in the unit, cooking will not begin.
<p>6 When the rice is cooked, the switch will move up to the keep warm, and the light indicating "WARM" will be on instead. This shows that the warming function is working. After the switch moves up, leave the lid closed for at least 15 minutes to fully steam the rice. Scoop and mix the rice well.</p>		<ul style="list-style-type: none"> ■ Only Model SR-G06G does not have warming function. The light indication "COOK" will be off when the rice is cooked. ■ The warming function continues until the unit is unplugged.
<p>7 Unplug.</p>		

Unplug before cleaning. Check the plug and cord. The dirt should be removed. Do not use benzine or thinner in the cooker.

Body / Lid

Wipe with a damp cloth. Do not immerse the unit in water.

Pan

Soak the pan with warm water and wash with a sponge. Do not use scrubbers in cleaning.

Cast Heater

Remove any foreign matter on the cast heater to prevent malfunction.

Accessories

Always use the accessories as instructed.

Troubleshooting

■ Case of equipment failure? Check according to the following item :

ENGLISH

Item	SR-G06G	SR-G10G
Keep Warm is used for longer than 5 hrs or amount of rice being kept warm is too small	●	●
Foreign matters left in pan during Keep Warm	●	●
Lid is not securely closed?	●	●

Specifications

Model	SR-G06G	SR-G10G
Power Supply	120 V 60 Hz	
Power Consumption	Cooking	310 W
	Warming	450 W
Capacity	0.18 - 0.6 L	44 W
Net weight (approx.)	1.5 kg	0.18 - 1.0 L
		1.9 kg

Memo

.....
.....
.....
.....
.....

MEDIDAS DE

- precauciones de seguridad
1. Lea todas las instrucciones.
 2. No toque las superficies calientes.
 3. Para protegerse de los quemaduras, desenchufe el aparato y la Olla Eléctrica y retire cualquier otro líquido.
 4. La supervisión de niños debe ser constante.
 5. Desenchufe el aparato después de usarlo para limpiar. Permita que se enfríe completamente.
 6. No opere ningún modelo de Olla Eléctrica que funcione mal. Devuelva el aparato al distribuidor o representante más cercana para que lo repare.
 7. El uso de conexiones de extensión o del aparato ya que pueden provocar un incendio.
 8. No lo use en exteriores.
 9. No permita que el cable de alimentación se caiga al mostrador, o que se pegue a él.
 10. No coloque el aparato eléctrico, o en un área húmeda.
 11. Deberá tenerse precaución con aceite caliente u otros líquidos.
 12. Siempre conecte el aparato a una toma de corriente al tocar cualquier control que pueda estar caliente.
 13. No use el aparato si el cable de alimentación está dañado.

14. GUARDIA

Este producto se

- A. Un cable de corriente que puede reducir los riesgos de quemaduras si es un cable más largo que el necesario.
- B. El juego de cable de alimentación y podrán usarse sin problemas.
- C. Si se usa un juego de cable de alimentación (1) la clasificación de extensión y clasificación de extensión; (2) si el aparato eléctrico debe ser usado dentro, y (3) el cable más largo que el necesario sobre la superficie del mostrador o sobre el. No trate de ignorar

Este aparato tiene un cable de alimentación polarizado sólo de un lado. Si todavía no encaja en la toma de corriente, No trate de ignorar e