

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# PANASONIC SR-G18B Owner's Manual

[Shop genuine replacement parts for PANASONIC  
SR-G18B](#)



[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

# Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicecenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

**<http://www.panasonic.com/consumersupport>**

or, contact us via the web at:

**<http://www.panasonic.com/contactinfo>**

You may also contact us directly at:  
1-800-211-PANA (7262),  
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

**For hearing or speech impaired TTY users, TTY : 1-877-833-8855**

## Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

**<http://www.pasc.panasonic.com>**

or, send your request by E-mail to:

**[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)**

You may also contact us directly at:  
1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday-Friday 9 am to 8 pm, EST.)  
Panasonic Services Company  
20421 84th Avenue South,  
Kent, WA 98032  
(We Accept Visa, MasterCard, Discover Card, America Express, and Personal Checks)

**For hearing or speech impaired TTY users, TTY : 1-866-605-1277**

## Service in Puerto Rico

**Panasonic Puerto Rico, Inc.**  
**Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,**  
**Carolina, Puerto Rico 00985**  
**Phone (787)750-4300, Fax (787)768-2910**

**Panasonic Corporation of North America**  
Internet : <http://www.panasonic.com/consumersupport>

QY00A290  
MAT0504-0

USA

Thank you very much for purchase  
Panasonic Rice Cooker/Steamer  
Muchas gracias por haber comprado  
la Olla para Cocer y Vaporizar Arro

## CONTENTS

Important Safeguards.....	.....
Cautions.....	.....
Parts Identification.....	.....
How to cook.....	.....
How to use the Steaming Plate.....	.....
How to clean.....	.....
Troubleshooting.....	.....
Specifications.....	.....
Memo.....	.....

Before operating this unit, please read the instructions completely.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

## 14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

### NOTE

- A. A short power-supply cord (or cord set) is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
  - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
  - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug: (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If it still does not fit, contact a qualified electrician.

Do not attempt to defeat this safety feature.

## Cautions : To pe

Before use, remove the paper between the cast heater and the cast heater. Be sure to keep the rice cooker out of the reach of children especially when cooking rice.

Always keep the outside bottom and the cast heater clean and dry. Any foreign matter found should be removed immediately.

Avoid exposing the rice cooker to water or placing the rice cooker near water supply. The rice cooker should not be covered with cloth or any object while cooking.

The rice cooker should not be placed on uneven surface. Do not use the pan directly over an open flame.

# Cautions

- To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.

# Parts Identifi

ENGLISH

If the indicator light does not turn on while pressing the switch, do not place any object on the switch, as it may cause the rice cooker to malfunction. The problem should be corrected by a qualified electrician. Be careful of the steam when the rice cooker is being used.

other object



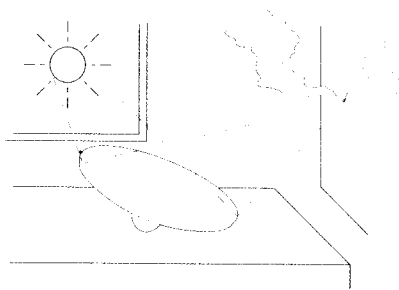 
Do not damage the power cord and do not attempt to repair it if it is damaged. Consult your nearest authorized service facility for repair the cord or plug. Ensure that the plug fits all the way into the wall outlet.




Prevent ants or insects from getting in the rice cooker, as they may cause the rice cooker to malfunction.

Do not substitute the pan with other container, as it will cause the rice cooker to malfunction. Only the pan included with the rice cooker should be used.

Do not leave the lid overturned in a place where it can reflect the sunlight. This may cause damage to walls or furniture.



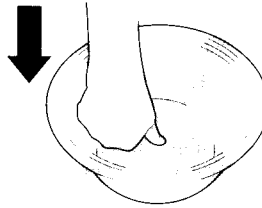 Do not apply force onto the center of pan. It will be damaged.



Lid Knob

Pan

Light indicating "COOK"

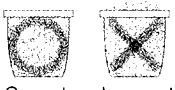
 
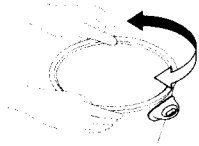
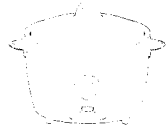
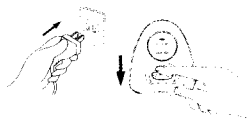
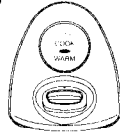

Light indicating "WARM"

Accessories



Measuring Cup  
(Approximately 180 ml)

ENGLISH

<p><b>1</b> Measure rice with the measuring cup provided. Then rinse the rice thoroughly using other container.</p>	 <p>Correct    Incorrect</p>
<p><b>2</b> Put the rinsed rice in the pan and add water according to the scales shown in the table below.</p> <div data-bbox="622 336 869 537" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;"><b>Scales by Graduations on the Pan</b></p> <p>Example: To cook 6 cups of rice, add water up to the Graduation "6".</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Level Indicator</p> <p>Maximum level. Do not cook with more than this level of water.</p> </div> <div style="text-align: center;"> <p>Note : Capacity (liter) varies according to the size of each model.</p> </div> </div> </div>	<ul style="list-style-type: none"> <li>■ Adjust the quantity of water to your personal taste.</li> <li>■ Soak rice in water at least for 30 minutes.</li> </ul>
<p><b>3</b> Place the pan into the body. Make sure the pan is directly in contact with the cast heater by turning it slightly from right to left until it settles properly.</p>	
<p><b>4</b> Close the lid firmly.</p>	
<p><b>5</b> Plug in and press the switch. The light indicating "COOK" will be on. The cooking will start immediately.</p>	
<p><b>6</b> When the rice is cooked, the switch will move up to the keep warm, and the light indicating "WARM" will be on instead. This shows that the warming function is working. After the switch moves up, leave the lid closed for at least 15 minutes to fully steam the rice. Scoop and mix the rice well.</p>	
<p><b>7</b> Unplug.</p>	

<p><b>1</b> Pour 2 cups of water using the provided measuring cup into the pan.</p>
<p><b>2</b> Place steaming plate in the pan.</p>
<p><b>3</b> Place the pan into the body and add foods (place in dish if required).</p>
<p><b>4</b> Close the lid firmly. Plug in and press the switch. The light indicating "COOK" will be on. The steaming will start immediately.</p>
<p><b>5</b> Time the steaming manually. The unit will automatically switch to "WARM" when water in the pan has completely evaporated.</p>
<p><b>6</b> Unplug.</p>
<p><b>7</b> Remove foods, then the steam, and pour off the water.</p>

ENGLISH

Unplug before cleaning. Check if there is any dirt sticking on the plug and cord. The dirt should be removed immediately. Do not use benzine or thinner in wiping and cleaning the rice cooker.

### Body / Lid

Wipe with a damp cloth. Do not immerse the unit in water.

### Pan

Soak the pan with warm water and wash with a sponge. Do not use scrubbers in cleaning.

### Cast Heater

Remove any foreign matter on the bottom of pan or cast heater immediately, as it may cause the rice cooker to malfunction.

### Accessories



Measuring cup

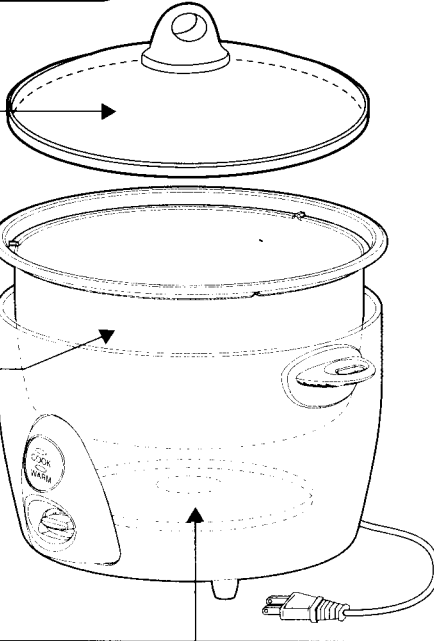 


Scoop



Steaming Plate

Always wash with dishwashing liquid and sponge after use.



### Case of equipment failure

Problem's Description	Possible Cause
Rice to Water ratio not correct	
Rice not rinsed well enough	
Pan bottom dented or uneven	
Foreign matter between pan and heater	
Rice Cooked with oil	
Rice not fluffed (mixed) after cooking	
Keep Warm is used for longer than 5 hrs or amount of rice being kept warm is too small	
Foreign matters left in pan during Keep Warm	
Rice being kept warm was at room temperature or colder or cold rice added to warm rice	
Lid is not securely closed?	
Pan was not clean or odors from previous cooking remain in pan	
Power cord was unplugged or the switch was turned off during cooking	

### Specifications

Model	
Power Supply	
Power Consumption	Cooking Warming
Capacity	
Net weight (approx.)	