 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



PANASONIC SR-TE10N Owner's Manual

[Shop genuine replacement parts for PANASONIC SR-TE10N](#)

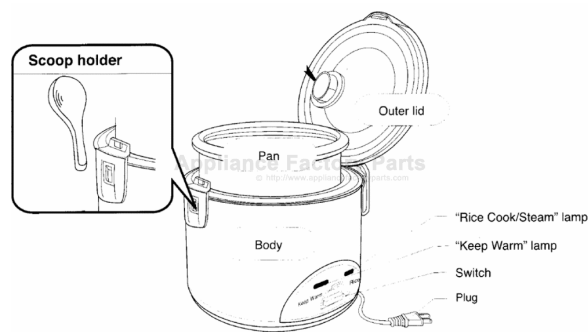

[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

U/C

Operating Instructions

Electronic Rice Cooker/Warmer

電子保溫飯煲

전자 밥솥/보온기

Cuiseur de riz/réchaud électronique

SR-TE10N/TE15N/TE18N



Panasonic®

Before operating this unit, please read these instructions completely.

在使用本機前，請詳細閱讀此使用說明書。

사용하시기 전에 이 설명서를 잘 읽으실 것.

Il est recommandé de lire attentivement ce manuel avant d'utiliser l'appareil.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

NOTE

- A. A short power-supply cord (or cord set) is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug: (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Contents

Cautions	3
Parts Identification	4
How to Cook	5-6
To Keep Cooked Rice Warm and Tasty	6
How to Steam Food (Using the Steaming basket)	7
How to Clean	8
Troubleshooting	9
Specifications	9

ENGLISH

中文

한국어

FRANÇAIS

注意事項	10
零件名稱	11
使用方法	12-13
使已煮熟米飯保溫及可口	13
蒸食方法 (使用選購蒸架時)	14
清洗方法	15
故障檢修	16
規格	16

주의사항	17
각 부품의 이름	18
조리법	19-20
조리된 밥을 맛있고 따뜻하게 유지하기	20
찜 용기를 사용해서 하는 찜 요리법	21
청소법	22
문제해결	23
사양	23


Table des matières

Attention	24
Nomenclature	25
Mode d'emploi	26-27
Pour maintenir le riz cuit au chaud et lui conserver toute sa saveur	27
Cuisson à la vapeur (Avec grille à vapeur en option)	28
Nettoyage	29
Guide de dépannage	30
Spécifications	30


Cautions

Be sure to observe the following to prevent malfunction that may cause an accident:

 
- DO NOT use this rice cooker for any purpose other than cooking rice and steaming food.
- Measure the quantity of rice and water according to the Operating Instructions.
- Clean the rice cooker, particularly the dew collector, after using.
- Keep holes that drain into the dew collector clean and free of debris.
- Plug into a properly wired wall outlet. Before you plug it in, make sure the voltage of the unit is the same as your local supply.
- DO NOT immerse the unit in water.

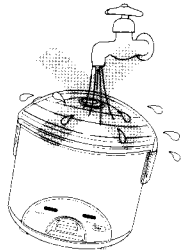


- The paper located between the pan and the heating plate must be removed before using.
- After plugging in, press the switch on immediately. Cooking with the switch in Keep Warm position will cause low-heat cooking and rice will not be cooked properly.
- The unit becomes hot when in use. DO NOT touch the lid with your hand, and do not place your face or hand directly over the steam coming from the cooker.
- Always keep the outside bottom of the pan and the heating plate clean and dry. Any foreign matter between them will cause the unit to malfunction.

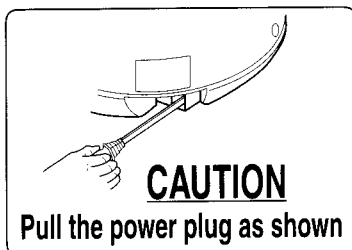 

 - Set the unit on a stable surface. DO NOT expose to water, high humidity, or heat sources. DO NOT use the pan directly on an open flame.

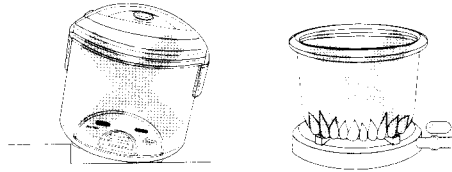

- Be sure to keep the unit out of the reach of children, especially when cooking rice.
- DO NOT tilt the rice cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage. When tilting or placing the rice cooker upside down, make sure to disconnect the power supply plug.
- The pan must not be filled above the "MAXIMUM LEVEL".
- The lid must be closed tightly in the latched position at all times during cooking, i.e. the unit must not be operated with the lid open.
- DO NOT cover the lid with a cloth as it may deform or change color.

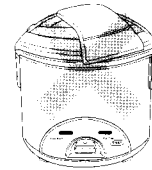 


- DO NOT damage the power cord and do not attempt to repair it if it is damaged. Avoid damage to the power cord. Never attempt to customize the cord. Keep the cord away from high temperatures. Avoid unnecessary bending, twisting and pulling on the cord. Never place heavy objects on the cord or attempt to tie it up. Using a damaged power cord can lead to electrical shock, shorting or fire.
 - Consult your nearest sales dealer for repair of the electrical cord or power plug.
- Ensure that the plug fits all the way into the outlet. Uncompleted plug-in may cause electrical hazards.
 - Please use only attached cord set.

Parts Identification

ENGLISH


Steam cap

 - Remove and clean after every use. See "How to Clean". (page. 8)


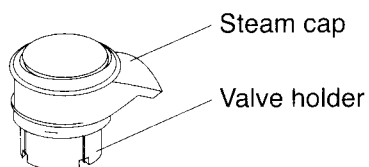


Dew collector

 
- Hold the sides and remove/install in the direction of the arrows.
- Remove and clean the dew collector after every use.

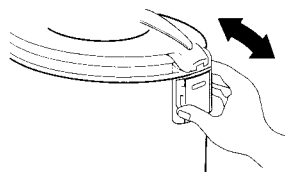

Scoop holder

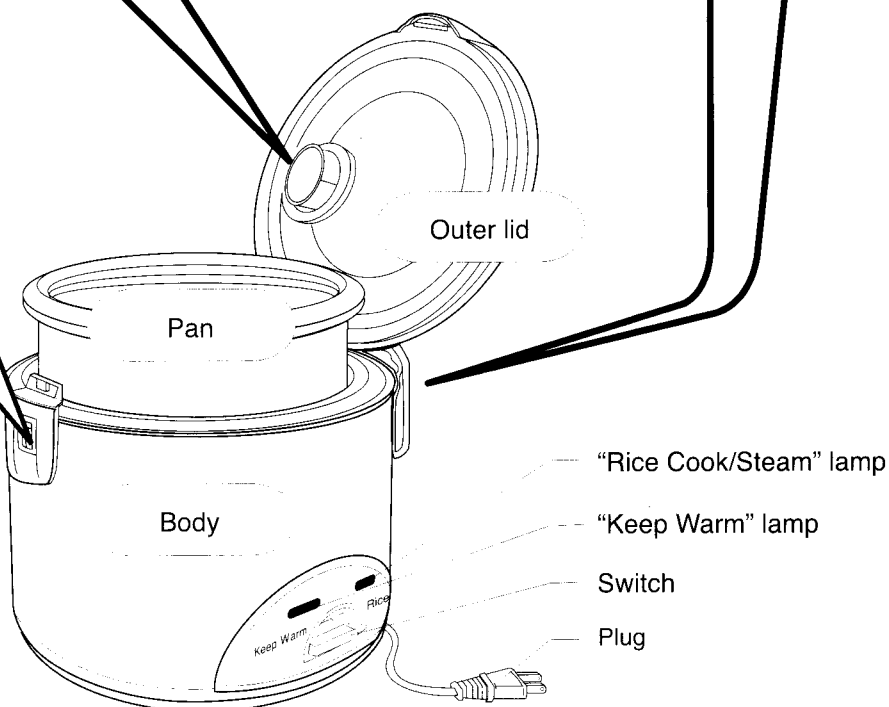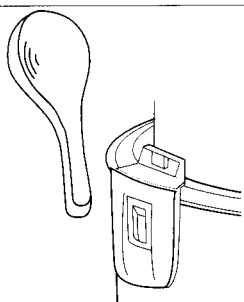  

Accessories

 

Measuring cup
(Approx. 180ml)



Rice scoop



 
Steaming basket

How to Cook

ENGLISH

1


Measure rice with the measuring cup provided. Rinse rice in a separate bowl until the water becomes relatively clear.

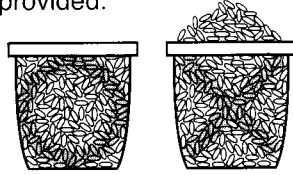

- Do not rinse rice in the rice cooker pan as non-stick coating may be damaged.

2

 
Place rinsed rice in the pan. Add water, e.g. for 6 cups of rice, add water to LEVEL INDICATOR 6.

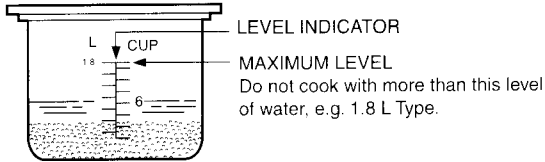

- Adjust the quantity of water to your personal taste.
- Soak rice in water at least for 30 minutes.

3

 Set the steam cap onto the outer lid. Place the pan in the body. Make sure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it seats properly.

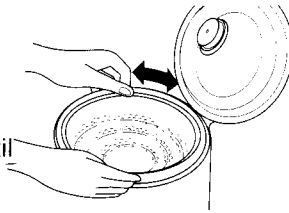

- Wipe the surface of the pan before using. If it is wet, it may cause noise while cooking. It may also damage the unit, if any foreign matter is on it.

4

 
Close the outer lid. The lid is locked properly when it clicks.



- If outer lid is not securely closed, cooking will be affected.
- Do not open the outer lid when in use.

5


Plug in. Immediately press the switch. The "Rice Cook/Steam" lamp tells you when cooking has started.

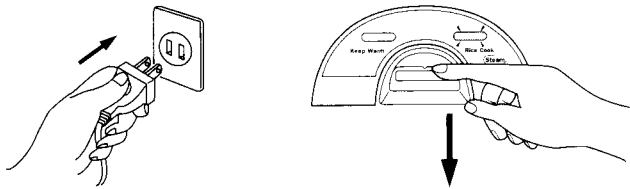

- Do not plug in unit until you get ready to cook. Otherwise, rice may be ruined.
- If the pan is not in the unit, cooking will not begin.

6

 When rice is done, the switch will move up to the "Keep Warm" setting. The "Keep Warm" lamp lights up to indicate that the "Keep Warm" function is working.



- The "Keep Warm" function continues until the unit is unplugged.

7

 
After the switch moves up, leave the outer lid closed for at least 15 minutes to fully steam the rice.

How to Cook

8


Scoop and mix the rice well
20-30 minutes after cooking is done.

Scoop holder

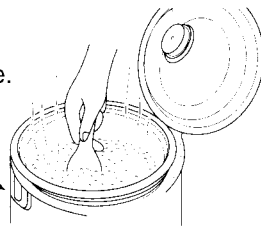


9

 Unplug the unit if you do not want to keep
the rice warm or when the unit is not in use.

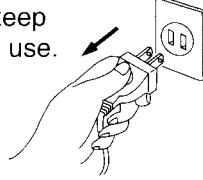

10

 Remove and clean the dew
collector after every use.

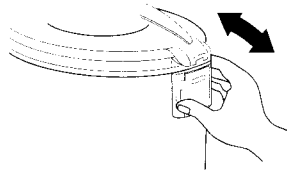

To Keep Cooked Rice Warm and Tasty

- Using the Keep Warm function for more than 12 hours may cause discoloration or an odor in the rice.
- If quantity of rice to be kept warm is less than

SR-TE18N	6 bowlfuls (6 cups)
SR-TE15N	4 bowlfuls (4 cups)
SR-TE10N	2 bowlfuls (2 cups)

the rice will gradually dry out and lose its flavour.

- Foreign matters left in the pan during Keep Warm may affect the smell and taste of the rice.

How to Steam Food (Using the Steaming basket)

ENGLISH

1


Put 2 cups of water with the measuring cup provided, into the pan.

If cooking rice at the same time, DO NOT cook beyond following capacity.

	Rice (cups)
1.8L (10 cups)	5
1.5L (8 cups)	4
1.0L (5 cups)	2


2

 Place steaming basket on the pan.

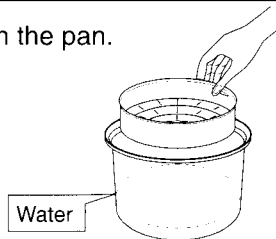

3

 Set the pan into the body.
Add food. (Place in dish if Required)

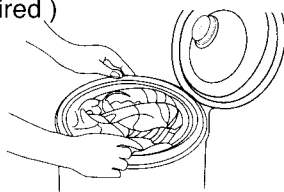

- Wipe the surface of the pan before using. If it is wet, it may cause noise while cooking. It may also damage the unit, if any foreign matter is on it.

4

Set the steam cap onto the outer lid. Close the outer lid. The lid is locked properly when it clicks.

Plug in. Immediately press the switch. The "Rice Cook/Steam" lamp tells you when cooking has started.

 
- If outer lid is not securely closed, cooking will be affected.
- DO NOT plug in until you are ready to cook.
- If the pan is not in the unit, cooking will not begin.

5

Time the cooking manually.
*Unit will automatically switch to Keep Warm when water is completely evaporated.

6

Turn off cooker by unplugging.

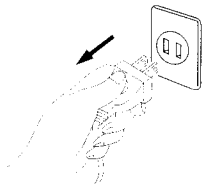

- The "Keep Warm" function continues until the unit is unplugged.

7

Remove foods, then the steaming basket, and finally pour out any remaining water.

How to Clean

- Be sure to unplug and carry out these operations when the unit has cooled down.
- DO NOT use objects such as benzine, thinner, cleansing powder or metal scrubbers.

Body / Outer lid / Upper rim

- Wipe with a damp cloth.
- DO NOT use a dishwashing detergent.

Pan

- Wash with a dishwashing detergent and sponge and wipe off.

 
Dew collector

- Remove and clean with damp cloth after every use.

Pan sensor

- If an object has become stuck to the sensor, lightly polish it off by using fine sandpaper (of about#600 grit)/ steel wool. Then, wipe with a damp cloth.

Accessories

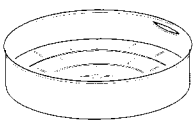

Steaming basket

 


Measuring cup



Rice scoop


Wash with a dishwashing detergent and sponge.

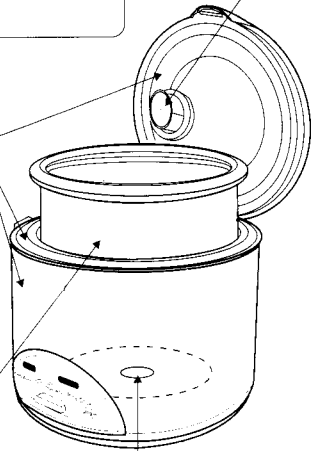

Steam cap

How to remove and clean.

 1. Pull off the steam cap to remove as shown in the figure.

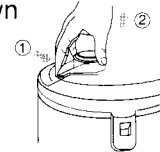


2. Remove the valve holder by turning it from right to left. Wash and wipe with a damp cloth.



DO NOT remove rubber.

 
3. Wipe the inside of the hole with a damp cloth.

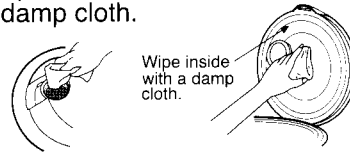

Please do not remove steam dome when using rice cooker

How to fit steam cap.

 1. Insert the valve holder into the steam cap by setting the tab of the holder (A) into the slot of the cap (B) and turn it from left to right until it seats properly.

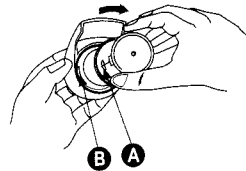

How to fit steam dome.

- (In case it's accidentally taken off)
- Place steam dome into its holder by inserting steam dome tabs (C) into slot (D). Align mark on dome (1) and mark on steam cap (2).

- Then, press steam dome into steam cap until it seats properly (You'll hear the sound "click")



Note : The steam dome will only fit one way. Do not force it in as it may be damaged.

2. Put the steam cap into the hole of outer lid.

Troubleshooting

Problems Description	Cooking Problems					Keep Warm Problems			No power	Emits strange sounds
	Rice too hard	Rice not cooked to the center	Rice too soft	Viscous liquid overflows	Bottom is scorched	Rice has unusual smell	Rice changes color	Rice is too dry		
Rice to Water ratio not correct	●	●	●	●	●				Unplug the unit from the wall socket. Check circuit breaker. If circuit breaker is ok then take unit to the nearest authorized service center.	Popping sounds are caused when water trapped between the pan and the heater evaporates. This can cause damage to the pan and heater.
Rice not rinsed well enough					●	●				
Pan bottom dented or uneven	●	●			●					
Foreign matter between pan and heater	●	●	●		●	●	●			
Rice Cooked with oil	●	●				●				
Rice not fluffed (mixed) after cooking	●		●							
Keep Warm for longer than 12 hrs or amount of rice being kept warm is too small						●	●	●		
Utensils left in pan during Keep Warm						●				
Rice being kept warm was at room temperature or colder or cold rice added to warm rice						●				
Lid not securely closed						●				
Pan was not clean or odors from previous cooking remain in pan					●	●				
Power cord was unplugged or the switch was turned off during cooking		●				●				

Specifications

Model No.	SR-TE10N	SR-TE15N	SR-TE18N
Power supply		120 V	
Power consumed at Rice Cook	450 W	630 W	630 W
Power consumed at Keep Warm	61 W	67 W	67 W
Capacity	0.18-1.0 L	0.36-1.5 L	0.54-1.8 L
Dimension (H x W x D) (approx.)	9 5/8" x 9 3/4" x 9 3/4" (245 x 248 x 247 mm)	9 3/4" x 10 7/8" x 10 3/4" (248 x 276 x 274 mm)	10 1/2" x 10 7/8" x 10 3/4" (267 x 276 x 274 mm)
Weight (approx.)	2.5 kg (5 1/2 lbs.)	2.8 kg (6 1/4 lbs.)	3.1 kg (6 3/4 lbs.)