 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



PANASONIC SR-W18FXP Owner's Manual

[Shop genuine replacement parts for PANASONIC SR-W18FXP](#)

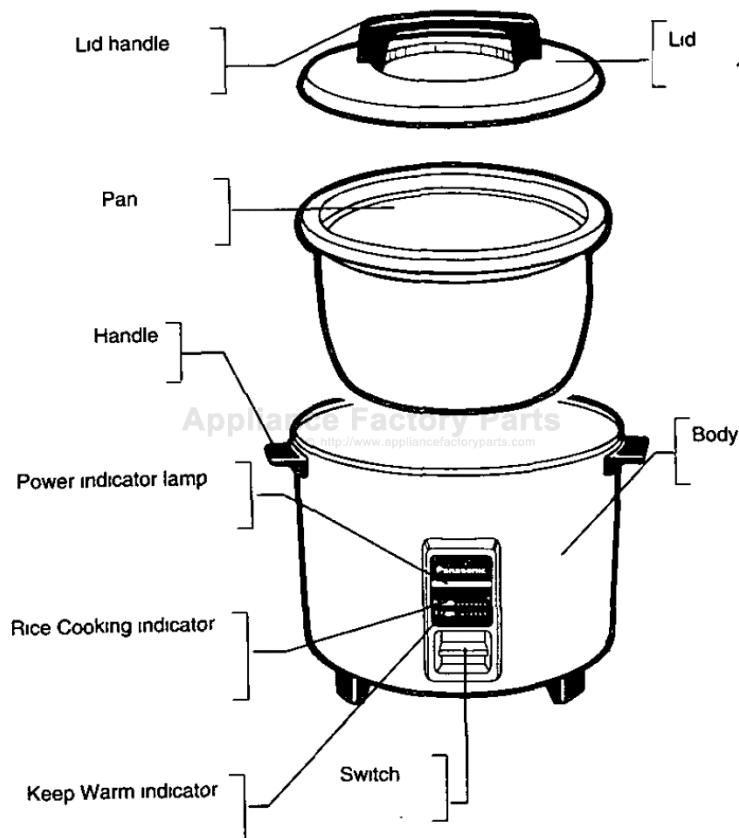 


[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

Operating Instructions

Rice Cooker/Steamer
SR-W18FXP

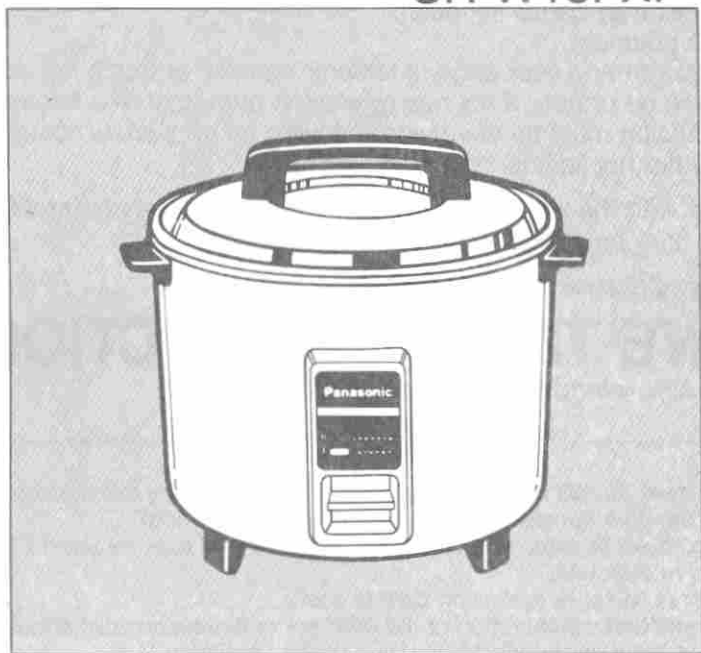

Panasonic®

Before using this cooker, please read these instructions completely.
Antes de usar la marmita, lea estas instrucciones hasta el final.

ENGLISH P.3 - 4
ESPAÑOL P.5 - 6

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following

- 1 Read all instructions
- 2 Do not touch hot surfaces Use handles or knobs
- 3 To protect against electrical shock, do not immerse cord, plugs, and Rice Cooker/Steamer, except lid and pan, in water or other liquid
- 4 Close supervision is necessary when any appliance is used by or near children
- 5 Unplug from outlet when not in use and before cleaning Allow to cool before putting on or taking off parts
- 6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner Return appliance to the nearest authorized service facility for examination, repair, or adjustment
- 7 The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
- 8 Do not use outdoors
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven
- 11 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids
12. Plug cord into the wall outlet To disconnect, turn any control to "off", then remove plug from wall outlet
- 13 Do not use appliance for other than intended use

14. SAVE THESE INSTRUCTIONS

This product is intended for household use

 
NOTE




- A A short power supply cord set is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord
- B Longer cord set or extension cords are available and may be used if care is exercised in their use
- C If a longer cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance,
 - (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally

This appliance has a polarized plug (one blade is wider than the other) As a safety feature, this plug will fit in a polarized outlet only one way If the plug does not fit fully in the outlet, reverse the plug If it still does not fit, contact a qualified electrician Do not attempt to defeat this safety feature

PARTS IDENTIFICATION

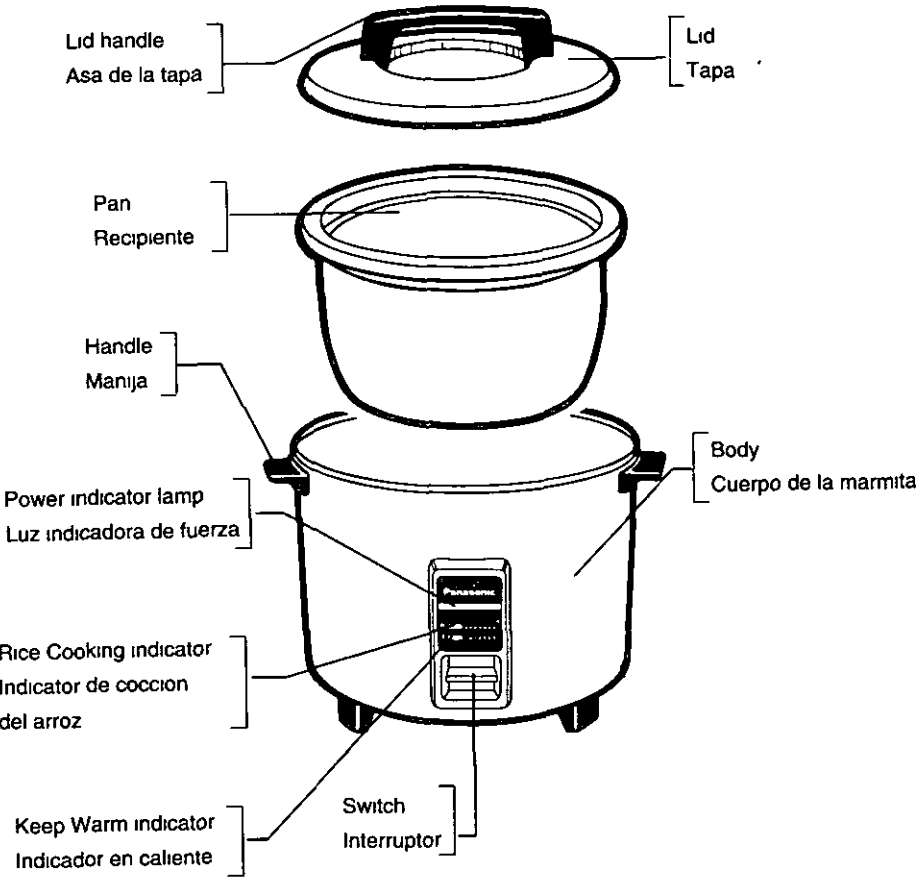IDENTIFICACION DE LAS PARTES




		
Measuring cup (approx 6fl oz /180ml) Taza medidora (aprox 6fl oz /180ml)	Steaming plate Placa de vapor	Rice scoop Paleta para sacar el arroz

HOW TO USE


1 Measure rice with the provided measuring cup. One cup of uncooked rice makes approximately 3 cups of cooked rice. Rinse rice in a separate bowl until water becomes relatively clear.

2 Place rinsed rice in the pan. Add water according to the following standard, e.g. when using 1.9 qts (1.8L) capacity rice cooker.

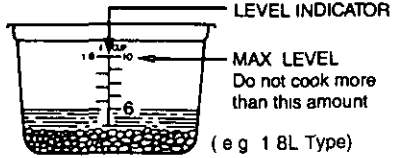Using the markings on the pan	Using the measuring cup	
e.g. To cook 6 cups of rice, rinse the rice, put it into the pan and then add water to LEVEL INDICATOR 6.	Raw rice by cup	Water to be added
	10 cups	10-10 1/4 cups
	8 cups	8-8 1/4 cups
	6 cups	6-6 1/4 cups
	4 cups	4-4 1/4 cups
	2 cups	2-2 1/4 cups

Adjust water quantity to your taste.

 3 Set the pan in the cooker. To place correctly on the heater, turn the pan gently to right and left. Cover with the lid and let rice soak approximately 30 minutes.



4

 
Plug in.
The power indicator lamp lights.

Do not plug in until ready to cook. Otherwise, rice may be ruined.



If the pan is not in the cooker, cooking will not begin.

5 Press the switch. The "Rice Cooking" indicator (Orange) tells you cooking has started.

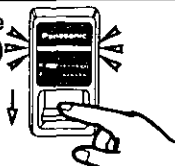

6 When rice is done, the switch will pop up. The "Keep Warm" indicator changes to orange to signal "Keep Warm" function is working.

7 After the switch pops up, leave the lid closed for at least 15 minutes to steam rice.

 
8 Unplug after use. Grasp plug, not the cord.

CAUTION

ENGLISH


- 1 •Make sure that the pan is sitting properly in the cooker
If the pan is not positioned correctly, the switch may click off too soon or the heater may be damaged

WRONG

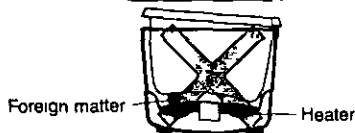

- Do not leave the steaming plate between the heater and the pan

 
The pan should not be caught on the ledge above the heater

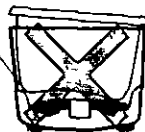

The pan should not be caught on the edge of the body


Your rice cooker has been designed with a thermal fuse which may shut the heater off in these cases

 - Be sure the switch is off before removing the pan

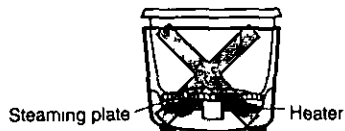

- 2 Replace all damaged parts immediately

 - 3 Do not leave the lid down-side up in places subjected to direct sunlight
If direct light is subjected to the concave side of the lid, it may focus on furniture, walls, etc , and damages may result

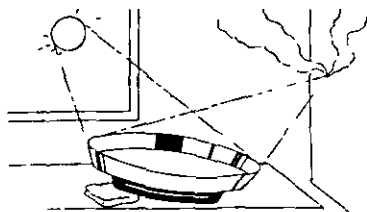

- 4 Do not tilt the rice-cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage

KEEP WARM FUNCTION

- After cooking is completed, "Keep Warm" automatically functions until the cord is unplugged
- Always unplug before taking the pan out of the cooker
- Do not switch to "Rice Cooking" again during "Keep Warm" function
- Do not keep rice warm for more than 5 hours
- Do not use "Keep Warm" function to reheat cold rice

HOW TO USE STEAMING PLATE

- Place the steaming plate in the pan. Pour water below the steaming plate to steam food. Cover with the lid and switch on
- To reheat cold rice, use this steaming function only

HOW TO CLEAN

- 1 Unplug before cleaning
- 2 Soak the pan and the steaming plate in hot water to loosen cooked-on rice
- 3 Do not immerse the body in water or any other liquid. Wipe with a damp cloth
- 4 Do not use abrasive cleaners or steel wool. Clean with non-metal brush or sponge

SPECIFICATIONS ESPECIFICACIONES

Model No. N° de modelo	Power supply Alimentación	Power consumed Consumo	Capacity Capacidad	Dimensions (H x W x D) Dimensions (Al x An x Prf)	Weight Peso	Accessories Accesorios
SR-W18FXP	120V AC	600W	0.38 - 1.9qts. (0.36 - 1.8L)	10 ¹ / ₄ " x 12 ¹ / ₄ " x 10 ² / ₃ " (26 x 31 x 27cm)	4.81bs. (2.2kg)	Measuring cup (approx. 6fl.oz./180ml) Taza medidora (aprox. 6fl.oz./180ml) Steaming Plate Place de vapor Rice Scoop Paleta para sacar el arroz

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA
One Panasonic Way, Secaucus,
New Jersey 07094

QY00A139

Printed in India