

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 830A550 Owner's Manual

[Shop genuine replacement parts for Coleman 830A550](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----



How to Use and Enjoy Your Coleman **CEILING FAN W**

1 Year Limited Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of one (1) year from the date of purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. No warranty is provided for batteries and lightbulbs. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and condition of this warranty.

This warranty does not cover normal wear or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use of non-Coleman accessories or parts, use contrary to the operating instructions or failure to follow maintenance instructions, commercial, for-profit, non-profit, instructional, educational use of this product, and or rental applications, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY. SOME STATES, PROVINCES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by calling in the U.S. 1-800-835-3278 or TDD 316-832-8707 and in Canada 1-800-387-6161. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by courier or postal service with shipping and insurance prepaid to:


For products purchased in the United States:	For products purchased in Canada:
The Coleman Company, Inc.	Sunbeam Corporation (Canada) Limited
3600 North Hydraulic	5972 Falbourne
Wichita, KS 67219	Mississauga, Ontario L5R 3V8

This warranty does not cover transportation or shipping costs. If you ship your product, shipping and insurance must be prepaid.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE. DO NOT SHIP PRODUCT WITH BATTERIES INSTALLED.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707 (United States) or 1-800-387-6161 (Canada).

©2005 The Coleman Company, Inc. All rights reserved.

Coleman® and  are registered trademarks, and Cool Zephyr™ is a trademark of The Coleman Company, Inc.



 
Model 830 Cool Ceiling Fan S

Carefully read all instructions before use and save for future reference.


TO INSTALL OR REPLACE BATTERIES

Your new tent fan operates on 4 "D" cell batteries. For longest life, use alkaline batteries.

1. With fan and light off, turn upside down and unscrew battery cover by turning counterclockwise.
NOTE: Never attempt to open battery cover by grasping and turning the carabiner clip. This could result in damage to your fan/light.
2. Install 4 batteries in the correct orientation as shown on the battery housing. Always be careful that all 4 batteries are installed correctly. (See Fig. 1.)
3. To replace battery cover, properly align cover on body of fan and turn clockwise. Check that battery cover is securely in closed position before transporting or mounting the fan/light.

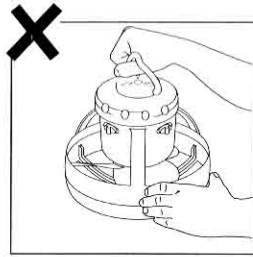

INCORRECT

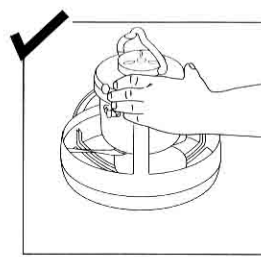 

CORRECT

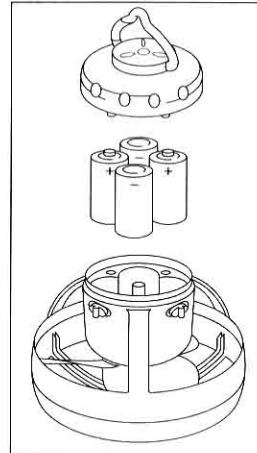 


Fig. 1

MOUNTING ON A TENT

1. If tent is tall, position and mount the tent fan before raising tent.
2. Position fan hanger on the inside of tent at the desired location near the highest center point.
3. While holding fan hanger stationary, place mounting plate on the outside of the main tent fabric (not on outside of tent fly) until contact with magnet occur. (See Fig. 2)
4. Be sure the mounting plate is making good contact with the magnet before hanging the fan/light.
5. Attach fan by inserting loop on hanger into hinged opening located on carabiner clip of fan. (See Fig. 3)

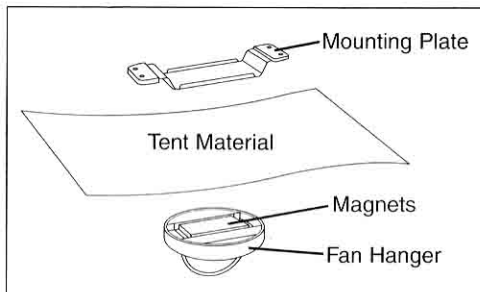 


Fig. 2

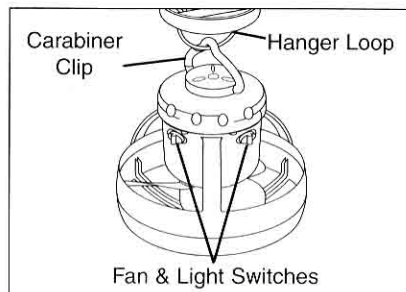 


Fig. 3

THINGS YOU SHOULD KNOW

1. Make sure magnet is clean of debris such as on the tent as debris may damage the tent fabric.
2. **DO NOT attempt to relocate the tent fan by pulling along the tent fabric. Remove the mounting plate as described in previous instructions.**
3. The run time of the fan will depend on the tent conditions. Alkaline batteries are recommended and minimum operating cost. Approximate operating times are based on continuous run (operating times are based on continuous run): up to 24 hours on high setting and 48 hours on low setting. (Approximate operating times are based on continuous run)
4. The light feature on this product operates using LED technology is designed so you never have to replace the LEDs. These LEDs will last up to 100,000 hours of use.
5. The fan/light can be used as an area light by turning on the 1 amber LED.
6. The fan & lights can be operated independently.
7. When the LEDs are not lit to full brilliance, battery life is reduced.
8. **IMPORTANT:** Do not leave discharged batteries in the fan/light for a long period of time as this could permanently damage the fan/light. If the fan/light is damaged due to battery leakage, refer to battery repair or replacement.
9. To clean outside of tent fan/light, use only a damp cloth. Do not submerge in water.
10. For repair service, call 1-800-835-3278 TOLL FREE in the US or 1-800-387-6161 in Canada. If the fan/light must be returned, please include a return shipping label. Do not ship product without insurance.

PARTS LIST

No.	Description
1	Mounting Plate
2	Fan Hanger
3	Battery Cover
4	Battery Housing

