



Component

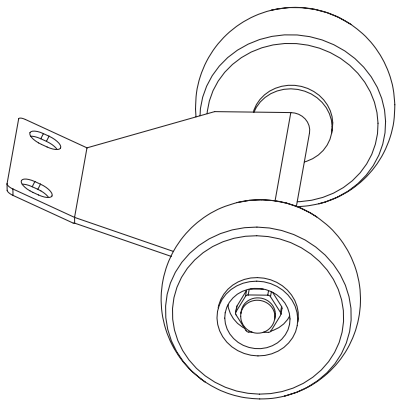


1. Wheel Assembly 56-01-378

Hardware

 A Wheel Bolt 2 pcs
5/16" - 18 x 15 Stainless Steel Hex Head Bolt



 B Wheel Nut 2 pcs
5/16" - 18 Stainless Steel Hex Nut



C Wheel Washer 2 pcs
8 mm Stainless Steel Washer





Step 1 Attach wheel assembly during heater assembly

Note: Attach wheel assembly to base prior to attaching the weight plate.

- A. Attach wheel assembly to base using 2 sets of wheel bolts (A), wheel washers (C) and wheel nuts (B).
- B. Continue heater assembly in Owner's Manual.

Attach wheel assembly after heater is assembled

- A. Lay heater on its side. **Be careful not to damage your dome. Support the post on a box or other sturdy item.**
- B. Remove weight plate, if needed.
- C. Attach wheel assembly to base using 2 sets of wheel bolts (A), wheel washers (C) and wheel nuts (B).
- D. Reassemble weight plate, if removed.
- E. Stand heater upright.

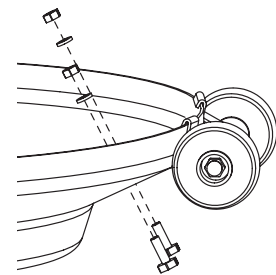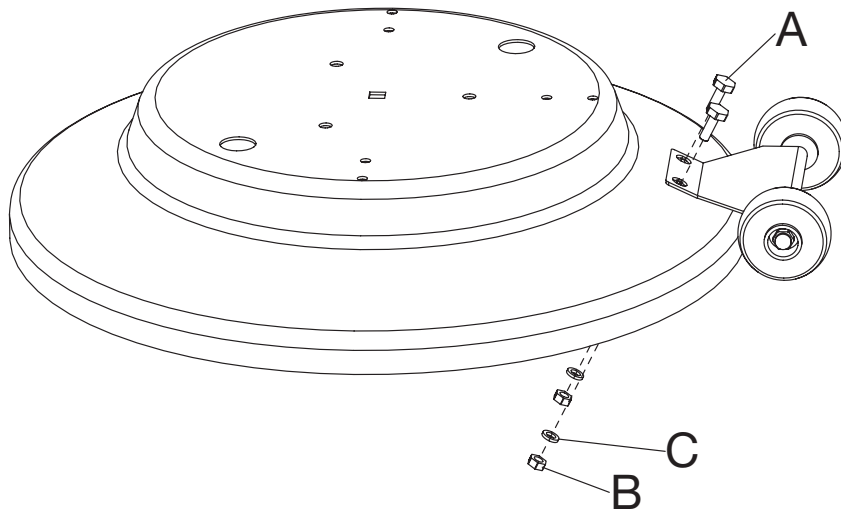

Manufactured in China for:
Blue Rhino Global Sourcing, LLC
104 Cambridge Plaza Drive, Winston-Salem, NC 27104 USA
1.800.762.1142, www.bluerhino.com