

30" Oven Control Panel Parts List Single and Double Oven

Ref #	Part #	Description
1	805081	Control Head, 30, Snagl, Sst
	805104	Control Head, 30, Dbl, Sst
	805106	Control Head, 30, Snagl, Plt
	805107	Control Head, 30, Dbl, Plt
	805109	Control Head, 30, Snagl, Blk
	805110	Control Head, 30, Dbl, Blk
2	800948	Motor, Drive Assy., Sst (PTS #11031315 See Ref #14)
	801734	Motor, Drive Assy., Plt (PTS #11031315 See Ref #14)
	801733	Motor, Drive Assy., Blk (PTS #11031315 See Ref #14)
	801231	C-Channel Bottom, 30", Sst
3	801738	C-Channel Bottom, 30", Plt
	801740	C-Channel Bottom, 30", Blk
4	801230	C-Channel Top, 30", Sst
	801737	C-Channel Top, 30", Plt
	801739	C-Channel Top, 30", Blk
5	802964	Pin, Stop, Control Panel
6	801538	Screw, 8-32x1/2"
7	802791	Plate, Mounting, Right, Ctrl Panel
8	803484	Bearing, Flange, Control Panel
9	801920	Bracket, Switch, Control Panel
10	801549	Screw, 8-18x1/2"
11	801051	Switch, Actuation, Control Panel
12	801677	Screw, 2-56x3/8"
13	800704	Plunger, Control Display


36" Oven Control Panel Parts List Single Oven

Ref #	Part #	Description
1	805105	Control Head, 36, Snagl, Sst
	805108	Control Head, 36, Snagl, Plt
	805111	Control Head, 36, Snagl, Blk
2	800948	Motor, Drive Assy., Sst (PTS #11031315 See Ref #14)
	801734	Motor, Drive Assy., Plt (PTS #11031315 See Ref #14)
	801733	Motor, Drive Assy., Blk (PTS #11031315 See Ref #14)
3	801525	C-Channel Bottom, 36", Sst
	801742	C-Channel Bottom, 36", Plt
	801744	C-Channel Bottom, 36", Blk
4	801526	C-Channel Top, 36", Sst
	801741	C-Channel Top, 36", Plt
	801743	C-Channel Top, 36", Blk
5	802964	Pin, Stop, Control Panel
6	801538	Screw, 8-32x1/2"
7	802791	Plate, Mounting, Right, Ctrl Panel
8	803484	Bearing, Flange, Control Panel
9	801920	Bracket, Switch, Control Panel
10	801549	Screw, 8-18x1/2"
11	801051	Switch, Actuation, Control Panel
12	801677	Screw, 2-56x3/8"
13	800704	Plunger, Stainless Steel

Not Shown

803319 Spring, Ribbon Cable, Short

**Oven Control Panel Exploded View
Single and Double Oven**

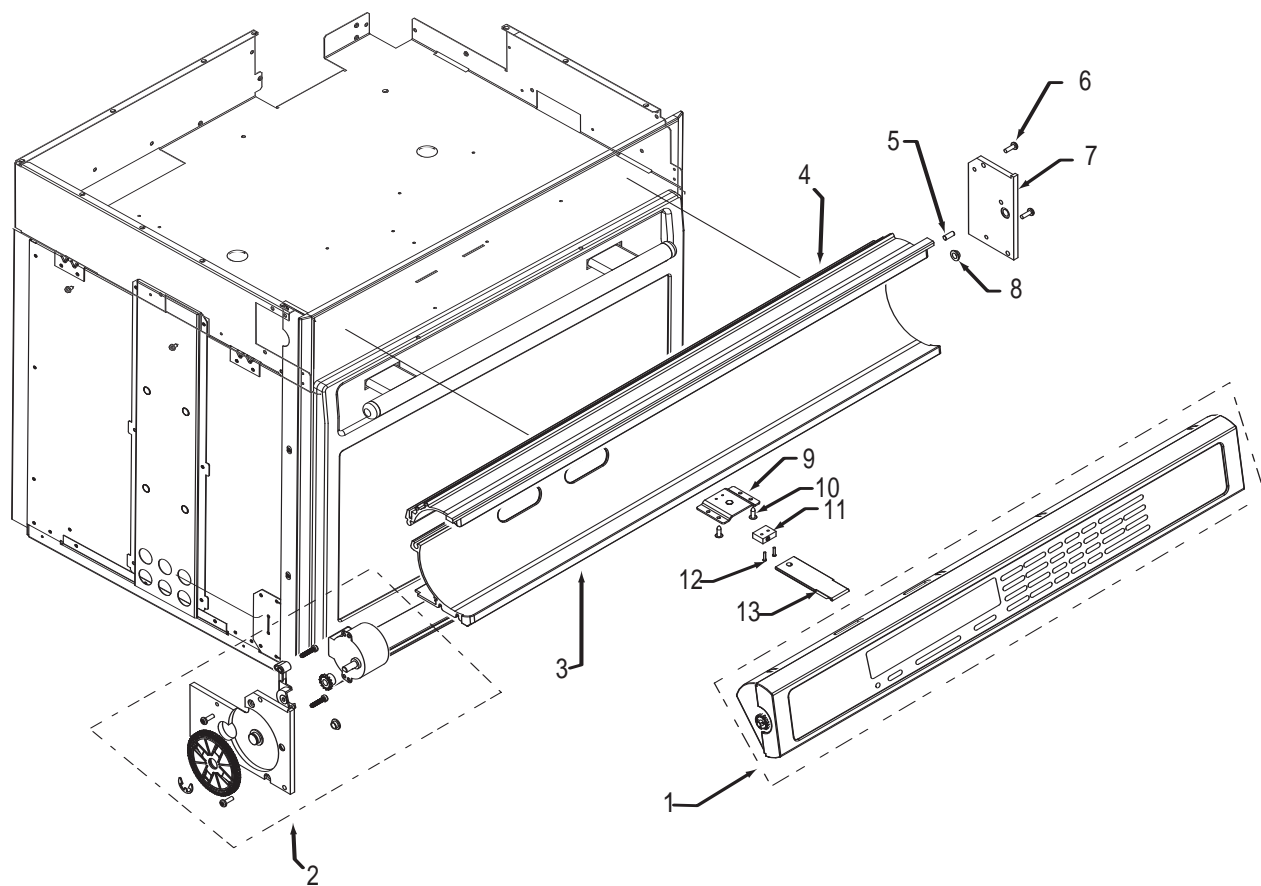

30" Oven Modules Parts List Single and Double Oven

Ref #	Part #	Description
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	801224	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
5	800950	Transformer, Light
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	806822	Board, Relay, 30"/36"
10	806874	Controller, Oven, Single, 30" (See SN Breaks)
	806551	Controller, Oven, Single, 30" (See SN Breaks)
	806875	Controller, Oven, Double, 30" (See SN Breaks)
	806552	Controller, Oven, Double, 30" (See SN Breaks)
11	820130	Bracket-Z, Latch, Top Oven
12	800383	Bracket, Support, Top Module
13	800375	Bracket, Cord, Power
14	804537	Thermal Cut Out
15	800263	Latch, Motorized
16	807542	Pan, Module, 30"
17	800386	Pan, Middle, DO
18	801212	Bracket, Air Diverter, DO
19	820129	Bracket-Z, Latch, Bottom Oven, DO


36" Oven Modules Parts List Single Oven

Ref #	Part #	Description
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	801224	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
5	800950	Transformer, Light
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	806822	Board, Relay, 30"/36"
10	806874	Oven controller, Single 36" (See SN Breaks)
	806560	Oven controller, Single 36" (See SN Breaks)
11	820130	Bracket-Z, Latch
12	800383	Bracket, Support, Top Module
13	800375	Bracket, Cord, Power
14	804537	Thermal Cut Out
15	800263	Latch, Motorized
16	807543	Pan, Module, 36"

Not Shown

800714	Cable, Relay to Controller, 28"
809450	Cable, Relay to Controller, 21"
801714	Power Cord Conduit, Single
801252	Power Cord Conduit, Double

**Oven Modules Exploded View
Single and Double Oven**

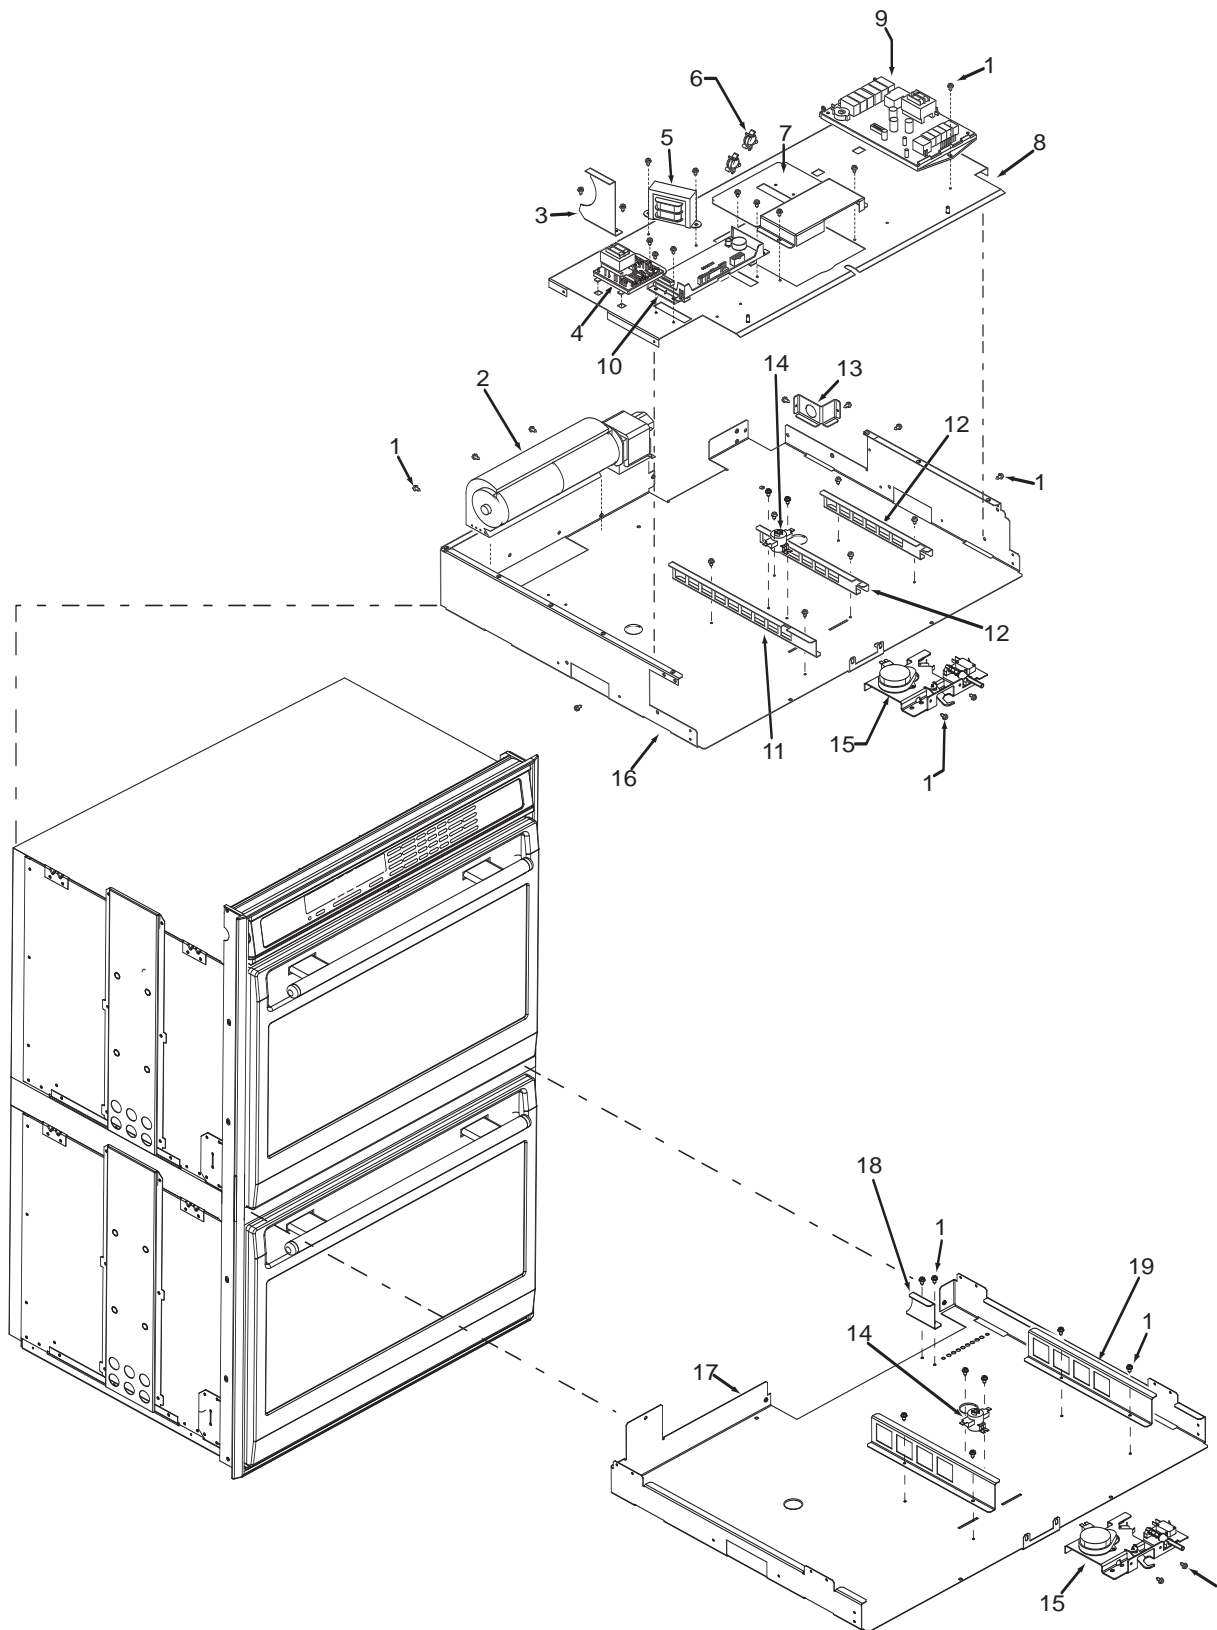

30" Oven Cavity Parts List Single and Double Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803140	Receptacle, Pizza Element
2	N/A	Cavity, Oven (Not Replaceable)
3	800307	Light, Oven
4	800943	Cover, Probe Switch
5	800942	Switch, Probe
6	800304	Catalyst, Smoke
7	809982	Sensor, Temperature
8	800701	Fan, Convection Assy., Cw
9	801544	Screw, 8-32x1/2"
10	801122	Pan, Broil Element
11	801120	Element, Broil, 30"
12	800368	Guide, Rack, Right
13	802704	Screw, 8-32x1/2 Lo Profile
14	801141	Guide, Rack, Left
15	802898	Convection Baffle Assembly, 30"
16	801417	Plate, Retainer
17	803141	Receptacle, Plug, Ceramic
18	801049	Nut, 8-32 Keps
19	809818	Fan, Convection Assy., Ccw
20	800529	Probe, Temperature
21	802988	Rack, Oven 30"
22	803062	Rack, Oven Flat 30"
23	803859	Stone, Pizza
24	800735	Rack, Pizza Stone, 30"
25	800717	Element, Pizza 3500 Watt 230V
26	803373	Clip, Retainer Hinge
27	802929	Screw 6-20X5/8 PH TRS HD T-AB, Black
28	803323	Cover, Plate
29	804712	Accessory Pkg Broiler Pan Set


36" Oven Cavity Parts List Single Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803140	Receptacle, Pizza Element
2	N/A	Cavity, Oven (Not Replaceable)
3	800307	Light, Oven
4	800493	Cover, Probe Switch
5	800942	Switch, Probe
6	800304	Catalyst, Smoke
7	809982	Sensor, Temperature
8	800701	Fan, Convection Assy., Cw
9	801544	Screw, 8-32x1/2"
10	801616	Deflector, Pan Broil
11	801615	Element, Broil, 36"
12	800734	Guide, Rack, Right
13	802704	Screw, 8-32x1/2 Lo Profile
14	801142	Guide, Rack, Left
15	802900	Convection Baffle Assembly, 36"
16	801417	Plate, Retainer
17	803141	Receptacle, Plug, Ceramic
18	801049	Nut, 8-32 Keps
19	809818	Fan, Convection Assy., Ccw
20	800529	Probe, Temperature
21	802989	Rack, Oven 36"
22	803063	Rack, Oven Flat 36"
23	803859	Stone, Pizza
24	800736	Rack, Pizza Stone, 36"
25	800717	Element, Pizza 3500 Watt 230V
26	803373	Clip, Retainer Hinge
27	802929	Screw 6-20X5/8 PH TRS HD T-AB, Black
28	803323	Cover, Plate
29	804712	Accessory Pkg Broiler Pan Set

Not Shown

803816	Light Bulb
801949	Pizza Peel

**Oven Cavity Exploded View
Single and Double Oven**

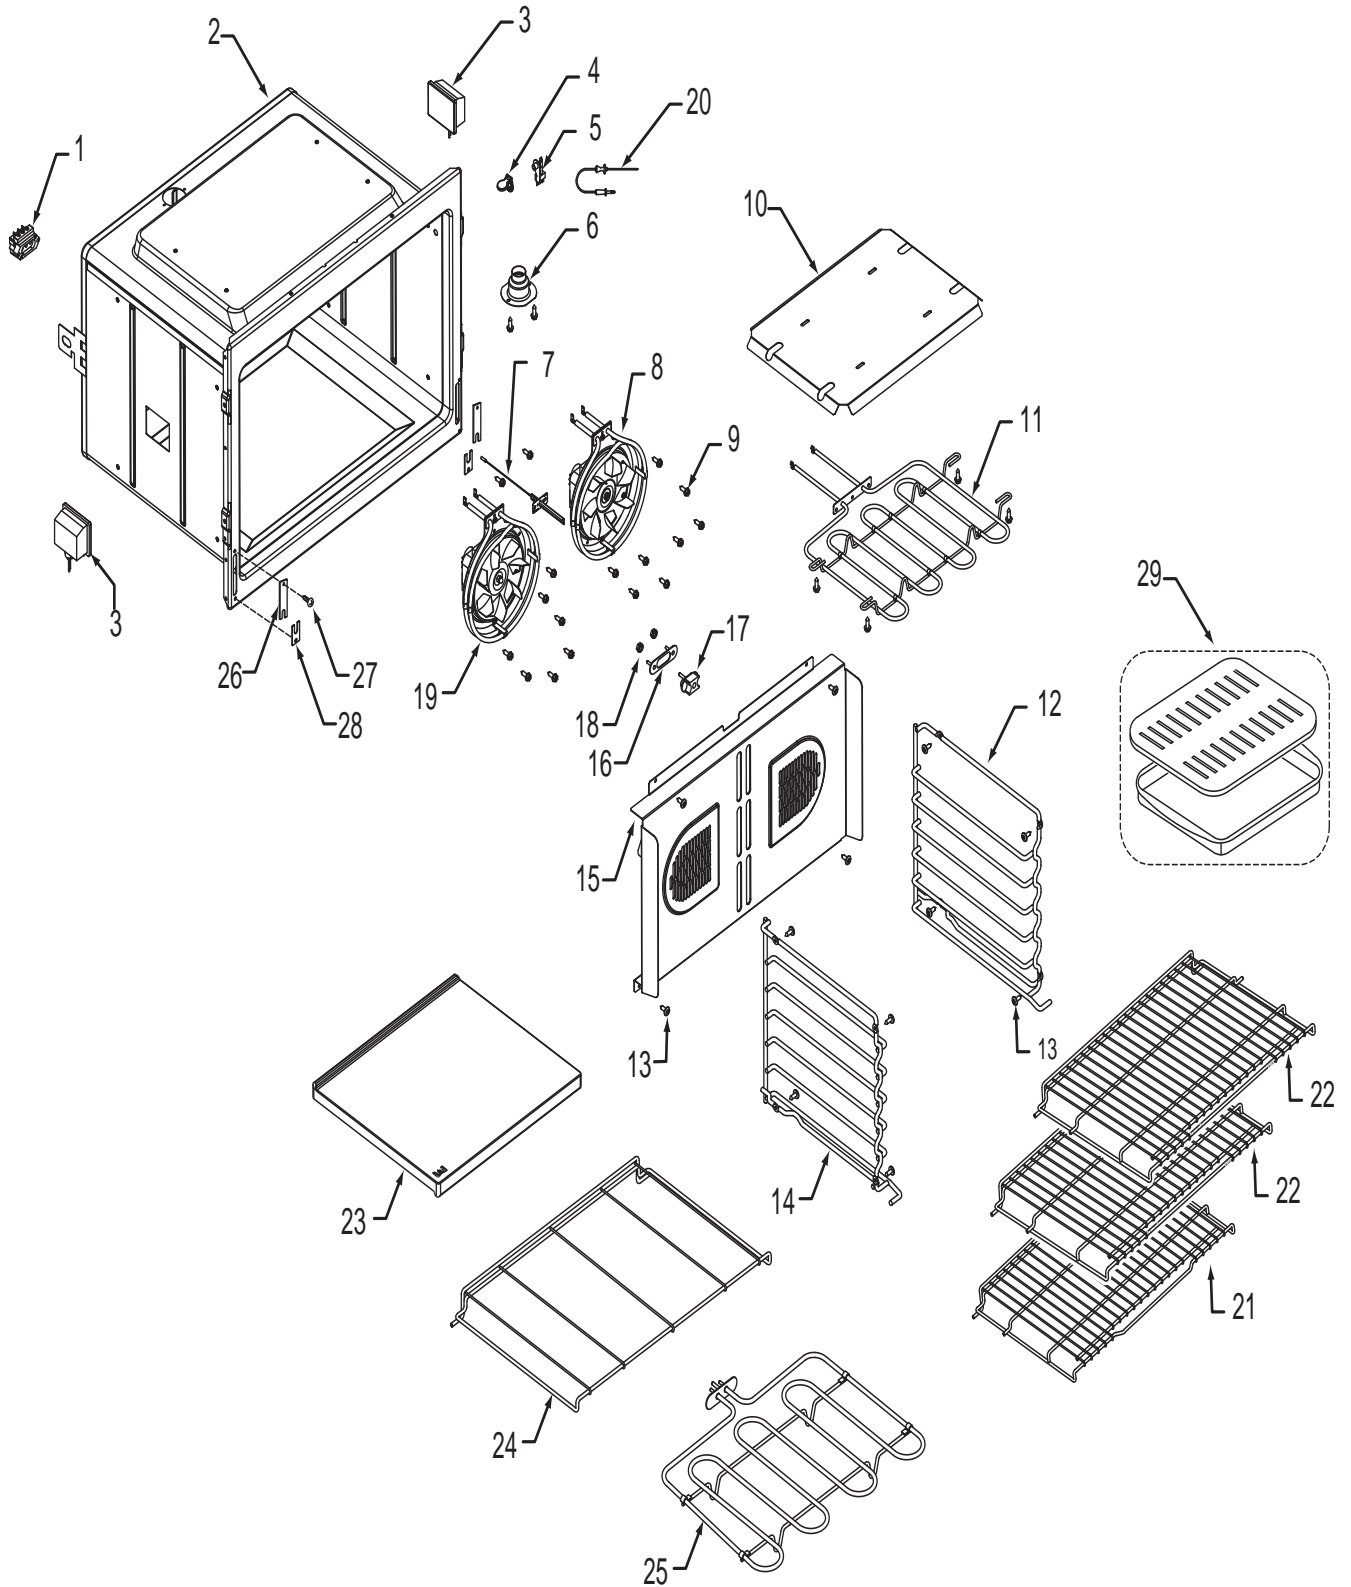


30" Oven Door Parts List Single and Double Oven

Ref #	Part #	Description
1		*Special order, Call Factory Parts Department
2	800523	Left Door Rack Guide, 30", assy
3	803324	Gasket, Door, 30"
4	800522	Right Door Rack Guide, 30"
5	801548	Screw, 8-18x1/2"
6	807708	Svce Component, Door - 30"
7	801102	Striker Plate, Door Latch
8	801542	Screw, 8-18x3/8"
9	800318	Gasket, Rope, Glass Pack, 30"
10	800915	Hydraulic Oven Door Hinge
11	809553	Triple Pane Oven Glass Pack, 30"
12	806610	Insulation, Door, Inner Top, 30"
13	806595	Insulation, Door, Inner, Sides, 30"
14	800319	Shield, Heat, Inner, Door, 30"
15	806602	Insulation, Door, Center, Top, 30"
16	820116	Heat Deflector, Center, 30"
17	800315	Shield, Heat, Door, 30"
18	806596	Insulation, Door, Outer, 30"
19	801540	Screw, 10-24x1/2"
20	800314	Bracket, Door, Outer, Mounting
21	802940	Door Skin, Outer w/window, 30" F/S
	803227	Door Skin, Outer w/window, 30" U/S
	803232	Door Skin, Outer w/window, 30" F/S, No Logo
	803235	Door Skin, Outer w/window, 30" U/S, No Logo
	803230	Door Skin, Outer w/window, 30" U/B
	803236	Door Skin, Outer w/window, 30" U/B, No Logo
	803231	Door Skin, Outer w/window, 30" U/P
	803237	Door Skin, Outer w/window, 30" U/P, No Logo
22	801204	Handle, Oven Door, Assy., 30", Sst
	801599	Handle, Oven Door, Assy., 30", Plt
	801600	Handle, Oven Door, Assy., 30", Blk
23	806606	Insulation, Door, Center, Back, 30"
24	806605	Insulation, Door, Center, Side, 30"
25	806615	Insulation, Door, Inner, Top/Btm, 30"
26	801049	Nut, 8-32
27	800689	Hinge, Wall Oven
28	802929	Sems Ph Hd Washer, 6-20x5/8

36" Oven Door Parts List Single Oven

Ref #	Part #	Description
1		*Special order, Call Factory Parts Department
2	801816	Left Door Rack Guide, 36", assy
3	803325	Gasket, Door, 36"
4	801815	Right Door Rack Guide, 36"
5	801548	Screw, 8-18x1/2"
6	807709	Svce Component, Door - 36"
7	801102	Striker Plate, Door Latch
8	801542	Screw, 8-18x3/8"
9	801764	Gasket, Rope, Glass Pack, 36"
10	800689	Hinge, Wall Oven
11	801448	Triple Pane Oven Glass Pack, 36"
12	806610	Insulation, Door, Inner Top, 36"
13	806617	Insulation, Door, Inner, Sides, 36"
14	801765	Shield, Heat, Inner, Door, 36"
15	806602	Insulation, Door, Center, Top
16	801766	Heat Deflector, Center, 36"
17	803378	Shield, Heat, Door, 36"
18	801577	Insulation, Door, Outer, 36"
19	801540	Screw, 10-24x1/2"
20	800314	Bracket, Door, Outer, Mounting
21	803245	Door Skin, Outer w/window, 36" U/S
	803246	Door Skin, Outer w/window, 36" U/B
	803247	Door Skin, Outer w/window, 36" U/P
22	801206	Handle, Oven Door, Assy., 36", Sst
	801893	Handle, Oven Door, Assy., 36", Plt
	801892	Handle, Oven Door, Assy., 36", Blk
23	806606	Insulation, Door, Center, Back
24	806623	Insulation, Door, Center, Side, 36"
25	806615	Insulation, Door, Inner, Top/Btm, 36"
26	801049	Nut, 8-32
27	800915	Hydraulic Oven Door Hinge
28	802929	Sems Ph Hd Washer, 6-20x5/8

**Oven Door Exploded View
Single and Double Oven**

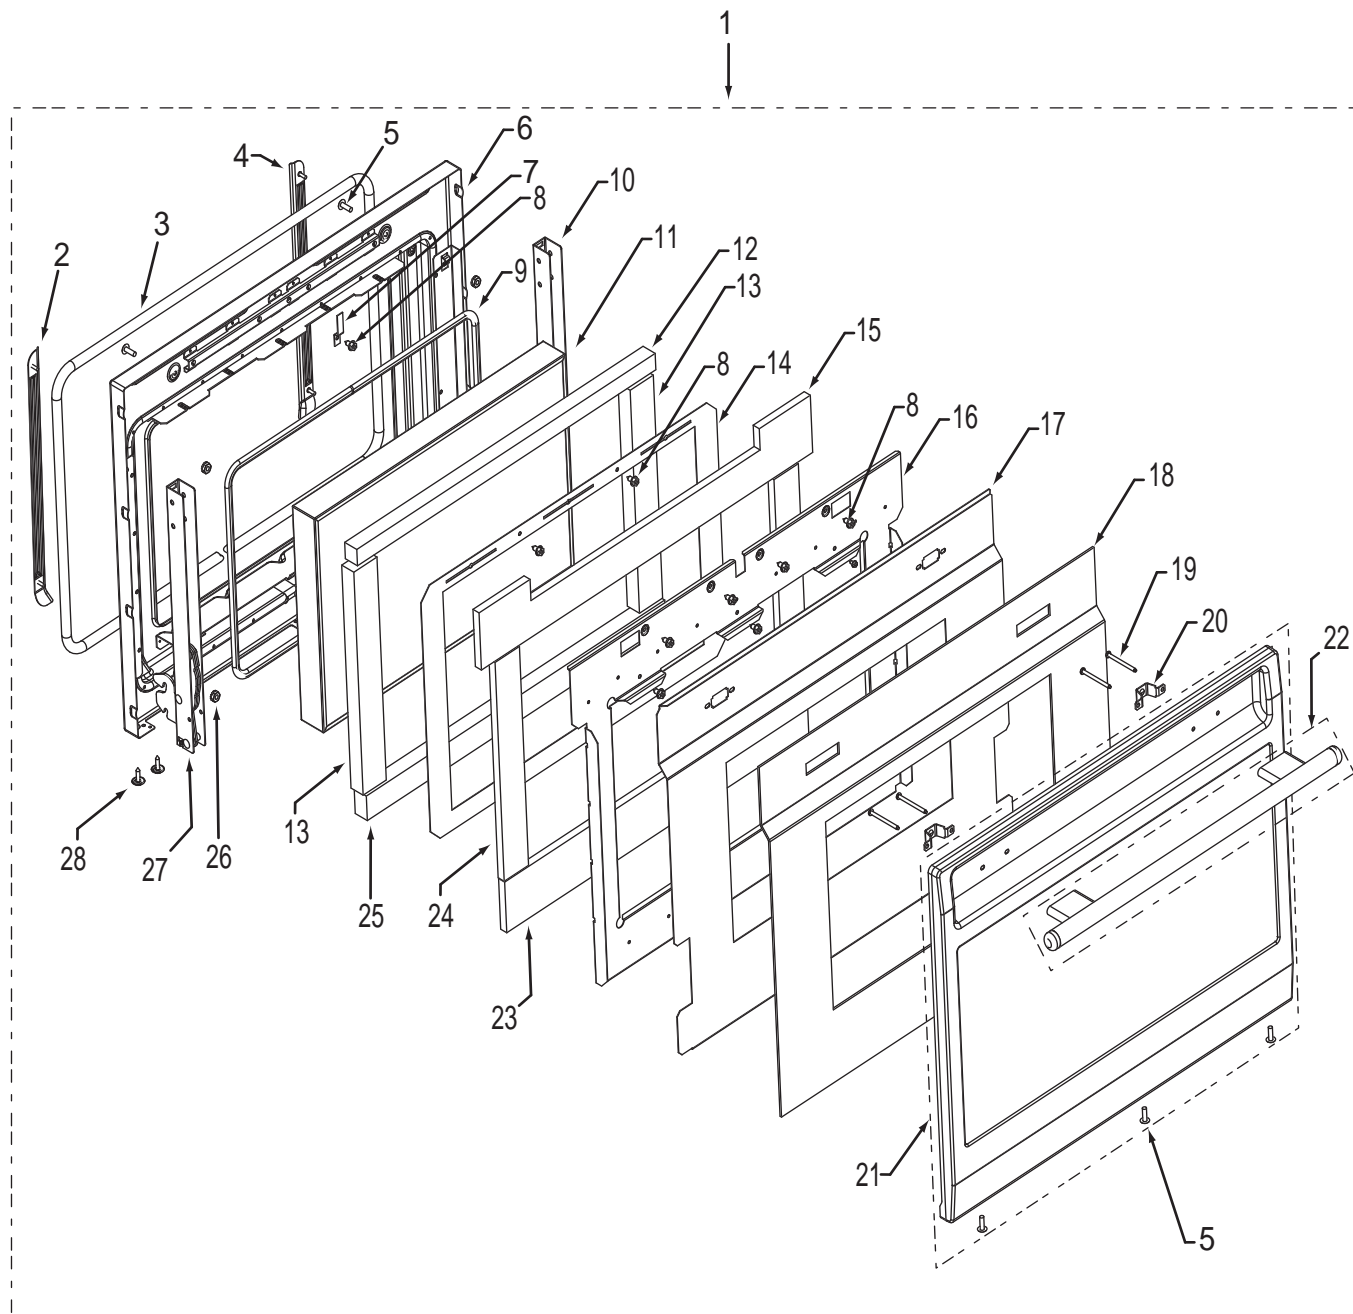

30" Back View Parts List Single and Double Oven


Ref #	Part #	Description
1	800374	Face Plate, Venting, Upper
2	800382	Stiffener, Top Module
3	801542	Screw, 8-18x3/8"
4	800379	Panel, Upper, Front
5	820118	Cover, Rear, Top Module
6	801705	Cover, Small, Top Module
7	801700	Catalyst, Sub Assembly
8	805976	Insulation, Cavity, Top
	805977	Insulation, Cavity, Top Dbl
	805978	Insulation, Cavity, Back
9	801913	Strain Relief, Metal
10	802919	Panel, Back, Top Insulation
11	802918	Panel, Inner, Back
12	801290	Channel, Divider, Side Exhaust
13	803074	Channel, Divider, Air, Single
14	820117	Panel, Back, Single Oven
15	801702*	Bake, Pan Assembly
16	800360*	Element, Bake
17	800388	Panel, Back, Double Oven
18	801169	Channel, Divider Side, Exhaust, Lrg
19	801208	Cover, Back Panel, Small
20	801143	Fan, Cooling, Lower
21	801209	Cover, Fan, Cooling
22	801170	Channel, Divider Side Exhaust, Sml
23	801171	Channel, Divider, Cooling
24	800393	Channel, Divider, Cooling, DO

36" Back View Parts List Single Oven

Ref #	Part #	Description
1	801536	Face Plate, Venting, Upper, 36"
2	801582	Stiffener, Top Module, 36"
3	801542	Screw, 8-18x3/8"
4	801478	Panel, Top Module, Front, 36"
5	801331	Cover, Large, 36"
6	801803	Cover, Small, Top Module, 36"
7	801700	Catalyst, Sub Assembly
8	805979	Insulation, Cavity, Top, 36"
	805980	Insulation, Cavity, Back, 36"
9	801913	Strain Relief, Metal, 36"
10	803329	Panel, Insulation, Back, 36"
11	802918	Panel, Inner, Back, 36"
12	803334	Channel, Exhaust, 36"
13	803327	Channel, Cooling, 36"
14	801506	Panel, Cover, Back, 36"
15	802700*	Bake, Pan Sub Assembly, 36"
16	800360*	Element, Bake, 36"

* See Bake Pan Assembly exploded view page 5-14.

**Oven Back Exploded View
Single and Double Oven**

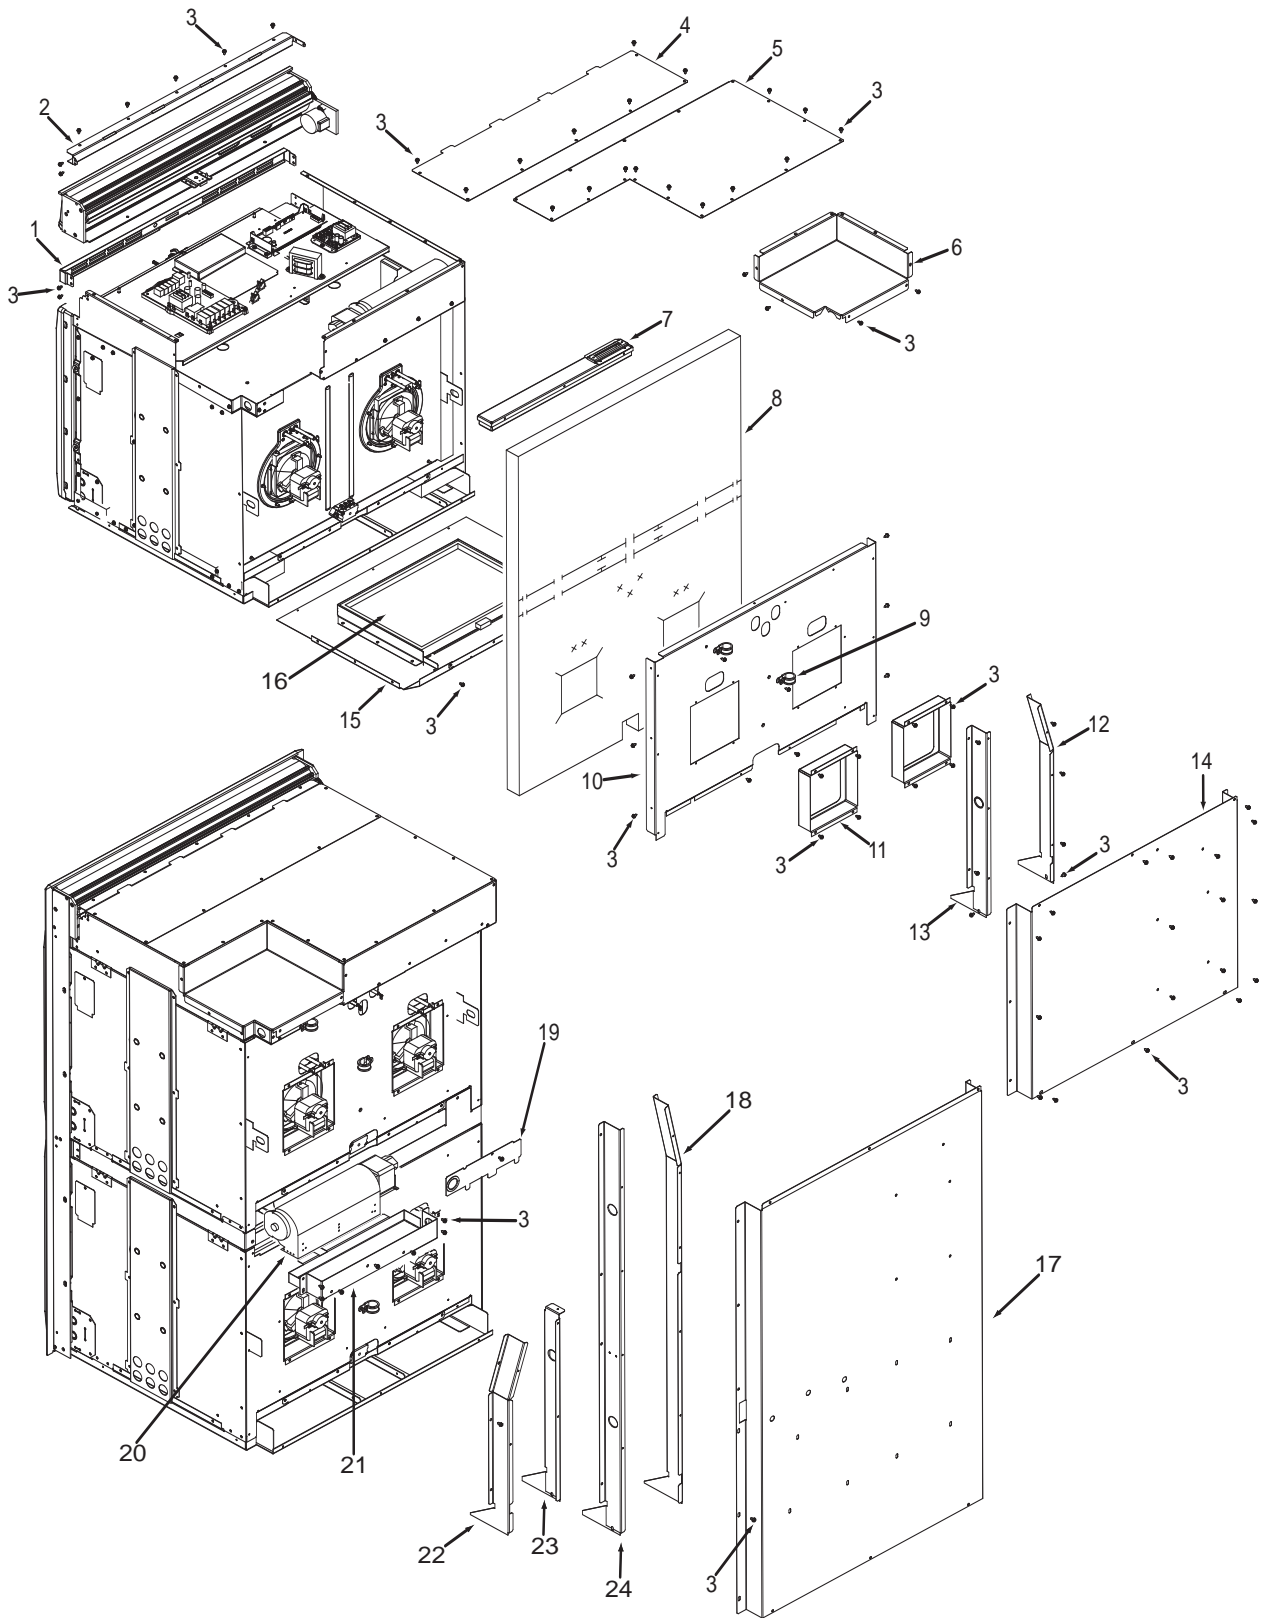


30" Side and Base View Parts List Single and Double Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	820125	Channel, Upper Venting
2	800890	Cover, Temperature Probe
3	801721	Enclosure, Rt Side 30"
4	801475	Bracket, Hold Down
5	801530	Insulation, Light
6	800926	Hinge, Pocket
7	806612	Insulation, Cavity, Hinge
8	800364	Stiffener, U-Wrap
9	806608	Insulation, Cavity, Right Side
10	804549	Base, Assembly Single
	804541	Base, Assembly, Double
11	801901	Plate, Fan Apparency
12	801728	Insulation, Switch
13	802728	Switch, Fan Apparency
14	806609	Insulation, Cavity, Left Side
15	801720	Enclosure, Left Side, 30"


36" Side and Base View Parts List Single Oven

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801335	Channel, Upper Venting
2	800890	Cover, Temperature Probe
3	801724	Enclosure, Rt Side
4	801475	Bracket, Hold Down
5	801530	Insulation, Light
6	800926	Hinge, Pocket
7	806612	Insulation, Cavity, Hinge
8	800364	Stiffener, U-Wrap
9	806619	Insulation, Cavity, Right Side
10	804553	Base, Assembly, 36"
11	801901	Plate, Fan Apparency
12	801728	Insulation, Switch
13	802728	Switch, Fan Apparency
14	806618	Insulation, Cavity, Left Side
15	801723	Enclosure, Left Side,

**Oven Side and Base Exploded View
Single and Double Oven**

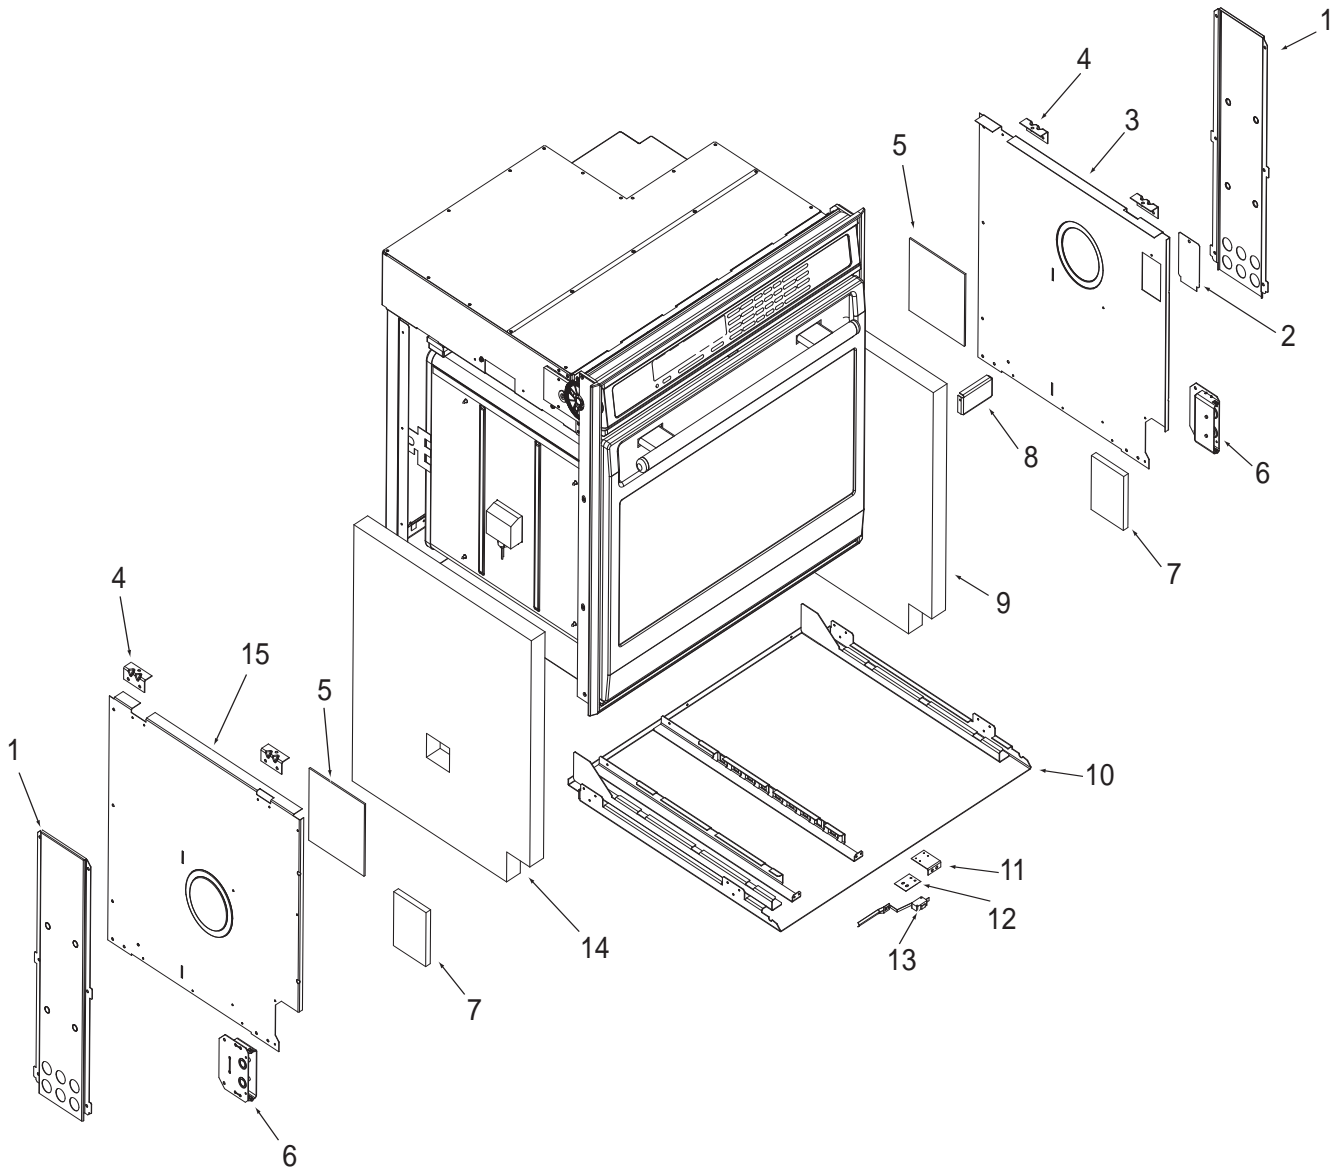

Bake Pan Assembly Exploded View
Single and Double Oven

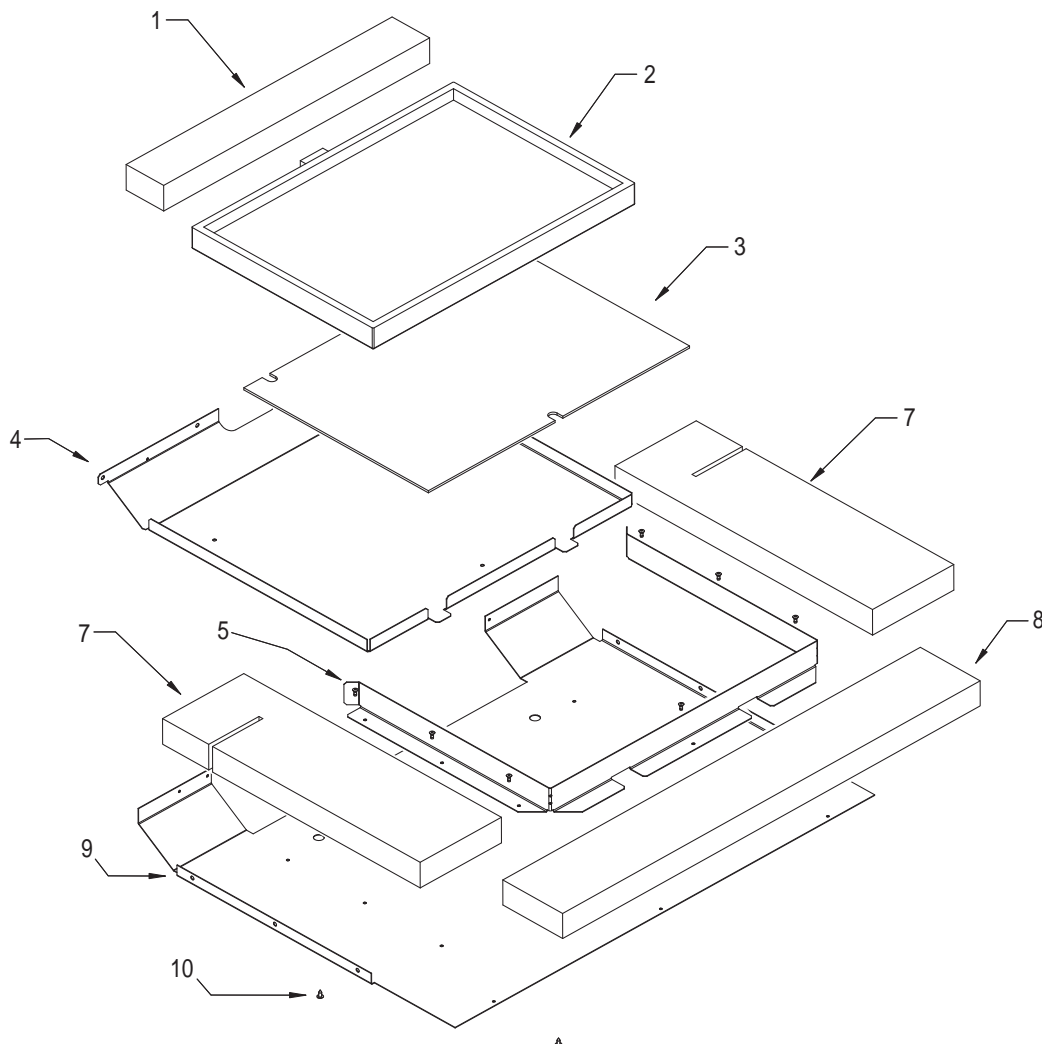



30" Bake Pan Parts List
Single and Double Oven

Ref #	Part #	Description
1	806598	Insulation, Bake Element , Behind
2	800360	Element, Bake
3	801159	Insulation, Bake Element, Under
4	800359	Pan, Bake Element
5	800358	Bracket, Bake Element
6	801542	Screw, 8-18x3/8"
7	806604	Insulation, Base, U-Wrap Sides
8	806634	Insulation, Base, U-Wrap Front
9	801722	Enclosure, Bottom, 30"
10	801553	Screw, 6-20x3/8"

36" Bake Pan Parts List
Single Oven

Ref #	Part #	Description
1	806598	Insulation, Bake Element , Behind
2	800360	Element, Bake
3	801159	Insulation, Bake Element, Under
4	800359	Pan, Bake Element
5	800358	Bracket, Bake Element
6	801542	Screw, 8-18x3/8"
7	806620	Insulation, Base, U-Wrap Sides
8	806621	Insulation, Base, U-Wrap Front
9	801725	Enclosure, Bottom, 36"
10	801553	Screw, 6-20x3/8"

Trim Exploded View

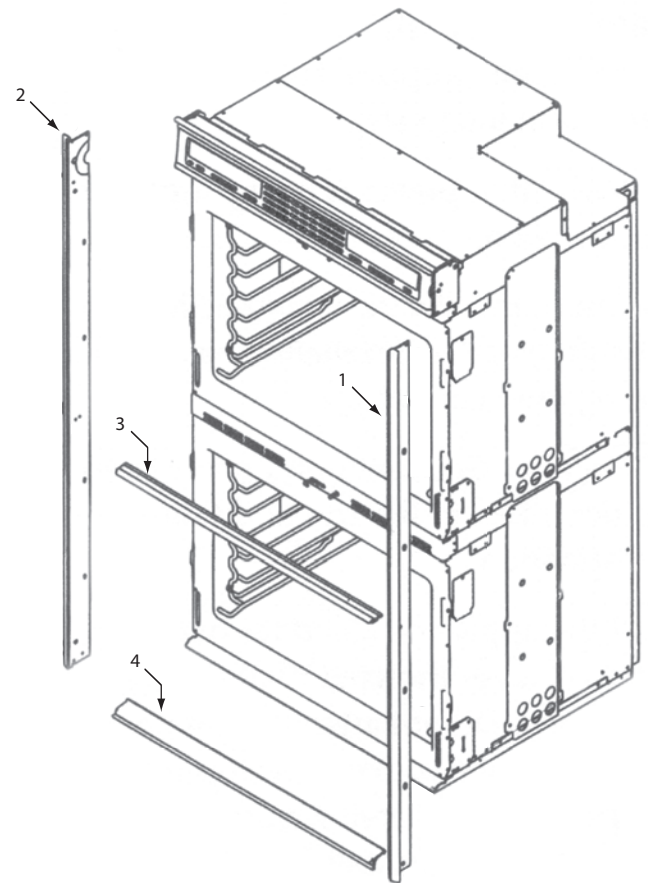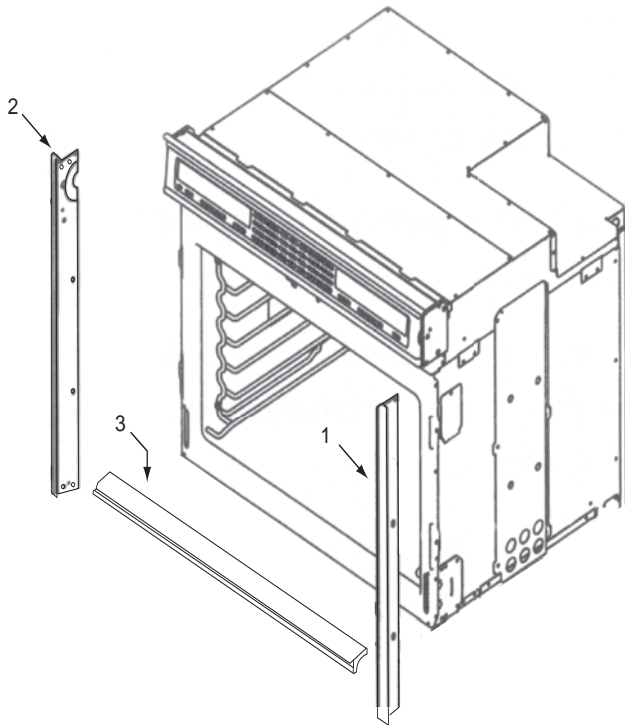

Model #	Ref#	Part #	Description
SO30F/S	1	800706	Extrusion, Side, Right
	2	800707	Extrusion, Side, Left
	3	805115	Extrusion, Bottom
SO36U/S	1	800939	Extrusion, Side, Right
	2	800938	Extrusion, Side, Left
	3	802731	Extrusion, Bottom
SO30U/B	1	800525	Extrusion, Side, Right
	2	800524	Extrusion, Side, Left
	3	805175	Extrusion, Bottom
SO36U/B	1	802740	Extrusion, Side, Right
	2	802739	Extrusion, Side, Left
	3	802743	Extrusion, Bottom

Model #	Ref#	Part #	Description
DO30F/S	1	803967	Extrusion, Side, Right
	2	800390	Extrusion, Side, Left
	3	802719	Extrusion, Middle,
	4	805115	Extrusion, Bottom
DO30U/S	1	800389	Extrusion, Side, Right
	2	800390	Extrusion, Side, Left
	3	802719	Extrusion, Middle,
	4	805115	Extrusion, Bottom
SO30U/P	1	800518	Extrusion, Side, Right
	2	800519	Extrusion, Side, Left
	4	805174	Extrusion, Bottom
SO36U/P	1	802742	Extrusion, Side, Right
	2	802741	Extrusion, Side, Left
	4	802744	Extrusion, Bottom
DO30U/P	1	802738	Extrusion, Side, Right
	2	802737	Extrusion, Side, Left
	3	802736	Extrusion, Middle
	4	805174	Extrusion, Bottom
DO30U/B	1	800528	Extrusion, Side, Right
	2	800527	Extrusion, Side, Left
	3	800526	Extrusion, Middle
	4	805175	Extrusion, Bottom