 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



Kenmore 116.3361190 Owner's Manual

 
[Shop genuine replacement parts for Kenmore
116.3361190](#)

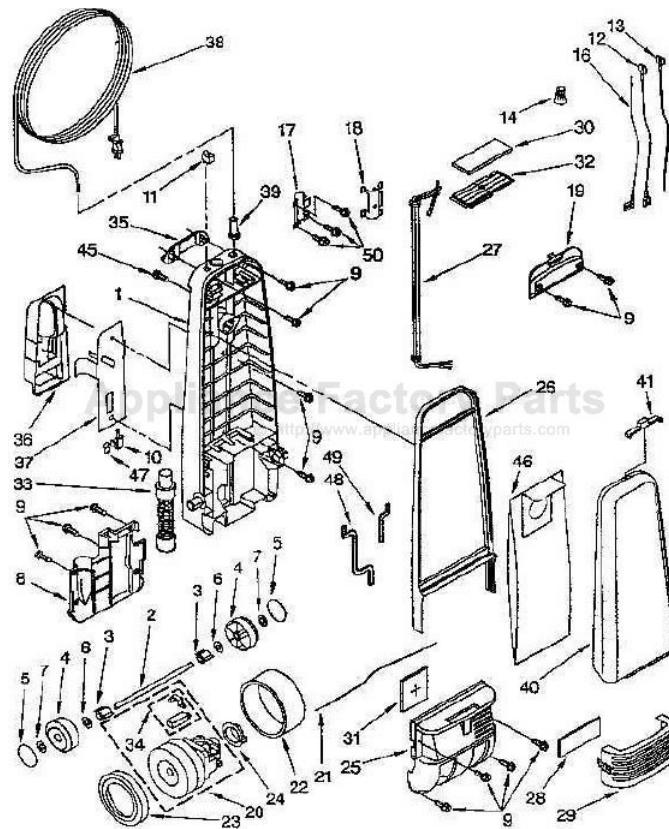

[Find Your Kenmore Vacuum Cleaner Parts - Select From 745 Models](#)

----- Manual continues below -----


Model # 116.3361190

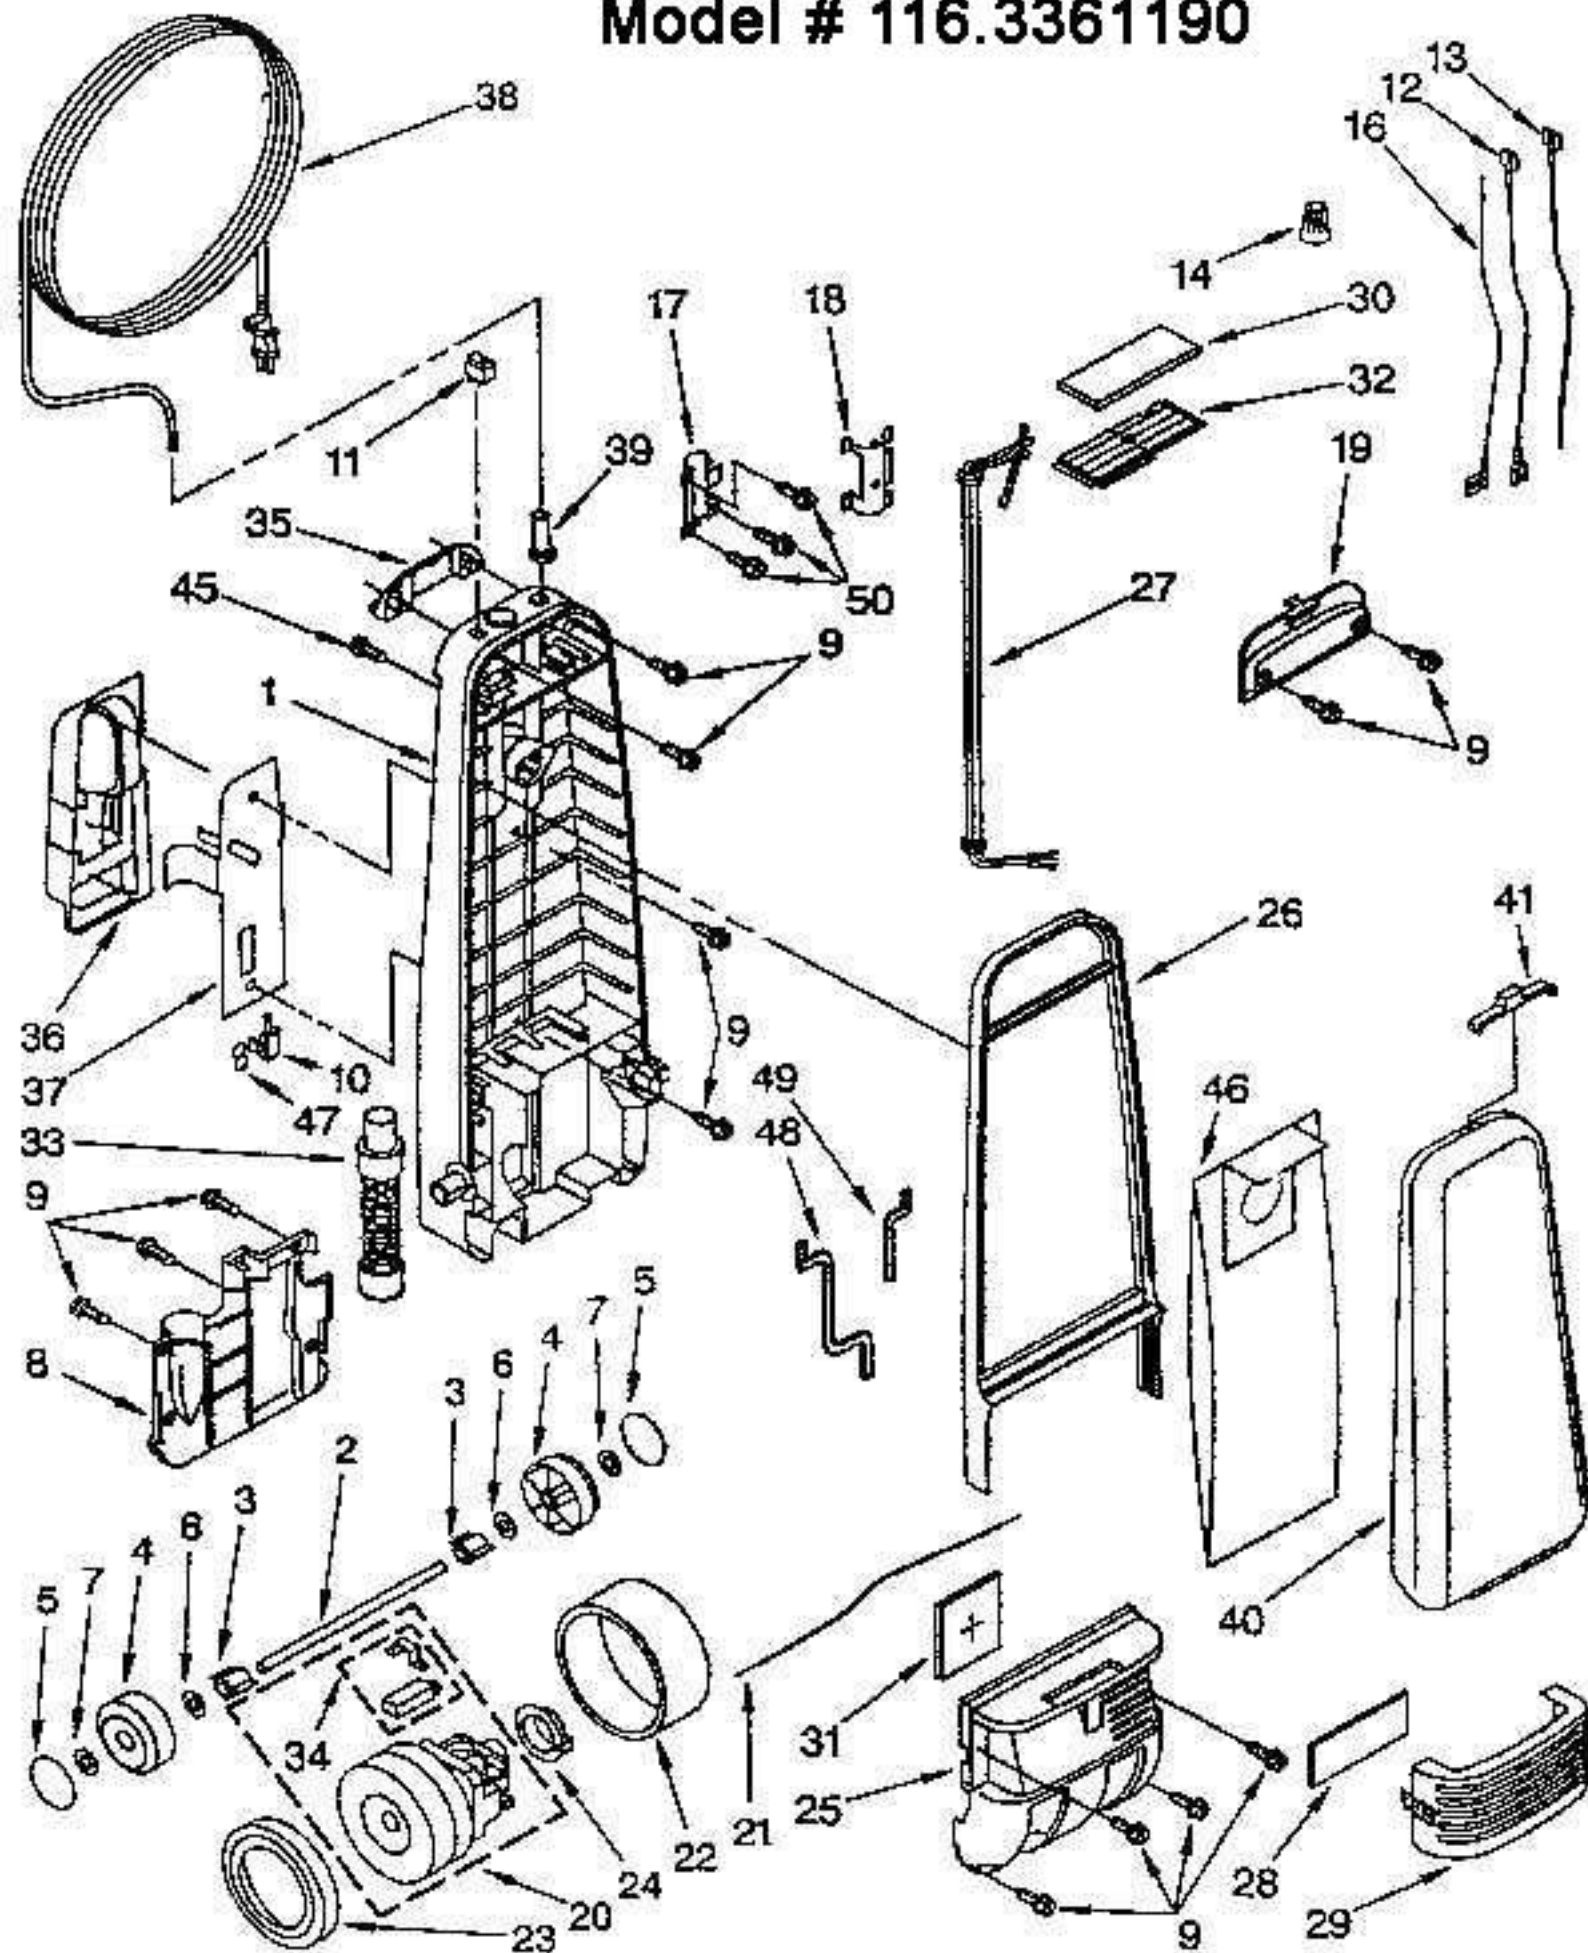

1	KE-4368974	COMPARTMENT, DUST
2	KE-4368648	SHAFT, REAR WHEEL
3	KE-4368649	BEARING, SHAFT
4	KE-4369049	WHEEL, REAR
5	KE-4369050	LABEL, WHEEL
6	KE-681384	WASHER
7	KE-681689	CLIP, SPRING
8	KE-4368968	COVER, REAR WHEEL
9	KE-4368563	SCREW, # 16
10	KE-4368653	ON-OFF SWITCH, ABOVE FLOOR
11	KE-4369051	SWITCH, ON-OFF
12	KE-4368655	WIRE LEAD, BLUE
13	KE-4368656	WIRE LEAD, BLACK
14	KE-4368522	NUT, WIRE
16	KE-4368881	WIRE LEAD, BLACK
17	KE-4368660	FITTING, HANDLE
18	KE-4368661	SUPPORTER, HANDLE
19	KE-4369052	COVER, SWITCH
20	KE-4369053	MOTOR, UNIT
21	KE-4368662	WIRE LEAD, WHITE
22	KE-4368663	SUPPRESSOR, NOISE
23	KE-4368664	SUPPORT, MOTOR FRONT
24	KE-4368665	SUPPORT, MOTOR REAR
25	KE-4369054	HOUSING, MOTOR
26	KE-4369055	BUMPER
27	KE-4368748	CORD, CONNECTION
28	KE-4368669	FILTER
29	KE-4369056	COVER, FRONT FILTER
30	KE-4368671	FILTER, SECONDARY
31	KE-4368672	FILTER, EXHAUST
32	KE-4368673	SCREEN, FILTER SUPPORTER
33	KE-4368674	HOSE ASSEMBLY
34	KE-4368626	BRUSH ASSEMBLY
35	KE-4368678	HANDLE, CARRYING
36	KE-4368679	TRAY, ATTACHMENT
37	KE-4368680	PLATE, SUPPORT
38	KE-4369057	CORD, POWER
39	KE-4369058	PROTECTOR, RUBBER
40	KE-4369063	COVER, DUST
45	KE-4368718	SCREW, HANDLE
46	KER-1468	BAG, DUST SEARS NO. 20-50688
47	KE-4368716	LEVER, SWITCH
48	KE-4368606	PACKING, LEFT
49	KE-4368607	PACKING, RIGHT
50	KE-4368641	SCREW, # 20

NOZZLE AND MOTOR PARTS

 
For Model: 116.3361190

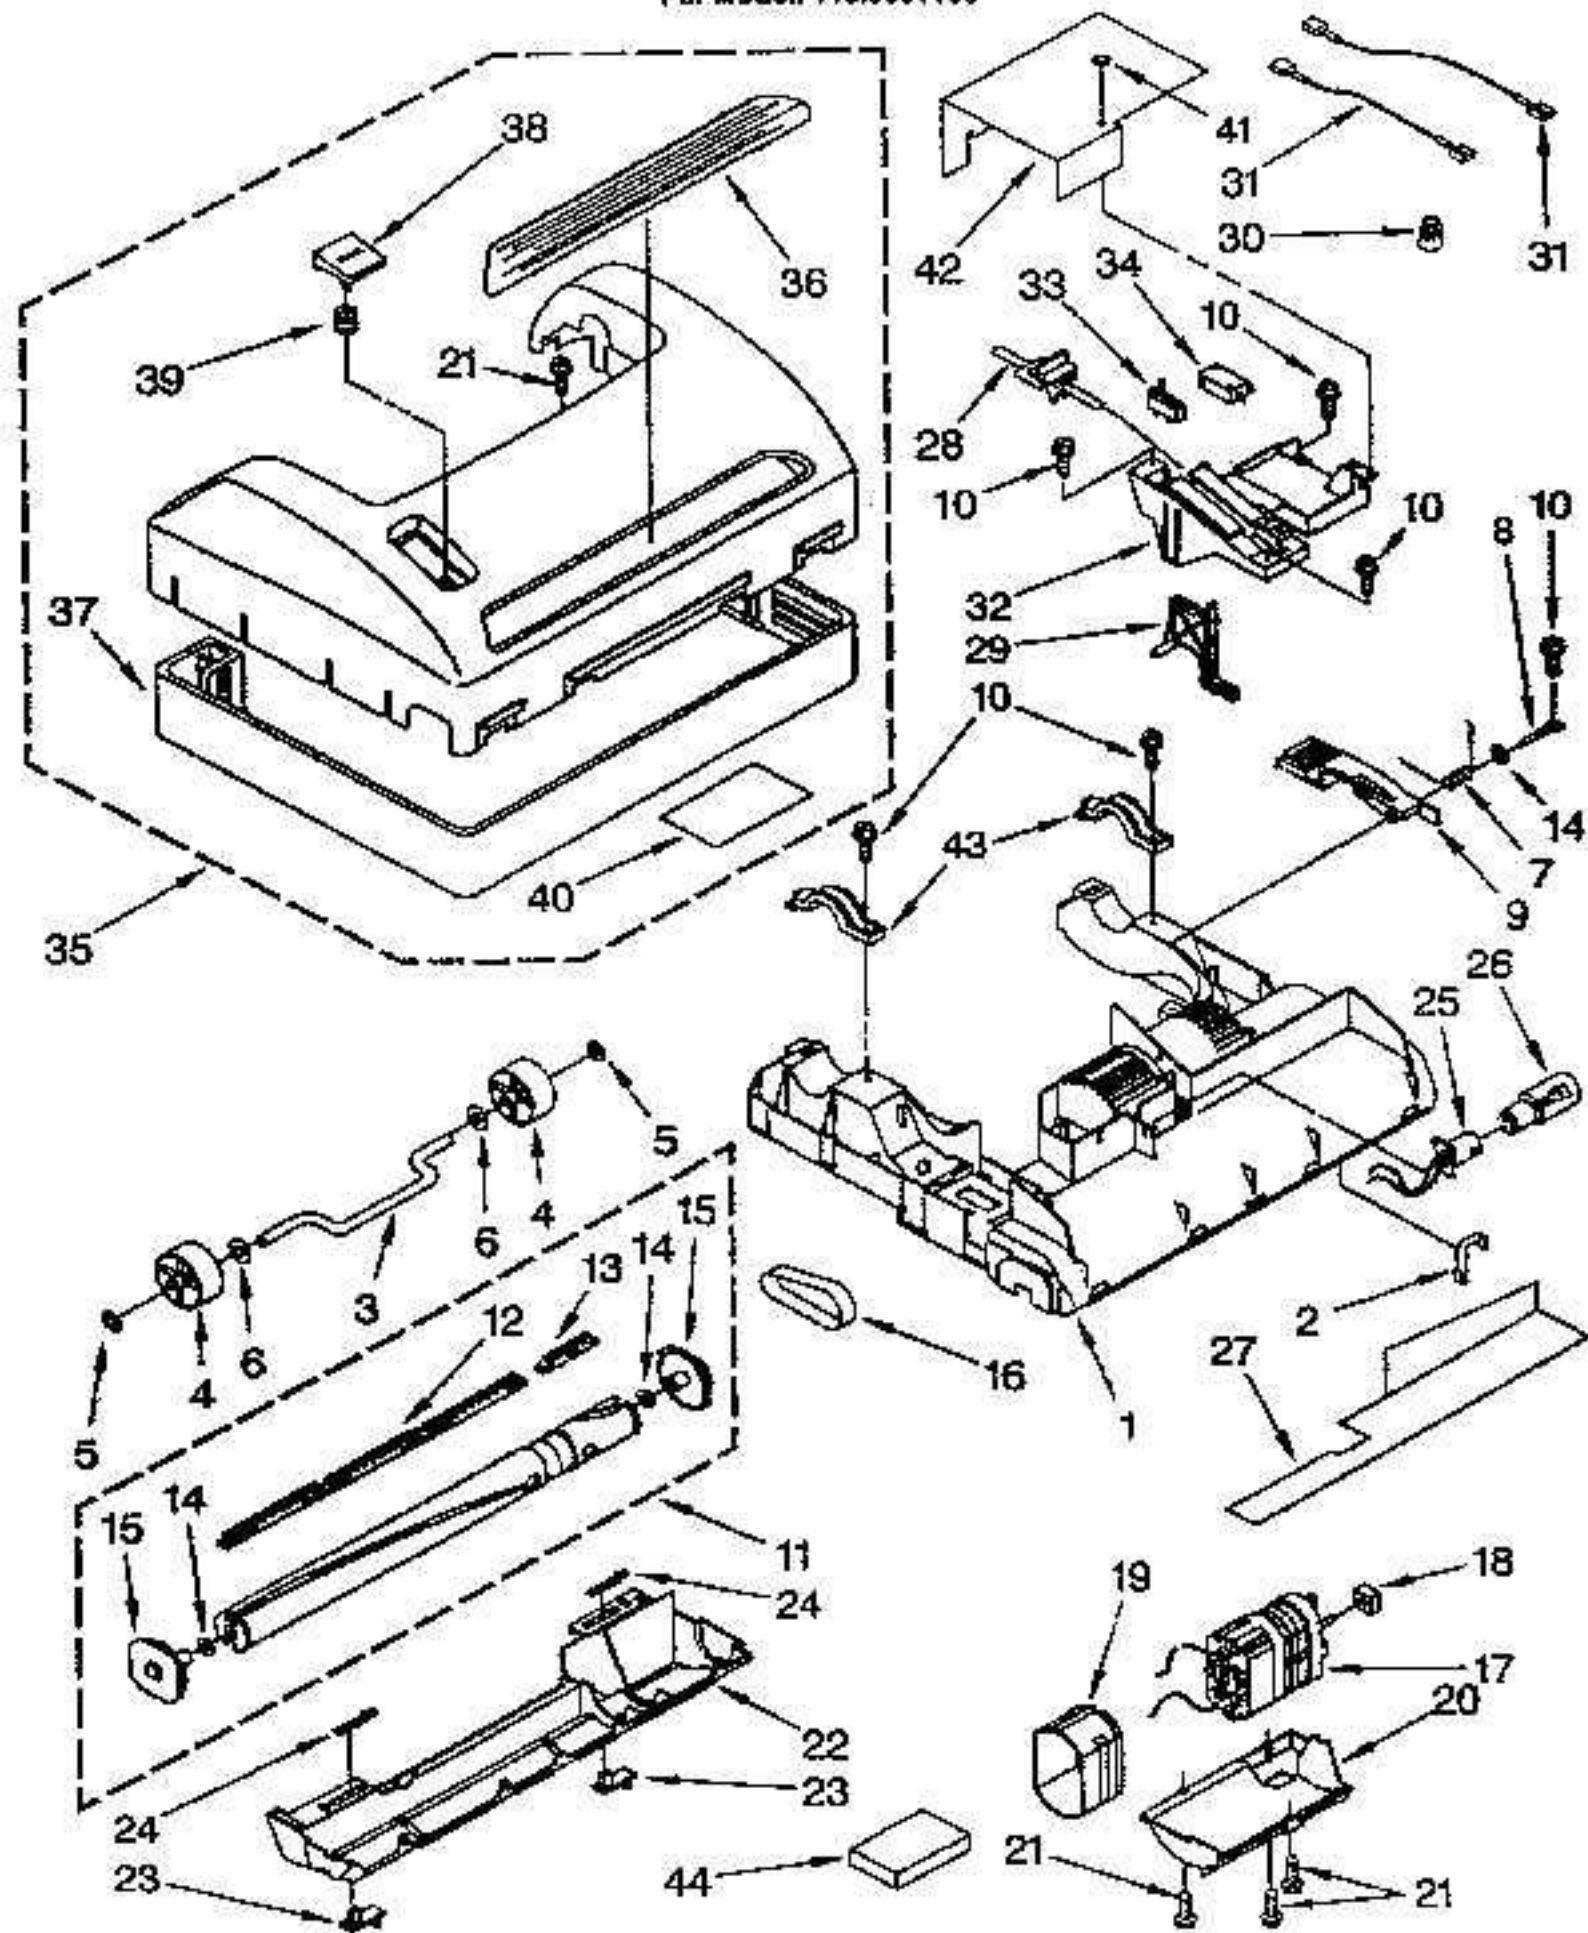

1	KE-4368627	LOWER BODY
2	KE-4368628	GUARD, BELT
3	KE-744505	AXLE-FRONT
4	KE-4368629	ROLLER, NOZZLE
5	KE-681689	CLIP, SPRING
6	KE-681384	WASHER
7	KE-4368630	SPRING, PEDAL
8	KE-4368631	SHAFT, PEDAL
9	KE-4369047	PEDAL, HANDLE RELESE
10	KE-4368563	SCREW, # 16
11	KE-4368634	AGITATOR ASSEMBLY
12	KE-4368635	BRUSH, LONG
13	KE-4368636	BRUSH, SHORT
14	KE-681424	WASHER
15	KE-4368577	BEARING ASSEMBLY
16	ROR-1000	BELT SEARS NO. 20-5286
17	KE-4368638	MOTOR
18	KE-743498	SEAL, SHAFT
19	KE-4368639	SUPPORT, MOTOR
20	KE-4368640	COVER, MOTOR
21	KE-4368641	SCREW, # 20
22	KE-4369048	COVER, LOWER PLATE
23	KE-4368643	LATCH, COVER
24	KE-4368644	SPRING, LATCH
25	KE-4368645	SOCKET, BULB
26	FA-3515	BULB, LIGHT SEARS NO. 20-5240
27	KE-4368646	REFLECTOR BASE
28	KE-4369059	KNOB, HEIGHT ADJUST
29	KE-4368688	CAM, HEIGHT ADJUST
30	KE-4368522	NUT, WIRE
31A	KE-4368689	BLACK
31B	KE-4368690	RED
31	NA	LEAD, WIRE
32	KE-4368691	SUPPORT, SLIDER
33	KE-4368692	PROTECTOR, OVERLOAD
34	KE-4368693	ON-OFF SWITCH, BARE FLOOR
35	KE-4369060	NOZZLE HOUSING ASSEMBLY
36	KE-4368695	COVER, WINDOW
37	KE-4369061	GUARD, FURNITURE
38	KE-4369062	BUTTON, RESET
39	KE-4368698	SPRING, RESET BUTTON
40	KE-4368699	REFLECTOR, HOOD
41	KE-4155375	SPRING, PUSH-NUT
42	KE-4368720	COVER, WIRE
43	KE-4368721	HOLDER, PLASTIC
44	KE-4368873	PACKING, MOTOR SEAL (LOWER)

HANDLE PARTS

 For Model: 116.3361190

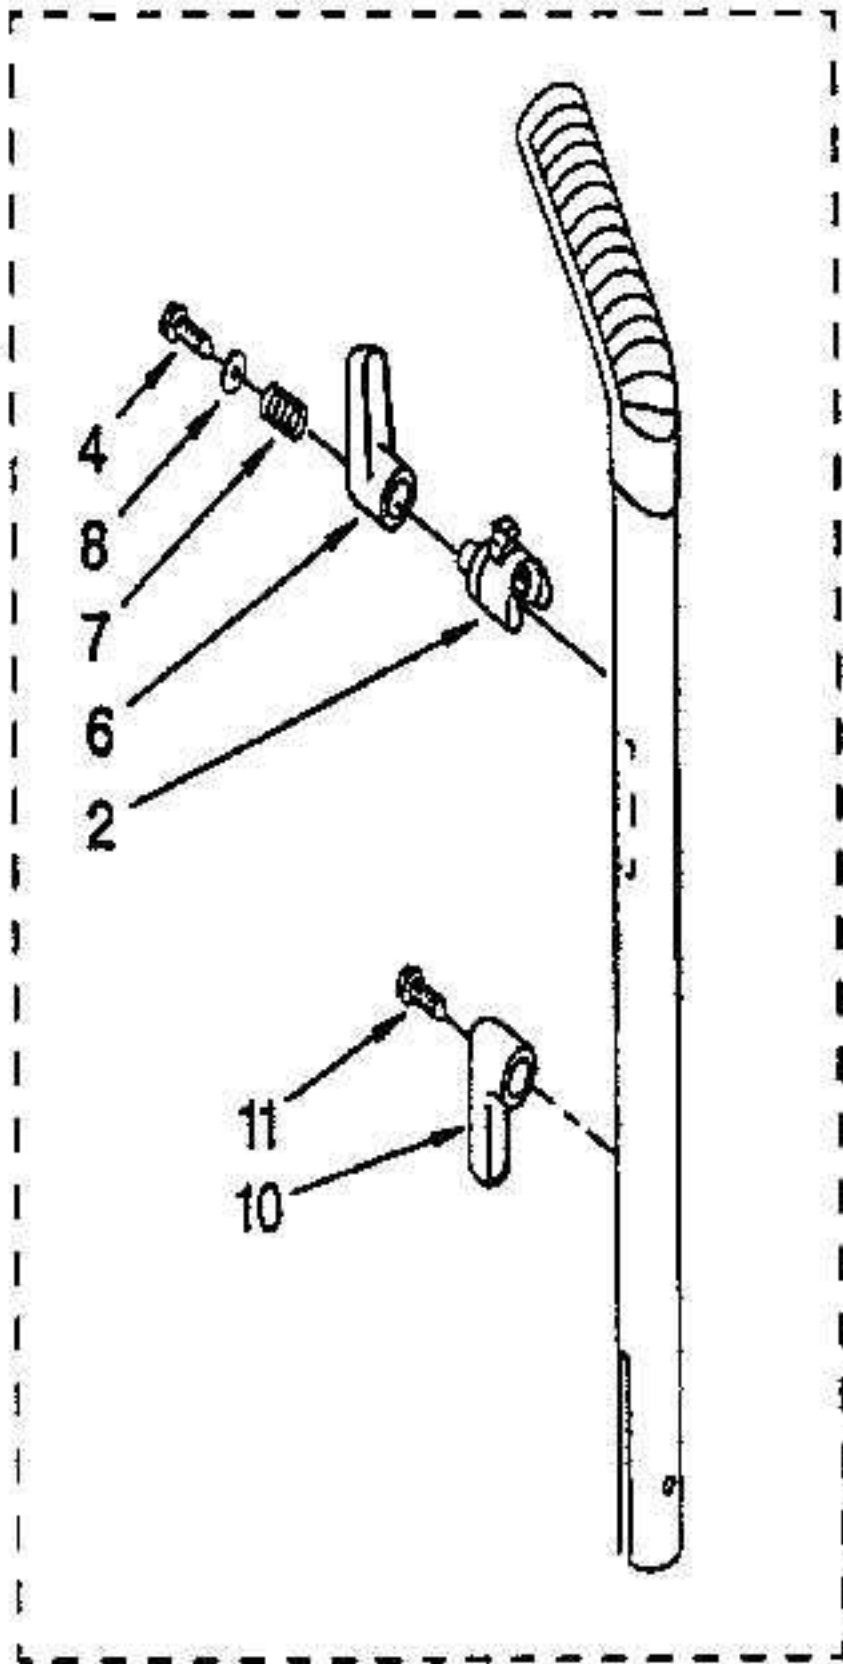





12

LITERATURE PARTS

1	KE-4369065	HANDLE UNIT (INCLUDES ITEMS 2, 4, 6, 7, 8, 10 & 11)
2	KE-4369068	LINER, CORD HOOK
4	KE-4368938	SCREW, # 45
4A	KE-681550	SCREW, REPAIR
6	KE-4369067	HOOK, UPPER CORD
7	KE-4368713	SPRING, CORD HOOK
8	KE-4368714	WASHER
10	KE-4369066	HOOK, LOWER CORD
11A	KE-4148999	SCREW, REPAIR
11	KE-4368641	SCREW, # 20

HOSE AND ATTACHMENT PARTS

    For Model: 116.3361190

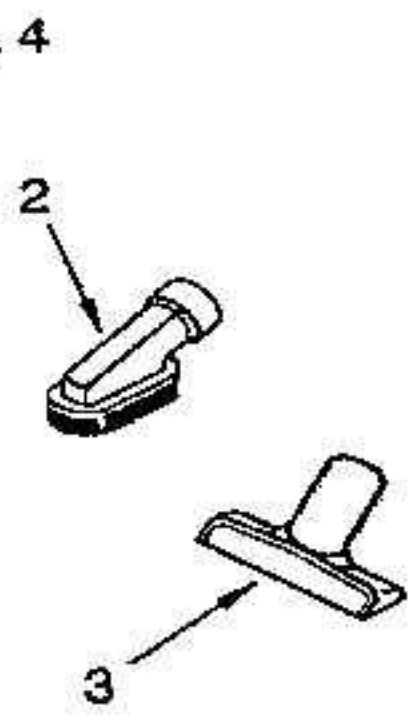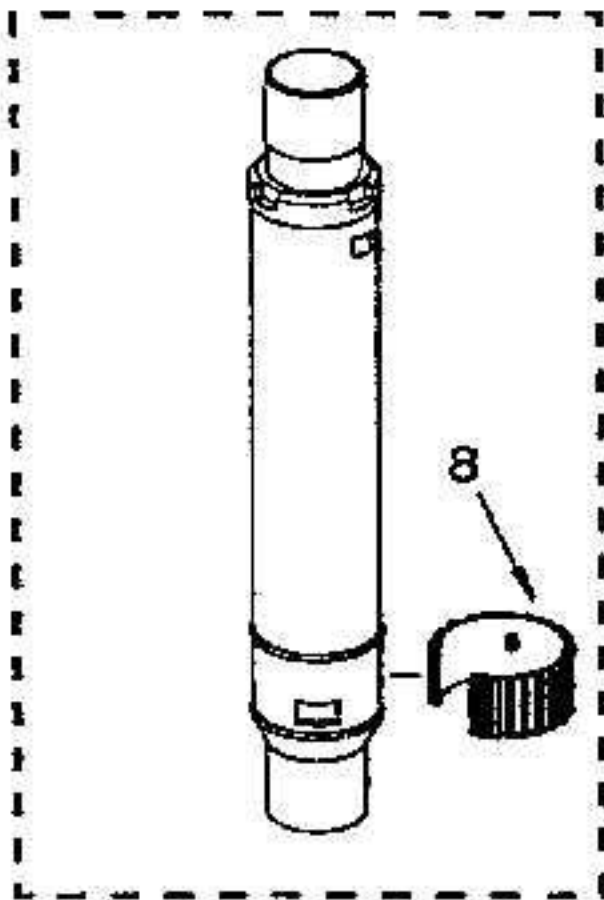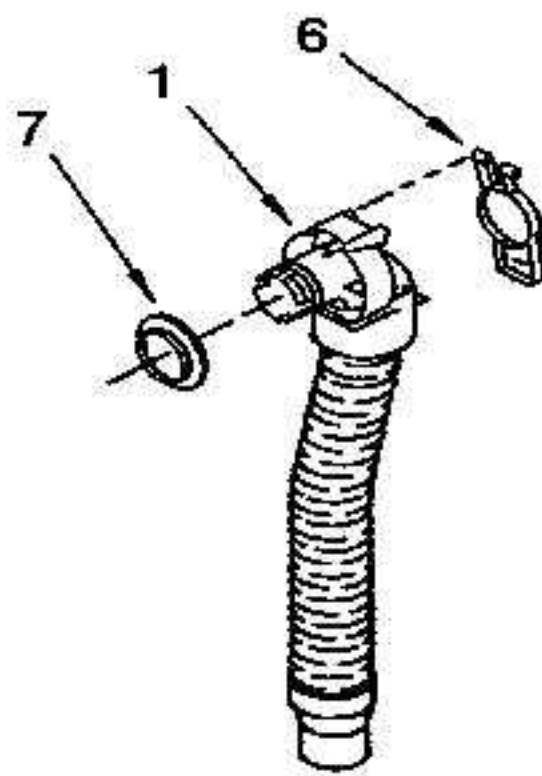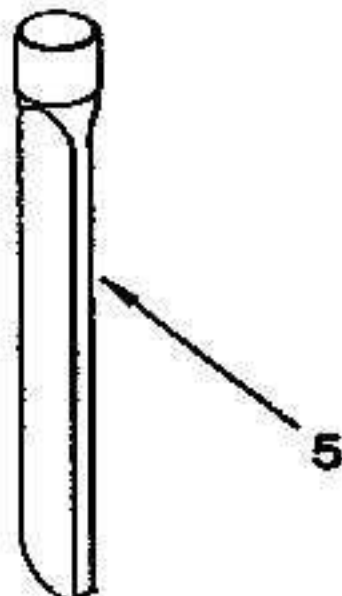

1	KE-4368675	HOSE UNIT
2	KE-4368681	BRUSH, DUSTING
3	KE-4368682	NOZZLE, UPHOLSTERY
4	KE-4368995	WAND TELESCOPING
5	KE-4368684	TOOL, SERVICE
6	KE-4368676	COVER, INLET
7	KE-4368677	PACKING, SUCTION INLET
8	KE-4368996	REGULATOR, SUCTION