

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



COMFORT-AIRE HGM12A Owner's Manual

[Shop genuine replacement parts for COMFORT-AIRE
HGM12A](#)



[Find Your COMFORT-AIRE HVAC Parts - Select From 1486 Models](#)

----- Manual continues below -----

PARTS LIST

AUXILIARY ELECTRIC HEATERS

HGM/HGL

FOR

GEOHERMAL HEAT PUMP MODELS

HRH/HRV

HEAT CONTROLLER, INC.

1900 Wellworth Ave. Jackson, MI 49203
www.heatcontroller.com
517-787-2100

PART #	DESCRIPTION	HGM5A	HGM8A	HGM10A	HGM12A	HGL10A	HGL15A	HGL20A
--------	-------------	-------	-------	--------	--------	--------	--------	--------

HEATER ELEMENTS

18B0001N01	HEATER ELEMENT 4kW 230V							
18B0002N01	HEATER ELEMENT 5kW 230V	1						
18B0003N01	HEATER ELEMENT 8kW 230V		1					
18B0004N01	HEATER ELEMENT 10kW 230V			1				
18B0005N01	HEATER ELEMENT 12kW 230V				1			
18B0006N01	HEATER ELEMENT 10kW 230V					1		
18B0007N01	HEATER ELEMENT 15kW 230V						1	
18B0008N01	HEATER ELEMENT 20kW 230V							1

HEATER LIMITS

13B0005N01	HEATER LIMIT 115/155	1	2	2	3	2	3	4
------------	----------------------	---	---	---	---	---	---	---

CIRCUIT BREAKERS

16B0001N01	CIRCUIT BREAKER 25				1		1	
16B0001N02	CIRCUIT BREAKER 40				1			
16B0001N03	CIRCUIT BREAKER 50						1	2

HEATER PARTS

69169700	POWER DISTRIBUTION BLOCK	1	1	1		1		
17B0003N01	CONTROL BOARD, ELECTRIC HEAT	1	1	1	1	1	1	1
11B0002N01	HARNESS, LOW VOLT CXM	1	1	1	1	1	1	1