


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



COMFORT-AIRE A-DVH18SD-1 Owner's Manual

[Shop genuine replacement parts for COMFORT-AIRE
A-DVH18SD-1](#)

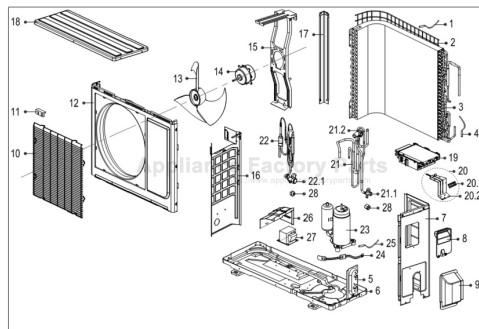

[Find Your COMFORT-AIRE HVAC Parts - Select From 1486 Models](#)

----- Manual continues below -----

HEAT CONTROLLER


**REPLACEMENT
PARTS LIST**

Single Zone Inverter Mini-Splits

A-DVH18SD-1

Outdoor Condenser

EXPLODED VIEW

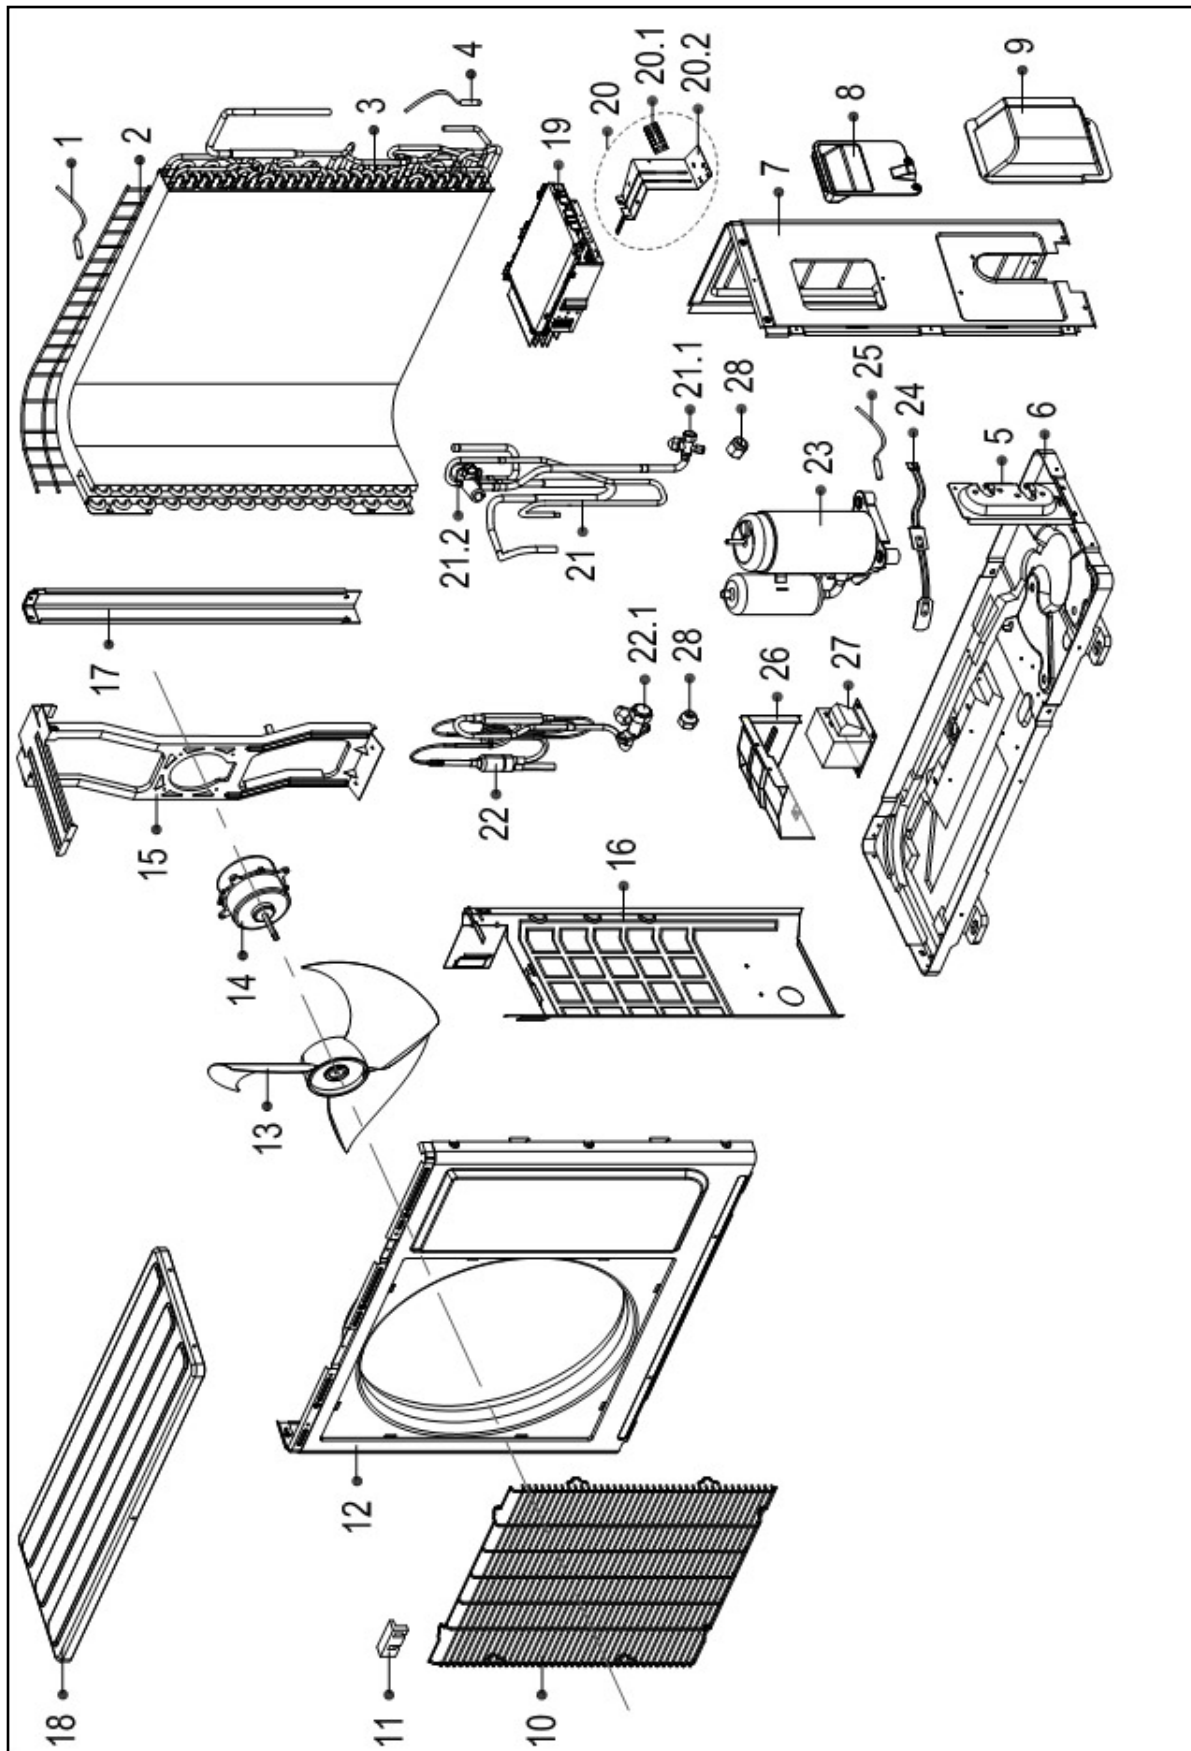

REPLACEMENT PARTS

Location	Part Name	Quantity	Part No.
1	Ambient temperature sensor assembly	1	202301310075
2	Rear net	1	2011374G0003
3	Condenser assembly	1	201537690004
4	Pipe temperature sensor assembly	1	202440500004
5	Valve plate	1	201237200282
6	Chassis assembly	1	2012378A0033
7	Rear right clapboard assembly	1	201237590080
8	Big handle	1	201237390104
10	Air outlet grille	1	201137890003
12	Front panel	1	201237890111
13	Axial flow fan	1	201100300534
14	Asynchronous motor	1	202400400171
15	Supporter assembly of fan motor	1	201237890080
16	Partition board assembly	1	20123789G003
17	Left supporter	1	201237400400
18	Top cover assembly	1	201237900028
19	Electronic control box assembly	1	2033378A0140
20	Terminal board assembly	1	203337590049
20.1	Wire joint	1	202301400223
20.2	Terminal board	1	201237590046
21	4-Ways valve assembly	1	201637790555
21.1	Gas valve	1	201600720195
21.2	4-Ways valve	1	201600690011
22	Liquid valve assembly	1	201637891215
22.1	Liquid valve	1	201600740523
23	Compressor	1	201400603269
24	Crankcase electric heater	1	202403100501
25	Discharge temperature sensor assembly	1	202301310068
26	Cover of inductance (reactor cover)	1	20123789G002
27	Reactor	1	202301000903

Design, material, performance data and components subject to change without notice.

HEAT CONTROLLER

1900 Wellworth Ave., Jackson MI 49203 • Ph. 517-787-2100 • www.heatcontroller.com

A  Company