


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# COMFORT-AIRE HMB36AA1E Owner's Manual

[Shop genuine replacement parts for COMFORT-AIRE  
HMB36AA1E](#)


 <small>Universal HVAC Parts &amp; Accessories</small>	<b>REPLACEMENT PARTS LIST</b>
	Modular Air Handler HMB**A*1E, HMB**X*1E, & HMB**V*1E Series

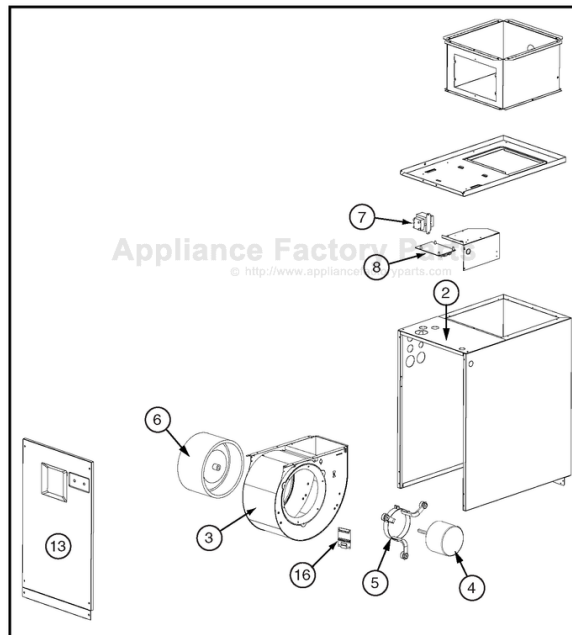

[Find Your COMFORT-AIRE HVAC Parts - Select From 1486 Models](#)

----- Manual continues below -----

**Modular Air Handler  
HMB\*\*A\*1E, HMB\*\*X\*1E, & HMB\*\*V\*1E Series**

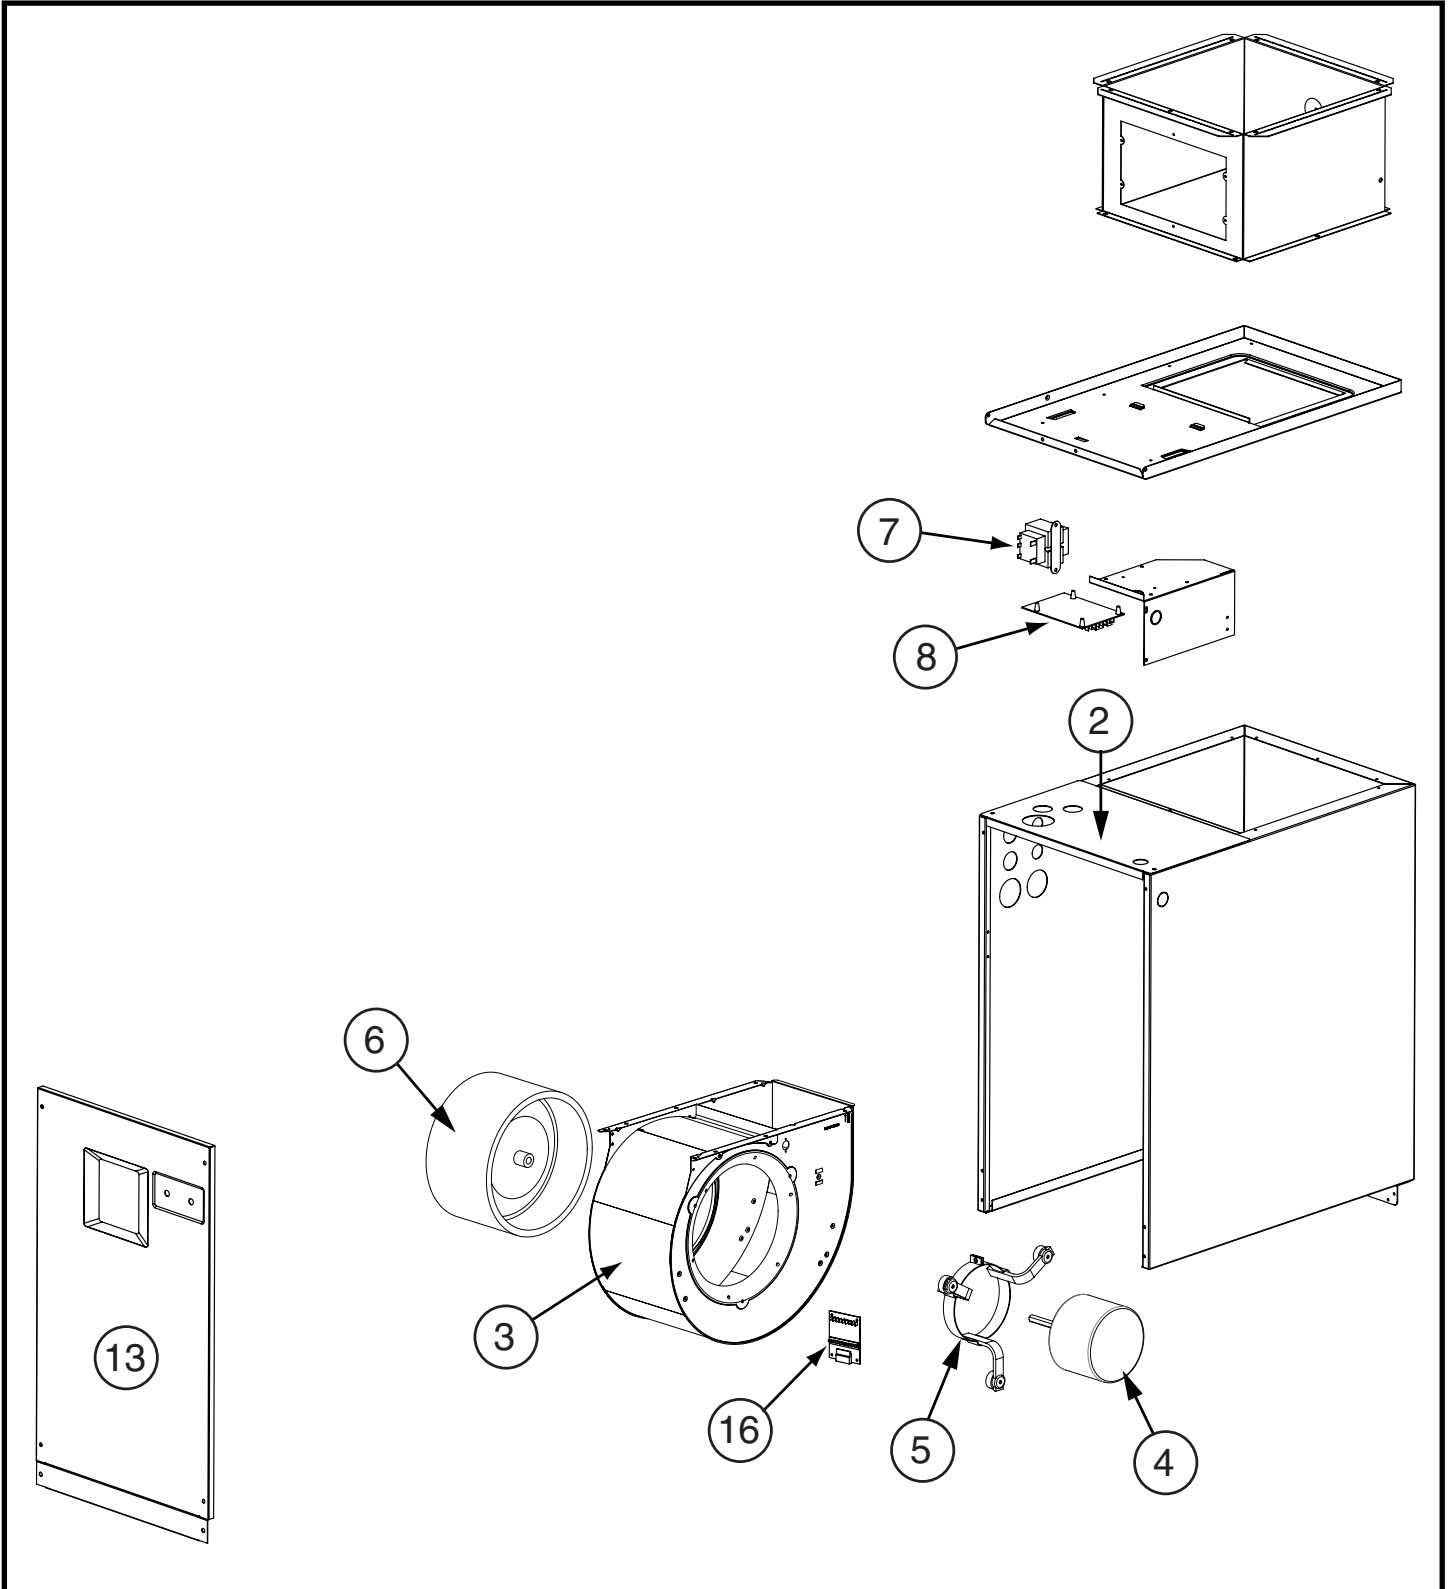

## HMB\*\*A\*1E Series Air Handler

ITEM	DESCRIPTION	HMB24AA1E	HMB36AA1E	HMB36AB1E	HMB48AC1E	HMB60AC1E
		921180	921181	921182	921183	921184
1	PLATE, CLOSE-OFF (Not Shown)	226420R	226420R	226420R	226420R	226420R
2	PANEL, TOP	921877	921877	299402	299402	299403
3	BLOWER HOUSING	297210R	297210R	297212R	297212R	297219R
4	MOTOR, BLOWER, PSC	622257R	622264R	622258R	622260R	621891R
5	BELLY-BAND	913871	913871	913871	913871	903489
6	WHEEL, BLOWER	667251R	667251R	667037R	667037R	667280R
7	TRANSFORMER	622336R	622336R	622336R	622336R	622336R
8	PCB, CONTROL, 1-STAGE	624735R	624735R	624735R	624735R	624735R
9	DUAL GROUNDING LUG (Not Shown)	632235R	632235R	632235R	632235R	632235R
10	PAINT, SPRAY, GRAY (Not Shown)	903598	903598	903598	903598	903598
11	BLOWER ASSEMBLY	921852	921849	921854	921847	921863
12	ELECTRICAL ASSEMBLY (Not Shown)	M0063801R	M0063801R	M0063801R	M0063801R	M0063801R
13	DOOR	921871	921871	921872	921873	921873
14	SET OF WIRES, (Not Shown)	921881	921881	921881	921881	921881
15	FUSE, 3 AMP (Not Shown)	632261R	632261R	632261R	632261R	632261R
16	CAPAC, RUN, 7.5/370-RND-MTL (Not Shown)	622535R	622550R	622545R	622545R	622550R

Please specify the correct Model No., Serial No., and Part No.(s) when ordering parts from the nearest authorized dealer or service center.

## HMB\*\*XA1E & HMB\*\*V\*1E Series Air Handler

ITEM	DESCRIPTION	HMB36XA1E	HMB48XB1E	HMB60XC1E	HMB36VA1E	HMB48VB1E	HMB60VC1E
		921185	921186	921187	921188	921189	921190
1	PLATE, CLOSE-OFF (Not Shown)	226420R	226420R	226420R	226420R	226420R	226420R
2	PANEL, TOP	921877	299402	299403	921877	299402	299403
3	BLOWER HOUSING	297210R	297217R	297219R	297210R	297217R	297219R
4	MOTOR, BLOWER	622500R	622500R	622501R	622500R	622500R	622501R
5	BELLY-BAND	913871	903489	903489	913871	903489	903489
6	WHEEL, BLOWER	667251R	667258R	667280R	667251R	667258R	667280R
7	TRANSFORMER	622336R	622336R	622336R	622336R	622336R	622336R
8	PCB, CONTROL, 1-STAGE	624735R	624736R	624736R	624736R	624736R	624736R
9	DUAL GROUNDING LUG (Not Shown)	632235R	632235R	632235R	632235R	632235R	632235R
10	PAINT, SPRAY, GRAY (Not Shown)	903598	903598	903598	903598	903598	903598
11	BLOWER ASSEMBLY	921850	921865	921862	921851	921855	921863
12	ELECTRICAL ASSEMBLY (Not Shown)	M0063802R	M0063802R	M0063802R	M0063803R	M0063803R	M0063803R
13	DOOR	921871	921872	921873	921871	921872	921873
14	SET OF WIRES, (Not Shown)	921881	921883	921883	921884	921884	921884
15	FUSE, 3 AMP (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
16	CONTROL, BLOWER	624756R	624756R	624756R	624757R	624757R	624757R
17	HARNESS, FSHE/VSHE, UPPER	2C0251R	2C0251R	2C0251R	2C0251R	2C0251R	2C0251R
18	HARNESS, FSHE, LOWER (Not Shown)	2C0252R	2C0252R	2C0252R	—	—	—
17	HARNESS, VSHE, LOWER (Not Shown)	—	—	—	2C0253R	2C0253R	2C0253R

Please specify the correct Model No., Serial No., and Part No.(s) when ordering parts from the nearest authorized dealer or service center.

HEAT CONTROLLER, INC.



Specifications & illustrations subject to change without notice or incurring obligations.  
Jackson, MI | Printed in U.S.A. (09/12)

7095600 (Replaces 7095140)