

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



MIDEA AKDH-70PT4-1 Owner's Manual

[Shop genuine replacement parts for MIDEA
AKDH-70PT4-1](#)



[Find Your MIDEA Dehumidifier Parts - Select From 149 Models](#)

----- Manual continues below -----

DEHUM

OWNER'S



The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

CD018IU-(K-K5)BJ

AK
AK
AK
AK

Before
carefu

SOCIABLE REMARK

When using this dehumidifier in the European countries, the following information must be followed:

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

It is prohibited to dispose of this appliance in domestic household waste.

For disposal, there are several possibilities:

- A) The municipality has established collection systems, where electronic waste can be disposed of at least free of charge to the user.
- B) When buying a new product, the retailer will take back the old product at least free of charge.
- C) The manufacture will take back the old appliance for disposal at least free of charge to the user.
- D) As old products contain valuable resources, they can be sold to scrap metal dealers.

Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.



CON

SAFETY PRECAUTIONS

Warning
Caution
Electrical information

CONTROL PADS ON THE DEHUMIDIFIER

Control pads.....
Other features.....

IDENTIFICATION OF PARTS

Identification of parts
Positioning the unit

OPERATING THE UNIT

When using the unit
Removing the collected water

CARE AND MAINTENANCE

Care and cleaning of the dehumidifier



TROUBLESHOOTING TIPS

Troubleshooting tips



SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.










 


- The seriousness is classified by the following indications.

 WARNING	This symbol indicates the possibility of death or serious injury.
 CAUTION	This symbol indicates the possibility of injury or damage to property.

 


- Meanings of symbols used in this manual are as shown below.

	Never do this.
	Always do this.


WARNING

<p> Do not exceed the rating of the power outlet or connection device.</p> <ul style="list-style-type: none"> Otherwise, it may cause electric shock or fire due to excess heat generation. 	<p> Do not operate or stop the unit by switching on or off the power.</p> <ul style="list-style-type: none"> It may cause electric shock or fire due to heat generation. 	<p> Do not damage or use an unspecified power cord.</p> <ul style="list-style-type: none"> It may cause electric shock or fire.
<p> Do not modify power cord length or share the outlet with other appliances</p> <ul style="list-style-type: none"> It may cause electric shock or fire due to heat generation. 	<p> Do not insert or pull out plug with wet hands.</p> <ul style="list-style-type: none"> It may cause electric shock. 	<p> Do not place the unit near a heat source.</p> <ul style="list-style-type: none"> Plastic parts may melt and cause a fire.
<p> Disconnect the power if strange sounds, smell, or smoke comes from it.</p> <ul style="list-style-type: none"> It may cause fire and electric shock. 	<p> You should never try to take apart or repair the unit by yourself.</p> <ul style="list-style-type: none"> It may cause failure of machine or electric shock. 	<p> Before cleaning, turn off the power and unplug the unit.</p> <ul style="list-style-type: none"> It may cause electrical shock or injury.
<p> Do not use the machine near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.</p> <ul style="list-style-type: none"> It may cause an explosion or fire. 	<p> Do not drink or use the water drained from the unit.</p> <ul style="list-style-type: none"> It contains contaminants and could make you sick. 	<p> Do not take the water bucket out during operation.</p> <ul style="list-style-type: none"> It may cause bucket full protect of the unit and cause electric shock.


CAUTION

<p> Do not use the unit in small spaces.</p> <ul style="list-style-type: none"> Lack of ventilation can cause overheating and fire. 	<p> Do not put in places where water may splash onto the unit.</p> <ul style="list-style-type: none"> Water may enter the unit and degrade the insulation. It may cause an electric shock or fire. 	<p> Place the unit on a level, sturdy section of the floor.</p> <ul style="list-style-type: none"> If the unit falls over, it may cause water to spill and damage belongings, or cause electrical shock or fire.
--	---	---


CAUTION

 **Do not cover the intake or exhaust openings with cloths or towels.**

- A lack of air flow can lead to overheating and fire.

 **Never insert your finger or other foreign objects into grills or openings. Take special care to warn children of these dangers.**

- It may cause electric shock or failure of appliance.

 **Always insert the filters securely. Clean filter once every two weeks.**

- Operation without filters may cause failure.

 **Care s using t the fol**

- Infants and pe humid

 **Do not p power co the cord**

- There electri

 **If wate the un power servic**

- It may applia

Electrical Information

- The manufactures nameplate is located on the technical data specific to this unit.
- Be sure the unit is properly grounded. To minimize hazards. The power cord is equipped with a three-prong.
- Your unit must be used in a properly grounded v not adequately grounded or protected by a time install the proper receptacle.
- Ensure the receptacle is accessible after the un
- Do not use extension cords or an adapter pl** extension cord, use an approved⁴ Dehumidifier stores).
- To avoid the possibility of personal injury, always and/or servicing.

CONTROL PADS ON THE DEHUMIDIFIER

NOTE: The control panel of the unit you purchased may be slightly different according to the models.

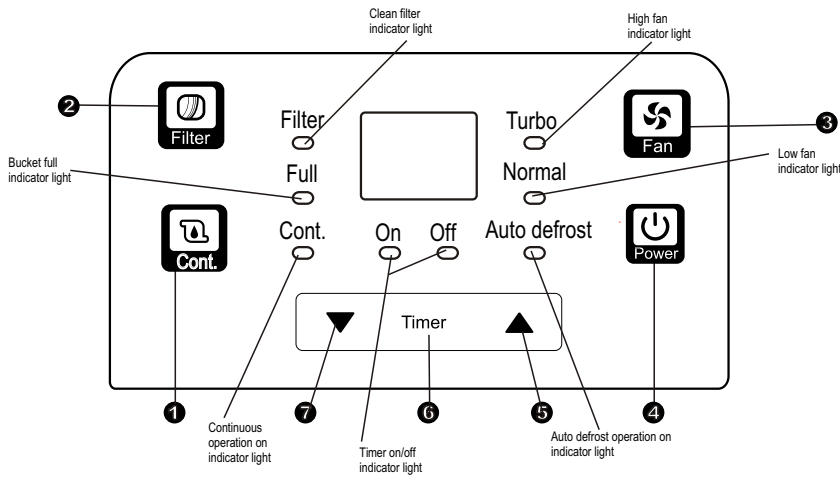


Fig.1

Control pads

When you push the button to change operation modes, the unit will make a beep sound to indicate that it is changing modes.

- ❶ **Continue Pad**
Press to activate the continuous dehumidifying operation.
- ❷ **Filter Pad**
The check filter feature is a reminder to clean the Air Filter for more efficient operation. The Filter light (Clean filter light) will illuminate after 250 hours of operation. To reset after cleaning the filter, press the Filter pad and the light will go off.
- ❸ **Fan Pad**
Control the fan speed. Press to select either High or Normal fan speed. Set the fan control to High for maximum moisture removal. When the humidity has been reduced and quiet operation is preferred, set the fan control to Normal.

- ❹ **Power Pad**
Press to turn the dehumidifier on and off.

❺ ❻ ▲ / ▼ : Up/Down Pads

● Humidity Set Control Pads

The humidity level can be set within a range of 35%RH(Relative Humidity) to 85%RH(Relative Humidity) in 5% increments.
For drier air, press the ▼ pad and set to a lower percent value(%).
For damper air, press the ▲ pad and set a higher percent value(%).

● TIMER Set Control Pads

Use the Up/Down pads to set the Auto start and Auto stop time from 0.0 to 24.

- ❻ **Timer Pad**
Press to initiate the Auto start and Auto stop feature, in conjunction with the ▲ and ▼ key pads.

4

- ⓫ **Display**
Shows the set % humidity level from 35% to 85% or auto start/stop time (0~24) while setting, then shows the actual (± 5% accuracy) room % humidity level in a range of 30%RH(Relative Humidity) to 90%RH(Relative Humidity).
Error Codes and Protection Code:
AS- Humidity sensor error--Unplug the unit and plug it back in. If error repeats, call for service.
ES- Temperature sensor error-- Unplug the unit and plug back in. If error repeats, call for service.
P2- Bucket is full or bucket is not in right position-- Empty the bucket and replace it in the right position.
E1- Unit malfunction-- Unplug the unit and plug it back in. If error repeats, call for service.

Other features

Bucket Full Light

Glow when the bucket is ready to be emptied, or when the bucket is removed or not replaced in the proper position.

Auto Shut Off

The dehumidifier shuts off after 30 seconds when the bucket is full, or when the bucket is removed or not replaced in the proper position. When the setting humidity is reached, the unit will be shut off automatically. For some models, the fan motor will continue operating.

Auto Defrost

When frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost disappears.

Wait 3 minutes before resuming operation

After the unit has stopped, it can not be restart operation in the first 3 minutes. This is to protect the unit. Operation will automatically start after 3 minutes.

Check filter feature

The system starts to count the time once the fan motor operates. The check filter feature can be only activated when the accumulated operation time achieves 250 hours or more. The Reset light (Clean filter indicator light) flashes at one time per second, after finishing clean the air filter, press the Filter pad and the Reset light (Clean filter indicator light) goes off.

IDENTIFICATION OF PARTS

Identification of parts

Front

- ❶ Control panel
- ❷ Air intake grille
- ❸ Air outlet grille
- ❹ Air filter (behind the grille)
- ❺ Water bucket
- ❻ Handle (both sides)

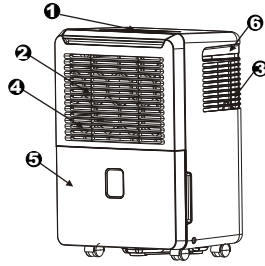


Fig.2

Rear

- ❶ Drain hose outlet
- ❷ Caster
- ❸ Power Cord and plug
- ❹ Band(Used only when storing the unit.)


 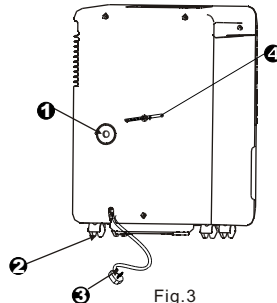


 
Fig.3

NOTE: All the pictures in the manual are for explanation purposes only. The actual shape of the unit you purchased may be slightly different, but the operations and functions are the same.

Accessories: Drain hose(1pc)



adaptor A(1pc)



screw(2pc)



❻

Positioning the unit

A dehumidifier operating in a basement will have little or no storage area, such as a closet, unless there is adequate

- Do not use outdoors.
- This dehumidifier is intended for indoor residential applications only. This dehumidifier should not be used for commercial or industrial applications.
- Place the dehumidifier on a smooth, level floor strong enough to support the unit with a full bucket of water.
- Allow at least 20cm of air space on all sides of the unit for good air circulation.
- Place the unit in an area where the temperature will not fall below 5°C(41°F). The coils can become covered with frost at temperatures below 5°C(41°F), which may reduce performance.
- Place the unit away from the clothes dryer, heater or radiator or valuables are stored.
- Use the unit to prevent moisture damage anywhere in the basement.
- Use the dehumidifier in a basement to help prevent moisture damage.
- The dehumidifier must be operated in an enclosed area to be most effective.
- Close all doors, windows and other outside openings to the room.

When using the unit

- When first using the dehumidifier, operate the unit continuously 24 hours.
- This unit is designed to operate with a working environment between 5°C/41 °F and 35°C/95 °F.
- If the unit has been switched off and needs to be switched on again quickly, allow approximately three minutes for the correct operation to resume.
- Do not connect the dehumidifier to a multiple socket outlet, which is also being used for other electrical appliances.
- Select a suitable location, making sure you have easy access to an electrical outlet.
- Plug the unit into a electrical socket-outlet with earth connection.
- Make sure the Water bucket is correctly fitted otherwise the unit will not operate properly.

NOTE:When the water in the bucket reaches a certain level, please be careful to move the machine to avoid it falling down.

OPERATING THE UNIT

Removing the collected water

There are two ways to remove collected water.

1. Use the bucket

- When the unit is off, if the bucket is full, the unit will beep 8 times and the Full indicator light will flash, the digital display shows P2.
- When the unit is on, if the bucket is full, the compressor turns off and the fan turns off after 30 seconds for drying the water of the condenser, then the unit will beep 8 times and the Full indicator light will flash, the digital display shows P2.
- Slowly pull out the bucket. Grip the left and right handles securely, and carefully pull out straight so water does not spill. Do not put the tank on the floor because the bottom of the bucket is uneven. Otherwise the bucket will fall and cause the water to spill.
- Throw away the water and replace the bucket. The bucket must be in place and securely seated for the dehumidifier to operate.
- The machine will re-start when the bucket is restored in its correct position.

NOTES:

- When you remove the bucket, do not touch any parts inside of the unit. Doing so may damage the product.
- Be sure to push the bucket gently all the way into the unit. Banging the bucket against anything or failing to push it in securely may cause the unit not to operate.
- When you remove the bucket, if there is some water in the unit you must dry it.

2. Continuous draining

Water can be automatically emptied into a floor drain by attaching the unit with a water hose (ID $\geq \phi 5/16$, not included) with a female threaded end (ID: M=1", not included).

- Install the drain hose onto the adaptor A (See Fig.7, placed in the bucket).
- Remove the plastic cover from the back drain outlet of the unit and set aside and remove bucket, then insert the drain hose through the drain outlet of the unit and securely press it into the connector on the front of the unit. (See Fig.9)
- Tighten the adaptor A and the unit by using two screws (placed in the bucket).
- Install the female threaded end of the water hose into the adaptor A. (See Fig.10), then lead the water hose to the floor drain or a suitable drainage facility.
- Make sure the hose is secure so there are no leaks.
- Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing.
- Place the end of the hose into the drain and make sure the end of the hose is level or down to let the water flow smoothly. Do never let it up..
- Place the bucket back in the unit and make sure that it is located correctly.
- Select the desired humidity setting and fan speed on the unit for continuous draining to start..

1. Pull out the bucket a little.

 


Fig.5

2. Hold both sides of the bucket with even strength, and pull it out from the unit.

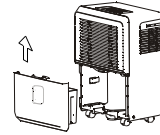


Fig.6

3. Pour the water out.

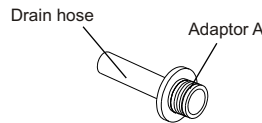


Fig.7

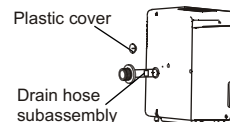


Fig.8

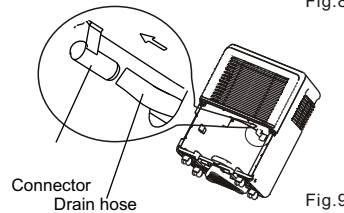


Fig.9

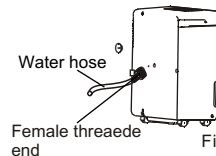


Fig.10

NOTE: When the continuous drain feature is not being used, remove the drain hose from the outlet.

Care and cleaning of the dehumidifier

Turn the dehumidifier off and remove the bucket from the wall outlet before cleaning.

1. Clean the Grille and Case

- Use water and a mild detergent. Do not use bleach or abrasives.
- Do not splash water directly onto the main unit, as this may cause an electrical shock, cause the unit to deteriorate, or cause the unit to rust.
- The air intake and outlet grilles get soiled easily. Use a vacuum attachment or brush to clean.

2. Clean the bucket

Every few weeks, clean the bucket to prevent mold, mildew and bacteria. Partially fill the bucket with water and add a little mild detergent. Swish it around, empty and rinse.

NOTE: Do not use a dishwasher to clean the bucket. After clean, the bucket must be in place and securely seated for the dehumidifier to operate.

3. Clean the air filter

- Remove the filter every two weeks based on normal operating conditions.
- Remove the filter from the top of the unit (See Fig.11a) or to remove the filter, remove Bucket then pull the filter downwards (See Fig.11b).
- Wash the filter with clean water then dry.
- Re-install the filter, replace Bucket.

CAUTION:

DO NOT operate the dehumidifier without a filter because dirt and lint will clog it and reduce performance.

4. When not using the unit for long time

- After turning off the unit, wait one day before removing the bucket.
- Clean the main unit, water bucket and air filter.
- Wrap the cord and bundle it with the band (Fig.12).
- Cover the unit with a plastic bag.
- Store the unit upright in a dry, well-ventilated area.

TROUBLESHOOTING TIPS

Before calling for service, review the chart below first yourself.

Problem	What to check
Unit does not start	<ul style="list-style-type: none"> ● Make sure the dehumidifier's plug is pushed completely into the outlet. ● Check the house fuse/circuit breaker box. ● Dehumidifier has reached its preset level or bucket is full. ● Water bucket is not in the proper position.
Dehumidifier does not dry the air as it should	<ul style="list-style-type: none"> ● Did not allow enough time to remove the moisture. ● Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier. ● The humidity control may not be set low enough. ● Check that all doors, windows and other openings are securely closed. ● Room temperature is too low, below 5°C(41°F). ● There is a kerosene heater or something giving off water vapor in the room.
The unit makes a loud noise when operating	<ul style="list-style-type: none"> ● The air filter is clogged. ● The unit is tilted instead of upright as it should be. ● The floor surface is not level.
Frost appears on the coils	<ul style="list-style-type: none"> ● This is normal. The dehumidifier has Auto defrost feature.
Water on floor	<ul style="list-style-type: none"> ● Hose to connector or hose connection may be loose. ● Intend to use the bucket to collect water, but the back drain plug is removed.
ES, AS,P2 and EC appear in the display	<ul style="list-style-type: none"> ● These are error codes and protection code. See the CONTROL PADS ON THE DEHUMIDIFIER section.

Arctic King Air C

Your product is protected by this warranty.

Warranty service must be obtained from Midea Consumer Services.

Warranty

- One year full warranty from original purchase date.

Midea, through its authorized servicers will:

- Pay all costs for repairing or replacing parts of this product.

Consumer will be responsible for:

- Diagnostics, removal, transportation and reinstallation.
- Costs of service calls that are a result of items listed below.

Midea replacement parts shall be used and will be warranted.

NORMAL RESPONSIBILITIES OF THE CONSUMER**

This warranty applies only to products in ordinary households.

1. Proper use of the appliance in accordance with instructions.
2. Routine maintenance and cleaning necessary to keep the appliance in good working order.
3. Proper installation by an authorized service professional in accordance with all local plumbing, electrical and / or gas codes.
4. Proper connection to a grounded power supply of sufficient capacity to avoid electrical defects in house wiring.
5. Expenses for making the appliance accessible for service.
6. Damages to finish after installation.

EXCLUSIONS

This warranty does not cover the following:

- 1) Failure caused by damage to the unit while in your possession, improper installation, or by unreasonable use of the unit.
- 2) Damages caused by services performed by persons other than Midea authorized service professionals, or replacement parts obtained from persons other than Midea, or inadequate power supply or acts of God.
- 3) If the unit is put to commercial, business, rental, or other use, express or implied, including but not limited to, any implied warranty.
- 4) Products without original serial numbers or products that are not Midea.

Note: Some states do not allow the exclusion or limitation of incidental or consequential damages. These limitations may not apply to you.

IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate proof of purchase. The date on the bill established the warranty period should service be required. If service is performed, it is your best interest to obtain and keep a receipt. This written warranty gives you specific legal rights. You may also have other rights which vary from state to state. Service under this warranty must be obtained by following these steps:

1. Contact Midea Consumer Services or an authorized Midea servicer.
2. If there is a question as to where to obtain service, contact our