

Permasteel PG-40C10 Owner's Manual

Shop genuine replacement parts for Permasteel PG-40C10




Find Your Permasteel Grill Parts - Select From 54 Models

----- Manual continues below -----



Portable Square Charcoal Grill Instruction Manual

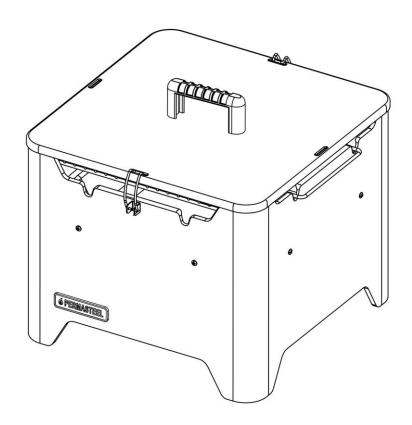

For Outdoor Use Only

Model No: PG-40C10

This product is sold by **Permasteel Inc.**

If you are missing any parts or have question regarding this grill, please call our customer service

dept. 1-888-287-0735 / M-F / 8AM -5PM PST


Or email at: service@permasteel.net

User Notes

- Please read the manual carefully before using the product
- Keep this user manual for future reference
- Outdoor use only
- Outer shell of the grill can be very hot, please make sure to keep children away
- Do not move the product while in use

Important Note

- Please read this manual carefully and confirm that the grill has been properly installed and assembled.
 Failure to use this manual may result in serious personal injury and/or property damage.
- When assembling the grill, be careful not to scratch/cut your hands by the sharp metal edge.
- If you have any questions about assembly or operation, please consult your dealer.
- Use only on hard, horizontal, non-flammable, stable surfaces (concrete, ground, etc.) that can support
 weight. Do not use on wood or other surfaces that may burn.
- A proper distance of 10 feet shall be maintained between the grill in use and flammable materials such as shrubs, trees, wood decks, fences, buildings, etc.
- Do not use gasoline, kerosene, or alcohol to light the charcoal. The use of these or similar products may cause an explosion which may cause serious bodily injury.
- Keep children and pets away from the grill.
- After each use, clean the grill thoroughly after it cools down, and recoat the inside of the grill with oil to prevent rust.
- It is recommended to use 0.8 ~ 1Kg of charcoal at the beginning of each use.

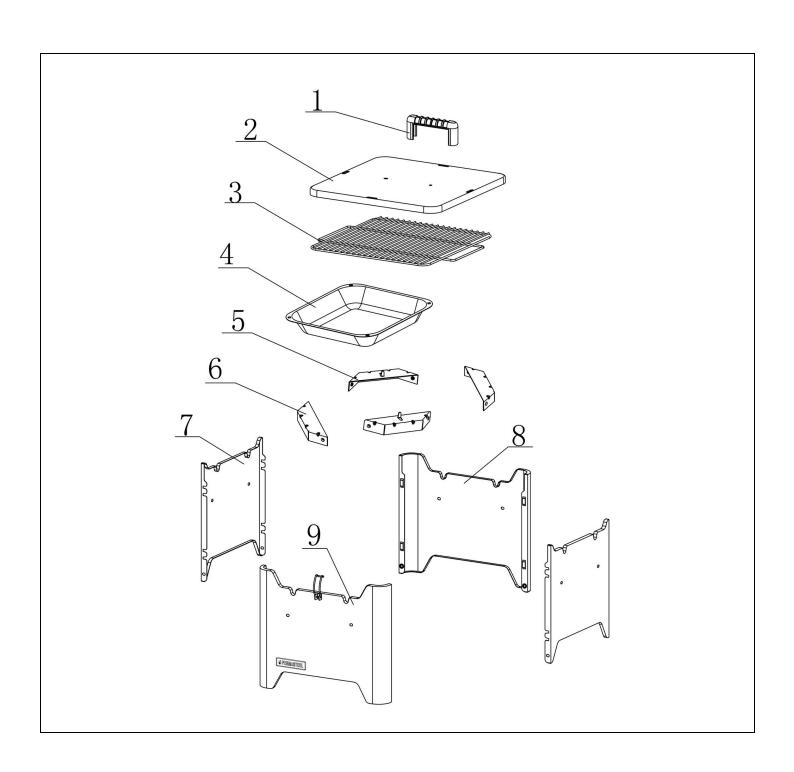

Parts List

1. Handle	2. Lid	3. Cooking Grate	
1PC	1PC	1PC	
4. Charcoal Pan	5. Charcoal Tray Bracket 1	6. Charcoal Tray Bracket 2	
1PC	2PCS	2PCS	
7. Side Panel	8. Back Panel	9. Front Panel	
		O PORMANDES	
2PCS	1PC	1PC	


Component Card

Item No.	Item name	Diagram	Qty
А	M4 x 8 mm Bolt		12
В	M6 x 12 mm Bolt		2

Installation Steps


Step 1: Install the grill panel -- part 1

Insert a side panel (Part 7) into the card slot of front panel (Part 9) and back panel (Part 8) and buckle it. Installation method is as shown in the figure below.

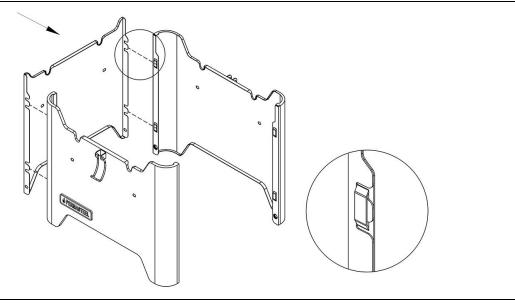


Step 2: Install the grill panel -- part 2

Insert the other side panel (Part 7) into the card slot of front panel (Part 9) and back panel (Part 8) and buckle it. Installation method is as shown in the figure below.

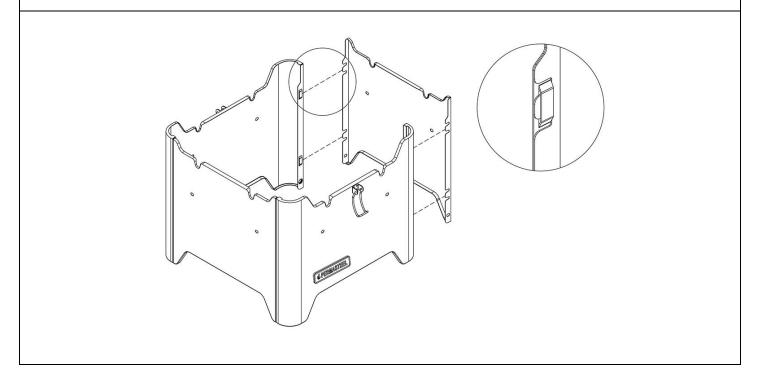


Step 3: Install charcoal tray bracket

Use 8 pcs M4x8mm bolts (Part A) to install the 4pcs charcoal pan bracket 1 (Part 5) and charcoal pan bracket 2 (Part 6) in the positions shown in the figure below. The installation method is shown in the figure below.

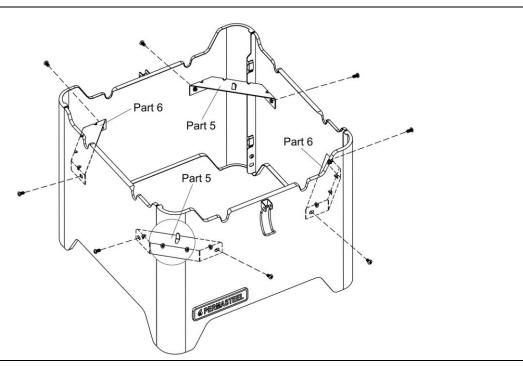


Step 4: Install bolts

Turn over the grill body, screw securely 4 pcs M4x8mm bolts (Part A) in the holes on the top. The installation method is shown in the figure below.

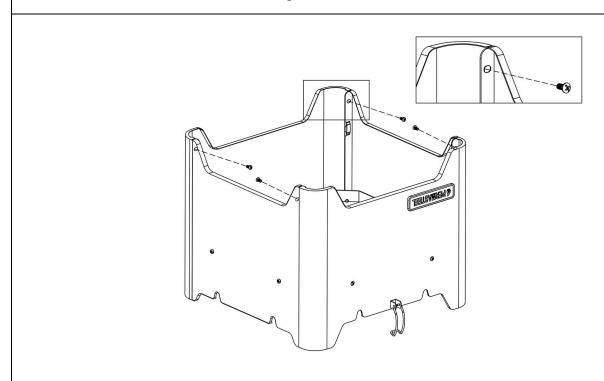


Step 5: Install charcoal pan and cooking grate

Turn over the grill body. Place the charcoal pan (Part 4) on the charcoal pan bracket. And then place the cooking grate (Part 3) with the handles on the grooves of the side panels. The installation method is shown in the figure below.

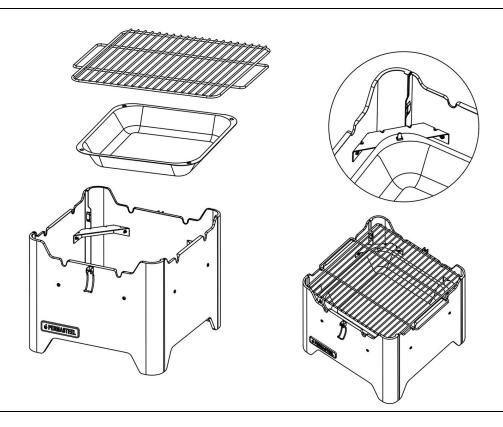

Step 6: install lid handle


Insert the lid handle(Part 1) into the holes on the lid(Part 2), screw secure with 2 pcs M6x12mm bolts(Part B). The installation method is shown in the figure below.

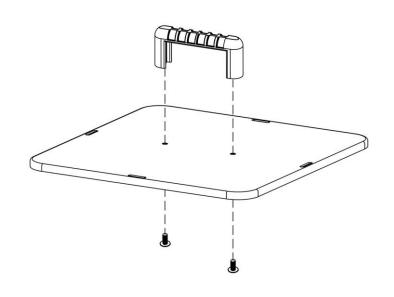

Step 7: Install lid

Place the lid on the grill body, lock with the lock. (This feature is for transport and storage.) The installation method is shown in the figure below.

Tips: 1. This is an open grill, please remove the lid before grilling. 2. The feature of the lid with handle is for transport and storage.

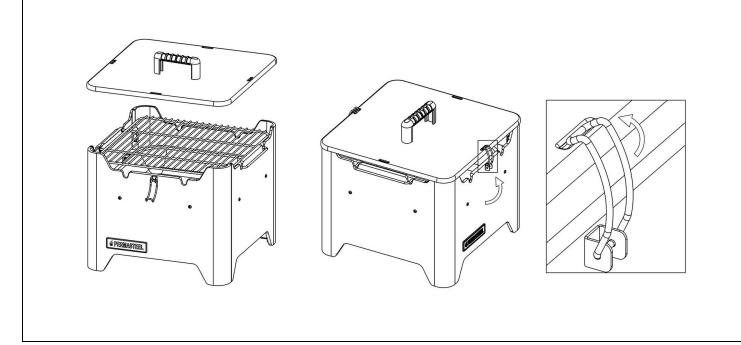

/ DANGER

Risk of cuts

Every care has been taken at the factory to ensure that there are no sharp edges on this unit. Be careful when handling the individual components of this unit to prevent accidents and injuries when assembling and starting up the unit.

Before use, please note:

Always select a secure, even surface and a suitable place for charcoal grilling. The unit may not be transported when warm. For safety reasons, the unit may not be operated using liquid fuel. Recommendation: Heat the BBQ grill before you use it for the first time and allow the fuel to glow for at least 30 min.

Notes with regard to lighting:

- Arrange the charcoal pieces in the fire basin in pyramid form.
- The fire basin can accommodate a maximum of around 1 kg of ordinary charcoal.
- Evenly space dry charcoal lighters around the pyramid.
- The pyramid is best lit using a match.
- Only start to cook when the fuel is covered with a sheet of ash.
- Grease the grilling rack with a little vegetable oil and start grilling.



DANGER

Risk of explosion

This BBQ grill becomes very hot and may not be moved when in use! Do not used in closed room!

Do not use spirit, petrol or similar liquids to light or re-light the BBQ! Only use lighters in accordance with EN 1860-3! keep away from children and animals!



DANGER

Fire risk

Always wear gloves when adjusting the height of the grilling rack as the handles of the rack can become very hot during grilling.