

Norpole NPGR2-S45B Owner's Manual

Shop genuine replacement parts for Norpole NPGR2-S45B



Find Your Norpole Refrigerator Parts - Select From 78 Models

----- Manual continues below ------

COMMERCIAL REFRIGERATOR AND FREEZ USER'S MANUAL

GLASS DOOR MERCHANDISERS

Model: NPGR1-S, NPGR1-SB, NPGR1-S9B,

NPGR2-SB,NPGR2-S,NPGR2,NPGR2-B,

NPGR3-S,NPGR3-SB,NPGR1F,NPGF1-S,NPGF2 NPGF3-S,NPGF1-S13,NPGF1-S13B,NPGF1-S NPGF2-SB,NPGF2-S45,NPGF2-S45B,NPGR2-S4

NPGR2-S45B, NPGF3-SB

PLEASE READ THE MANUAL THOROUGHLY PRIOR T EQUIPMENT SET-UP, OPERATION AND MAINTENANCE

INSTALLATION

- The refrigeration system operates most efficiently when installed in an ar with cool, dry air circulation.
- There must be at least 6 inches of clearance on both sides and the back the cabinet.
- Select a location away form the heat and moisture generating equipme such as stoves, ovens, etc.
- Avoid direct sun rays.
- Be sure that the floor where you intend to install the unit is strong and level enough to support the total weight of the unit and its contents.
- To minimize shock and fire hazards, be sure that the unit is proper grounded. For your safety and protection, all units are equipped with special three-prong grounding plug on the service cord.
- All units are designed for indoor use. Outdoor use may cause significated damage to the unit.



- To minimize shock and fire hazards, be sure not to overload the outlet.
- To minimize electric shock and malfunction, do not spray the unit w water.
- To minimize fire hazards, do not use flammable spray products near t unit.
- After unplugging the unit, wait at least 6 minutes before re-plugging it may cause compressor failure if plugged in before 6 minutes waiti period.
- Cautions for cleaning:
 - * Unplug the power cord before cleaning.
 - * Do not unplug/plug the power cord with wet hands.
 - * Do not use an abrasive cleaners, solvents or polishing agents on plas

OPERATION/MAINTENANCE

- When loading the unit:
 - * Be careful not to block the air duct located at the back and the fan on t ceiling of the unit with contents.
 - * Blocking the air flow may cause decrease in performance.
 - * For the best performance, maintain at least 4 inches of clearance betwe the contents and the air duct.
- Set the shelves that comes with the unit to fit your needs.
- Temperature controller:
 - * The controller is located at the right, front corner of the ceiling.
 - * Temperature is set as "4" at default.
- Do not leave the unit door open for long period of time. For the money efficient operation, close the door immediately after the use.

Mans.io

TROUBLE SHOOTING GUIDE

SYMPTOMS	REMEDY
COMPRESSORS WILL NOT START	 ▲ Check if the power cord has be plugged in. ▲ Check for blown fuse.
POOR PERFORMANCE	 Move the unit from direct sun light, a avoid installing heating devices near t unit. Install the unit in a well ventilated pla
	with minimum of 6" clearance in t back.
	▲ Check the condenser, and clean heavy dust is collected.
	▲ Check to see if contents are blocki the air duct.
	 ▲ Check to see if refrigerant charge is low ▲ Make sure the door is complete closed.
NOT INTERIOR LIGHT	▲ Turn off the light switch and turn it again.
	Make sure the bulb is correctly insert into the sockets.
	▲ Check the bulb, and replace it if blow
UNIT NOISY	▲ Make sure to install the unit on lessurface.
	▲ Make sure to maintain the minimular clearance of 6" from the wall.
	▲ Check for the loose parts or mounting
	▲ Make sure the tubing is free from a contact to avoid tubing rattle.

CONDENSATION ON CABINET ▲ Reduce the relatively humidity in the second conditions of the conditions o