

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



Norpole NPGR1-SB Owner's Manual

[Shop genuine replacement parts for Norpole
NPGR1-SB](#)



[Find Your Norpole Refrigerator Parts - Select From 78 Models](#)

----- Manual continues below -----

COMMERCIAL REFRIGERATOR AND FREEZER *USER'S MANUAL*

GLASS DOOR MERCHANDISERS

Model: NPGR1-S, NPGR1-SB, NPGR1-S9B,
NPGR2-SB, NPGR2-S, NPGR2, NPGR2-B,
NPGR3-S, NPGR3-SB, NPGR1F, NPGF1-S, NPGF2-
NPGF3-S, NPGF1-S13, NPGF1-S13B, NPGF1-S
NPGF2-SB, NPGF2-S45, NPGF2-S45B, NPGR2-S4
NPGR2-S45B, NPGF3-SB

***PLEASE READ THE MANUAL THOROUGHLY PRIOR TO
EQUIPMENT SET-UP, OPERATION AND MAINTENANCE***

INSTALLATION

- The refrigeration system operates most efficiently when installed in an area with cool, dry air circulation.
- There must be at least 6 inches of clearance on both sides and the back of the cabinet.
- Select a location away from the heat and moisture generating equipment such as stoves, ovens, etc.
- Avoid direct sun rays.
- Be sure that the floor where you intend to install the unit is strong and level enough to support the total weight of the unit and its contents.
- To minimize shock and fire hazards, be sure that the unit is properly grounded. For your safety and protection, all units are equipped with a special three-prong grounding plug on the service cord.
- All units are designed for indoor use. Outdoor use may cause significant damage to the unit.

Mans.io PRECAUTIONS

- To minimize shock and fire hazards, be sure not to overload the outlet.
- To minimize electric shock and malfunction, do not spray the unit with water.
- To minimize fire hazards, do not use flammable spray products near the unit.
- After unplugging the unit, wait at least 6 minutes before re-plugging it. This may cause compressor failure if plugged in before 6 minutes waiting period.
- Cautions for cleaning:
 - * Unplug the power cord before cleaning.
 - * Do not unplug/plug the power cord with wet hands.
 - * Do not use an abrasive cleaners, solvents or polishing agents on plastic.

OPERATION/MAINTENANCE

- When loading the unit:
 - * Be careful not to block the air duct located at the back and the fan on the ceiling of the unit with contents.
 - * Blocking the air flow may cause decrease in performance.
 - * For the best performance, maintain at least 4 inches of clearance between the contents and the air duct.
- Set the shelves that comes with the unit to fit your needs.
- Temperature controller:
 - * The controller is located at the right, front corner of the ceiling.
 - * Temperature is set as "4" at default.
- Do not leave the unit door open for long period of time. For the most efficient operation, close the door immediately after the use.

Mans.io

TROUBLE SHOOTING GUIDE

SYMPTOMS	REMEDY
COMPRESSORS WILL NOT START	<ul style="list-style-type: none"> ▲ Check if the power cord has been plugged in. ▲ Check for blown fuse.
POOR PERFORMANCE	<ul style="list-style-type: none"> ▲ Move the unit from direct sun light, and avoid installing heating devices near the unit. ▲ Install the unit in a well ventilated place with minimum of 6" clearance in the back. ▲ Check the condenser, and clean if heavy dust is collected. ▲ Check to see if contents are blocking the air duct. ▲ Check the temperature controller for possible incorrect temperature setting. ▲ Check to see if refrigerant charge is low. ▲ Make sure the door is completely closed.
NOT INTERIOR LIGHT	<ul style="list-style-type: none"> ▲ Turn off the light switch and turn it on again. ▲ Make sure the bulb is correctly inserted into the sockets. ▲ Check the bulb, and replace it if blown.
UNIT NOISY	<ul style="list-style-type: none"> ▲ Make sure to install the unit on level surface. ▲ Make sure to maintain the minimum clearance of 6" from the wall. ▲ Check for the loose parts or mounting. ▲ Make sure the tubing is free from any contact to avoid tubing rattle.
CONDENSATION ON CABINET	<ul style="list-style-type: none"> ▲ Reduce the relative humidity in the