

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC SR-W06NA Owner's Manual

[Shop genuine replacement parts for PANASONIC
SR-W06NA](#)




[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

Operating Instructions

Manuel d'utilisation

Rice Cooker/Steamer
Cuiseur de riz à vapeur
SR-W06NA/W10NA/W18NA

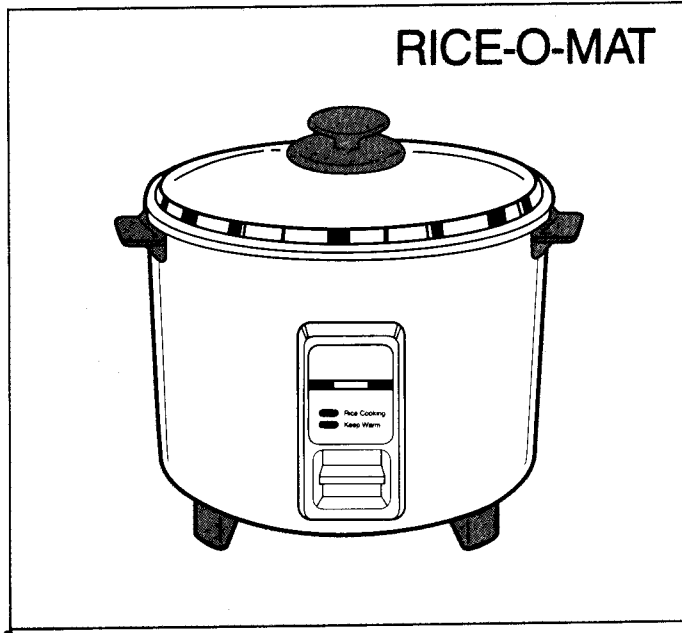

Panasonic®

Before using this cooker, please read these instructions completely.

在使用本機前，請詳細閱讀此使用說明書。

Avant d'utiliser ce cuiseur, lire attentivement ce manuel.

사용하시기 전에 이 설명서를 잘 읽어 주십시오.

Xin đọc hết những phần chỉ dẫn này, trước khi bắt đầu sử dụng nồi cơm điện.

ENGLISH P3 ~ P4

中文 P5 ~ P6

FRANÇAIS P7 ~ P8

한국어 P9 ~ P10

Việt ngữ P11 ~ P12

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazard, do not immerse cord, plugs, and Rice Cooker, except lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. SAVE THESE INSTRUCTIONS

This product is intended for household use.

NOTE

- A. A short power supply cord set is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a longer cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

PARTS IDENTIFICATION/各部名稱
PARTIES DE L'APPAREIL/부품 확인
TÊN GỌI CÁC BỘ PHẬN


ENGLISH

中文


FRANÇAIS




한국어

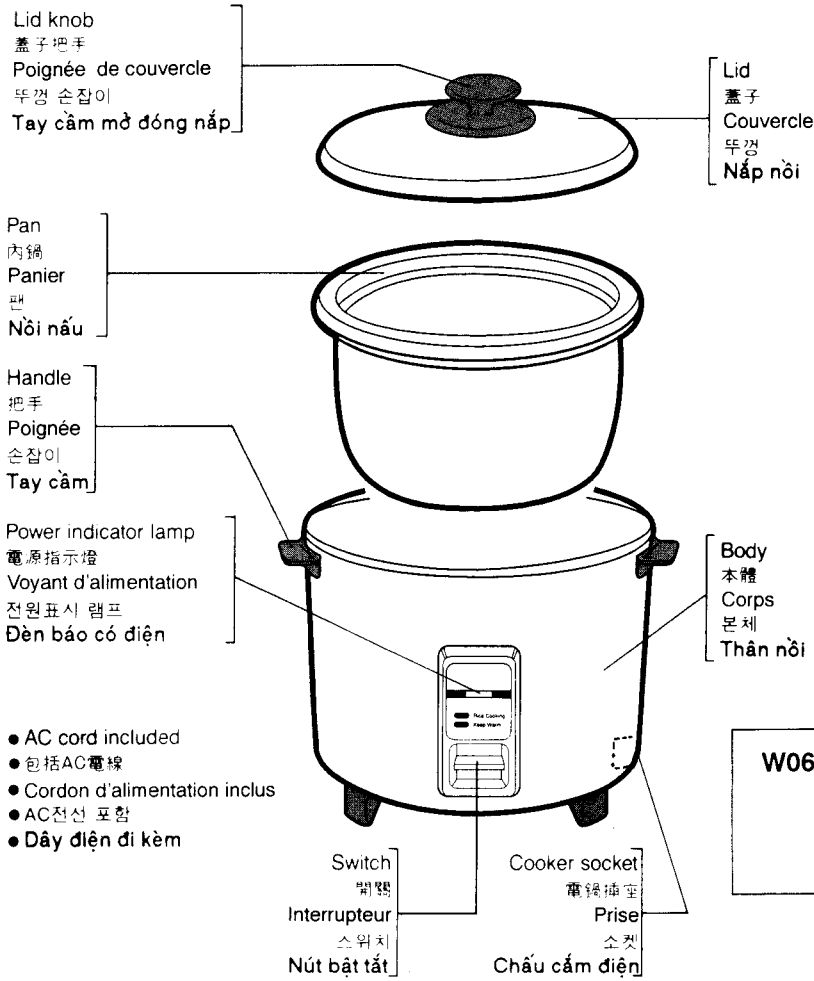VIỆT-NGŨ

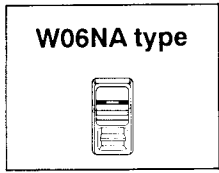

- AC cord included
- 包括AC電線
- Cordon d'alimentation inclus
- AC전선 포함
- Dây điện đi kèm




| | |
|---|--|
|  <p>Measuring cup (approx. 6fl.oz./180ml) 量杯(約6流體盎司/180毫升) Tasse de mesurage (aprox. 6fl.oz./180ml) 계량컵(약 6fl.oz./180ml) Ly đo (khoảng 6fl.oz./180ml)</p> <p>Rice scoop 飯勺子 Cuiller à riz 밥 주걱 Muỗng xúc cơm</p> | <p>W06NA type</p>  <p>Steaming plate 蒸盤 Plaque-vapeur 증기판 Đĩa chưng hấp</p> <p>W10NA/W18NA type</p>  <p>Steaming rack 蒸架 Grille à vapeur 증오리용 격자 Đĩa chưng hấp</p> |
|---|--|

HOW TO USE


1 Measure rice with the measuring cup provided. One cup of uncooked rice makes approximately 2 cups of cooked rice. Rinse rice in a separate bowl until water becomes relatively clear.

2 Place rinsed rice in the pan. Add water according to the following standard.
e.g. when using 1.8 L (1.9 qts.) capacity rice cooker.
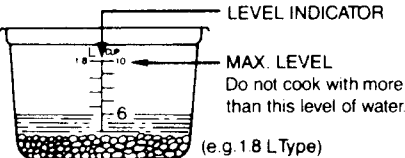
| Using the markings on the pan | Using the measuring cup | |
|---|-------------------------|--|
| e.g. To cook 6 cups of rice, rinse the rice, put it into the pan and then add water to LEVEL INDICATOR 6. | Raw rice by cup | Water to be added |
|  <p>LEVEL INDICATOR</p> <p>MAX. LEVEL Do not cook with more than this level of water.</p> <p>(e.g. 1.8 L Type)</p> | 10 cups | 10-10 ¹ / ₄ cups |
| | 8 cups | 8-8 ¹ / ₄ cups |
| | 6 cups | 6-6 ¹ / ₄ cups |
| | 4 cups | 4-4 ¹ / ₄ cups |
| | 2 cups | 2-2 ¹ / ₄ cups |

Adjust water quantity to your taste. Add more water for softer rice.


3 Set the pan in the cooker. To place correctly on the heater, turn the pan gently to right and left. Cover with the lid and let rice soak approximately 30 minutes.



4 KEEP WARM (W10/W18NA TYPE)


Attach AC cord to the cooker and plug in. The power indicator lamp lights.

Do not plug in until ready to cook. Otherwise, rice may be ruined.

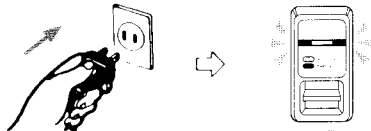


NON-KEEP WARM (W06NA TYPE)

Attach AC cord to the cooker and plug in.

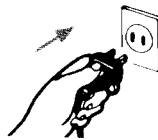


If the pan is not in the cooker, cooking will not begin.

5 Press the switch. The "Rice Cooking" indicator (Orange) tells you cooking has started.

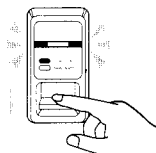

Press the switch. The power indicator lamp tells you cooking has started.

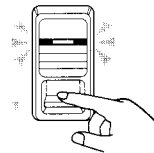

6 When rice is done, the switch will move up. The "Keep Warm" indicator changes to orange to signal "Keep Warm" function is working.

When rice is done, the switch will move up automatically and the lamp goes out.

7 After the switch move up, leave the lid closed for at least 15 minutes to steam rice.


8 Unplug after use. Grasp plug, not the cord.

CAUTION

ENGLISH


- 1** • Make sure that the pan is sitting properly in the cooker.
If the pan is not positioned correctly, the switch may click off too soon or the heater may be damaged.

WRONG

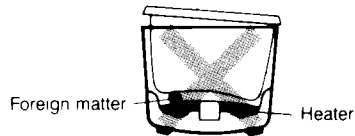

- Do not leave the steaming plate between the heater and the pan.


The pan should not be caught on the ledge above the heater

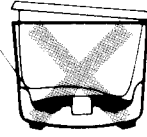

The pan should not be caught on the edge of the body.

Your rice cooker has been designed with a thermal fuse which may shut the heater off in these cases.

- Be sure the switch is off before removing the pan.



- 2** Replace all damaged parts immediately.

- 3** Handle the glass lid carefully.
If it is dropped, the glass may break or the edge may be deformed.

- 4** Do not tilt the rice cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage.

- 5** Sumiflon coated pan may discolor with age. This is normal.
Do not use metal utensils with Sumiflon coated pan.

KEEP WARM FUNCTION (W10NA/W18NA TYPE)

- After cooking is completed, "Keep Warm" automatically functions until the cord is unplugged.
- Always unplug before taking the pan out of the cooker.
- Do not switch to "Rice Cooking" during "Keep Warm" function.
- Do not keep rice warm for more than 5 hours.
- Do not use "Keep Warm" function to reheat cold rice.

HOW TO USE STEAMING RACK (STEAMING PLATE)

- Pour water into the pan and set the steaming rack and food.
Cover with the glass lid and switch on.
- To reheat cold rice, use this steaming function only.

HOW TO CLEAN

1. Unplug before cleaning.
2. Soak the pan and the steaming rack in hot water to loosen cooked-on rice.
3. Do not immerse the body in water or any other liquid. Wipe with a damp cloth.
4. Do not use abrasive cleaners or steel wool. Clean with non-metal brush or sponge.

SPECIFICATIONS

| Model No. | Power supply | Power consumed | Capacity | Dimensions (HxWxD) | Weight | Accessories |
|-----------|--------------|----------------|---------------------------------|---|----------------------|--|
| SR-W06NA | 120V AC | 310W | 0.19 ~ 0.6qts. (0.18 ~ 0.6l) | 7 ⁷ / ₈ " x 9 ¹ / ₂ " x 7 ⁷ / ₈ " (20 x 24 x 20 cm) | 2.6 lbs. (1.2 kg) | Rice scoop Steaming rack |
| SR-W10NA | | 450W | 0.19 ~ 1.1qts. (0.18 ~ 1.0l) | 9" x 11" x 9" (23 x 28 x 23 cm) | 3.3 lbs. (1.5 kg) | Steaming plate (W06NA type only) |
| SR-W18NA | | 600W | 0.38 ~ 1.9qts. (0.36 ~ 1.8l) | 10 ¹ / ₄ " x 12 ¹ / ₄ " x 10 ² / ₃ " (26 x 31 x 27 cm) | 4.8 lbs. (2.2 kg) | Measuring cup (approx. 6fl.oz./180ml) |

規格

| 型號 | 電源 | 消耗電力 | 容量 | 尺寸(高x寬x深) | 重量 | 附件 |
|----------|------------|------|--------------------------------|--|-----------------|---------------------------|
| SR-W06NA | 120伏 AC | 310瓦 | 0.19 ~ 0.6夸爾 (0.18 ~ 0.6公升) | 7 ⁷ / ₈ " x 9 ¹ / ₂ " x 7 ⁷ / ₈ " (20 x 24 x 20厘米) | 2.6磅 (1.2公斤) | 飯勺子 蒸架 |
| SR-W10NA | | 450瓦 | 0.19 ~ 1.1夸爾 (0.18 ~ 1.0公升) | 9" x 11" x 9" (23 x 28 x 23厘米) | 3.3磅 (1.5公斤) | 蒸盤 (僅限 W06NA 型) |
| SR-W18NA | | 600瓦 | 0.38 ~ 1.9夸爾 (0.36 ~ 1.8公升) | 10 ¹ / ₄ " x 12 ¹ / ₄ " x 10 ² / ₃ " (26 x 31 x 27厘米) | 4.8磅 (2.2公斤) | 量杯 (約 6 流體盎司 / 180 毫升) |

SPÉCIFICATIONS

| Modèle | Alimen- taion | Consom- mation | Capacité | Dimensions (HxLxP) | Poids | Accessoires |
|----------|------------------|-------------------|---------------------------------|---|----------------------|---|
| SR-W06NA | 120V CA | 310W | 0,19 ~ 0,6qts. (0,18 ~ 0,6l) | 7 ⁷ / ₈ " x 9 ¹ / ₂ " x 7 ⁷ / ₈ " (20 x 24 x 20 cm) | 2,6 lbs. (1,2 kg) | Cuiller à riz Grille à vapeur |
| SR-W10NA | | 450W | 0,19 ~ 1,1qts. (0,18 ~ 1,0l) | 9" x 11" x 9" (23 x 28 x 23 cm) | 3,3 lbs. (1,5 kg) | Plaque-vapeur (Excepto W06NA) |
| SR-W18NA | | 600W | 0,38 ~ 1,9qts. (0,36 ~ 1,8l) | 10 ¹ / ₄ " x 12 ¹ / ₄ " x 10 ² / ₃ " (26 x 31 x 27 cm) | 4,8 lbs. (2,2 kg) | Tara medidora (aprox. 6fl.oz./180ml) |

PANASONIC CANADA INC.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

QY00C2021

C0204T0

Printed in Thailand