


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



PANASONIC SR-SJ10P Owner's Manual

[Shop genuine replacement parts for PANASONIC SR-SJ10P](#)

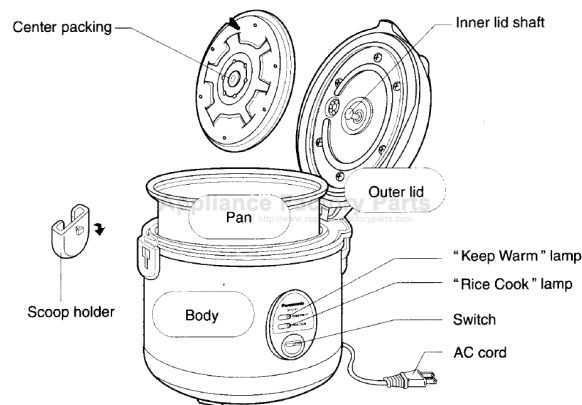

[Find Your PANASONIC Small Appliance Parts - Select From 148 Models](#)

----- Manual continues below -----

Electronic Rice Cooker/Warmer

電子保溫飯煲

전자밥솥/보온기

Cuiseur de riz/réchaud électronique

Thank you very much for purchasing a
Panasonic Electronic Rice Cooker/Warmer

感謝您購買
Panasonic 電子保溫飯煲

구입해 주셔서 대단히 감사합니다.
Panasonic 전자밥솥/보온기

Nous vous remercions d'avoir arrêté votre choix
sur un cuiseur de riz/réchaud électronique Panasonic

Operating Instructions

使用說明書

취급설명서

Manuel d'utilisation

SR-SJ10P/SJ18P



Contents

目錄

차례

Table des matières

Important Safeguards	1	重要的安全措施	9	중요한 안전 장치	17	Précautions à prendre	25
Cautions	2	注意事項	10	주의사항	18	Attention	26
Parts Identification	3	零件名稱	11	각 부품의 이름	19	Nomenclature	27
How to Cook	4-5	使用方法	12-13	조리법	20-21	Mode d'emploi	28-29
To Keep Cooked Rice Warm	5	為了使您嘗到暖熱可口的米飯	13	맛있게 다 된 밥을 보온하기 위해서는	21	Fonction de maintien au chaud	29
How to Steam Food	6	蒸食方法	14	찜 용기를 사용해서	22	Cuisson à la vapeur	30
(Using the Steaming basket)	6	(使用蒸籠蒸架時)	14	(하는 찜 요리법)	22	(Avec panier d'étuvage)	30
How to Clean	7	清洗方法	15	소제하는 방법	23	Nettoyage	31
Non-stick coated pan	7	塗有特殊表面膜之內鍋可防止飯粒黏底	15	붙어붙지 않는 코팅처리가 완벽한 편	23	Panier avec revêtement anti-adhérent	31
Troubleshooting	8	故障檢修	16	문제해결	24	Guide de dépannage	32
Specifications	8	規格	16	사양	24	Spécifications	32

Before operating this unit,
please read these instructions completely.

在使用本機前，
請詳細閱讀此使用說明書。

사용하시기 전에 이
설명서를 잘 읽으실 것.

Il est recommandé de lire attentivement ce
manuel avant d'utiliser l'appareil.

IMPORTANT SAFEGUARDS

ENGLISH

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards do not immerse cord, plugs, and Rice Cooker, except removable inner lid and pan, in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "Off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This product is intended for household use.

SAVE THESE INSTRUCTIONS

NOTE

- A. A short power-supply cord (or cord set) is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.


This appliance has a polarized plug: (One blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Cautions


ENGLISH

Be sure to observe the following to prevent malfunction that may cause an accident:


- DO NOT use this rice cooker for any purpose other than cooking rice.
- Measure the quantity of rice and water according to the Operating Instructions.
- Clean the rice cooker, particularly the dew collector, after use.
- DO NOT clog the holes in the dew catch part on the upper rim.
- Plug into a properly wired wall outlet. Before you plug it in, make sure the voltage of the unit is the same as your local supply.
- DO NOT immerse the unit in water.

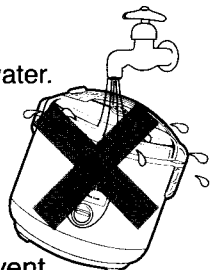


- Keep hands away from this vent. Steam emits while operating or hot water erupts when closing the lid.

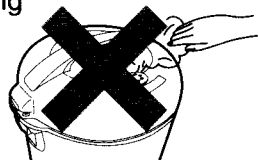

- The paper located between the pan and the heating plate should be removed before use.
- After plugging in, press the switch on immediately. Cooking with the switch in Keep Warm position will cause low heat cooking and this will not cook the rice properly.
- The unit becomes hot when in use. DO NOT touch the lid with your hand, and do not place your face directly over the steam coming from the cooker.
- Always keep the outside bottom of the pan and the heating plate clean and dry. Any foreign matter between them will cause the unit to malfunction.

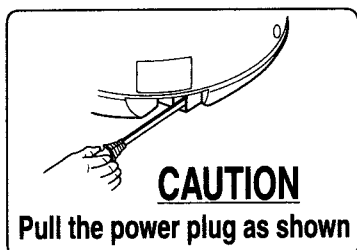

- Set the unit on a stable surface. DO NOT expose to water, high humidity, or heat sources. DO NOT use the pan directly on an open flame.

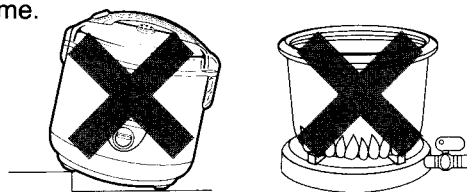

- Be sure to keep the unit out of the reach of children, especially when cooking rice.
- DO NOT tilt the rice-cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage.
- The pan must not be filled above the "MAXIMUM LEVEL".
- The lid must be closed tightly in the latched position at all times during cooking. (i.e. The unit must not be operated with the lid opened.)
- DO NOT cover the lid with a cloth. The lid may deform or change color.




- DO NOT damage the power cord and do not attempt to repair it if it is damaged. Avoid damage to the power cord. Never attempt to customize the cord. Keep the cord away from high temperatures. Avoid unnecessary bending, twisting and pulling on the cord. Never place heavy objects on the cord or attempt to tie it up. Using a damaged power cord can lead to electrical shock, shorting or fire.
 - Consult your nearest authorized service facility for repair of the electrical cord or power plug.
- Ensure that the plug fits all the way into the wall outlet. Partially plugged-in cords may cause electrical hazards.
 - Please use only attached cord set.
- Do not cover the lid with your hand or place your face directly over the steam coming from the cooker. Placing your hand or face on the steam outlet may cause burns.
- Be sure to keep this appliance away from the reach of children.

Parts Identification

ENGLISH


Inner lid

- Slide center packing onto the shaft of the inner lid. Face the large rubber lip of the center packing towards the outer lid. The small side of the center packing should face you when the outer lid is open.

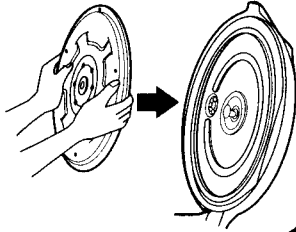

Dew collector

- Hold the sides and remove/install in the direction of the arrows.
- Remove and empty the dew collector after every use.

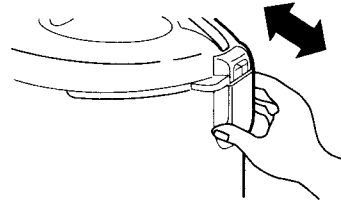

Center packing

Inner lid shaft

Outer lid

Pan

Body


"Keep Warm" lamp

"Rice Cook" lamp

Switch

AC cord

Scoop holder




Accessories




Measuring cup
(Approx. 180 ml)



Rice scoop









Scoop holder

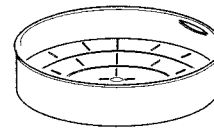

* Steaming basket

How to Cook

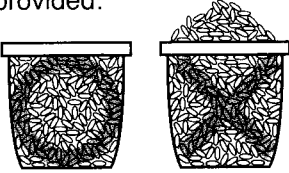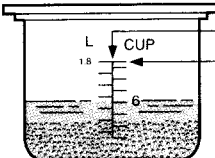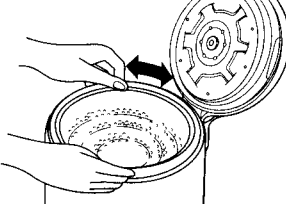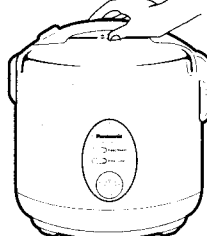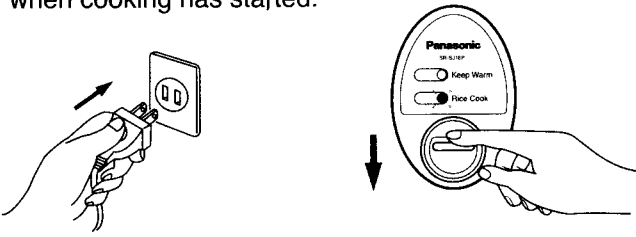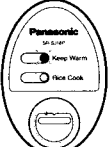
<p>1 Measure rice with the measuring cup provided. Rinse rice in a separate bowl until the water becomes relatively clear.</p> 	<ul style="list-style-type: none">Do not rinse rice in the rice cooker pan.
<p>2 Place rinsed rice in the pan. Add water. e.g. For 6 cups rice, add water to LEVEL INDICATOR 6.</p>  <p>LEVEL INDICATOR CUP 1.8 MAXIMUM LEVEL Do not cook with more than this level of water. (eg. 1.8 L Type)</p>	<ul style="list-style-type: none">Adjust the quantity of water to your personal taste.Soak rice in water at least for 30 minutes.
<p>3 Set the inner lid onto the outer lid. Place the pan in the body. Make sure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it settles properly.</p> 	<ul style="list-style-type: none">Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. Any foreign matter between the pan and heating plate may damage the unit
<p>4 Close the outer lid. The lid is locked properly when it clicks.</p> 	<ul style="list-style-type: none">If outer lid is not securely closed, cooking will be affected.Do not open the outer lid when in use.
<p>5 Plug in. Immediately press the switch. The "Rice Cook" lamp tells you when cooking has started.</p> 	<ul style="list-style-type: none">Do not plug in unit until you are ready to cook. Otherwise, rice may be ruined.If the pan is not in the unit, cooking will not begin.
<p>6 When rice is done, the switch will move up to the "Keep Warm" setting. The "Keep Warm" lamp lights up to indicate that the "Keep Warm" function is working.</p> 	<ul style="list-style-type: none">The "Keep Warm" function continues until the unit is unplugged.
<p>7 After the switch moves up, leave the outer lid closed for at least 15 minutes to fully steam the rice.</p>	

How to Cook

ENGLISH


8

Scoop and mix the rice well 20-30 minutes after cooking is finished.

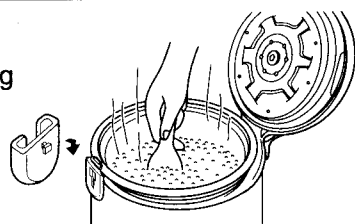


9

Unplug the unit if you do not want to keep the rice warm or when the unit is not in use.

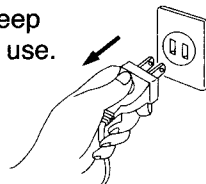

10

Remove and clean the dew collector after every use.

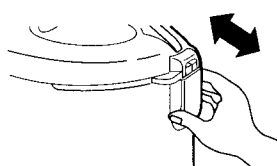

To Keep Cooked Rice Warm

- In order to reduce browning of the rice at the bottom of the pan, and burnt rice odor during the Keep Warm function, rice should be rinsed quickly and thoroughly as described in Step 1 under How to Cook (pg 4).
- Using the "Keep Warm" function for more than 12 hours may cause discoloration or an odor in the rice.
- If quantity of rice being kept warm is less than

SR-SJ10P	2 bowls
SR-SJ18P	6 bowls

The rice will gradually dry out and lose its flavour.

- Foreign matter left in the pan during "Keep Warm" function may affect the smell and taste of the rice.

How to Steam Food (Using the Steaming basket)

ENGLISH

1

Put 2 cups of water with the measuring cup provided into the pan.


Note : If cooking rice at the same time, go to Step 2 after adding the rice and water according to Step 1 & 2 under "How to Cook" (pg 4). DO NOT add extra water, otherwise, rice will become too soft.

If cooking rice at the same time, DO NOT cook beyond following capacity.

	Rice (cups)
1.8L	5
1.0L	2


2

Place steaming basket on the pan.

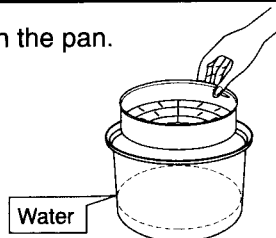

3

Set the pan into the body.
Add food. (Place in dish if required)

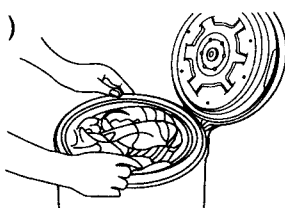

- Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. Any foreign matter between the pan and heating plate may damage the unit.

4

Close the outer lid.
The lid is locked properly when it clicks.

Plug in.
Immediately press the switch. The "Rice Cook" lamp tells you when steaming has started.


- If outer lid is not securely closed, cooking will be affected.
- DO NOT plug in until you are ready to cook.
- If the pan is not in the unit, cooking will not begin.

5

Time the cooking manually.
*Unit will automatically switch to Keep Warm, when water has completely evaporated.

6

Turn off cooker by unplugging.

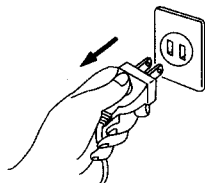

- The "Keep Warm" function continues until the unit is unplugged.

7

Remove foods, then the steaming basket, and finally pour out the water.

How to Clean

Unplug before cleaning.

1. Soak pan and inner lid in lukewarm water and wash with a sponge.
2. Wipe body with a damp cloth. Do not immerse in water.
3. Dew collector and scoop holder should be removed and cleaned after every use.
4. Do not use abrasive cleaners or steel wool. Clean with a non-metal brush or sponge.

ENGLISH

Non-stick coated pan

- Use a sponge to clean the pan.
- Use a plastic or wooden rice scoop, not metal utensils which may damage the surface of the pan
- The non-stick coating may discolor after many uses.
This will not affect the non-stick coating or cleanliness of the pan.

Troubleshooting

Problems Description	Cooking Problems					Keep Warm Problems			No power	Emits strange sounds
	Rice too hard	Rice not cooked to the center	Rice too soft	Viscous liquid overflows	Bottom is scorched	Rice has unusual smell	Rice changes color	Rice is too dry		
Possible Cause									Unplug the unit from the wall socket. Check circuit breaker. If circuit breaker is ok then take unit to the nearest authorized service center.	Popping sounds are caused when water trapped between the pan and the heater evaporates. This can cause damage to the pan and heater.
Rice to Water ratio not correct	●	●	●	●	●					
Rice not rinsed well enough					●	●				
Pan bottom dented or uneven	●	●			●					
Foreign matter between pan and heater	●	●	●		●	●	●			
Rice Cooked with oil	●	●				●				
Rice not fluffed (mixed) after cooking	●		●							
Keep Warm is used for longer than 12 hours or amount of rice being kept warm is too small						●	●	●		
Foreign matter left in pan during Keep Warm						●				
Rice being kept warm was at room temperature or colder or cold rice added to warm rice						●				
Lid not securely closed						●				
Pan was not clean or odours from previous cooking remain in pan					●	●				
Power cord was unplugged or the switch was turned off during cooking		●				●				

Specifications

Model No.	SF-SJ10P	SF-SJ18P	
Power supply	120 V		
Power consumed	at Rice Cook	450 W	630 W
	at Keep Warm	61 W	67 W
Capacity	0.18-1.0 L (1-5 cups)	0.54-1.8 L (3-10 cups)	
Dimension (H x W x D) (approx.)	10" x 10" x 9 3/4" (25.5 x 25.5 x 25.0 cm)	11" x 11" x 10 3/4" (28.0 x 28.0 x 27.5 cm)	
Weight (approx.)	2.4 kg (5 1/4 lb)	3.0 kg (6 3/5 lb)	
Accessories	Measuring cup, Rice scoop, Scoop holder, Steaming basket		