

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



SUNBEAM SCH160-CN Owner's Manual

[Shop genuine replacement parts for SUNBEAM
SCH160-CN](#)



[Find Your SUNBEAM HVAC Parts - Select From 25 Models](#)

----- Manual continues below -----

WARRANTY INFORMATION

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period.

Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-888-264-9669 and a convenient service center address will be provided to you.

WARRANTY

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 2000 Sunbeam Drive, Brampton, Ontario L6Y 0M1. **NOT RETURN THIS PRODUCT TO ANY OF THE ABOVE ADDRESSES.**

© 2009 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited. Distributed by Sunbeam Corporation (Canada) Limited, 2000 Sunbeam Drive, Brampton, Ontario L6Y 0M1.

INFORMATION SUR LA GARANTIE

GARANTIE LIMITÉE DE 1 AN

Sunbeam Products, Inc., faisant affaires sous le nom de Jarden Consumer Solutions ou, si au Canada, Sunbeam Corporation (Canada), faisant affaires sous le nom de Jarden Consumer Solutions (collectivement, « JCS »), garantit que, pendant un an à compter de la date d'achat, ce produit sera exempt de toute défectuosité matérielle ou de main-d'œuvre. JCS se réserve le droit de choisir entre réparer ou remplacer cet article ou toute pièce de celui-ci dont la défectuosité a été constatée au cours de la période de garantie. Le remplacement se fera au moyen d'un produit neuf ou remanufacturé ou bien d'une pièce neuve ou remanufacturée. Si l'article n'est plus disponible, il sera remplacé par un article semblable, de valeur égale ou supérieure. La présente constitue votre garantie exclusive. NE TENTEZ PAS de réparer ou de régler une fonction électrique ou mécanique de ce produit. Ce faisant, vous annuleriez cette garantie.

Cette garantie n'est valable que pour l'acheteur au détail original à partir de la date de l'achat au détail initial et elle n'est pas transférable. Veuillez conserver le reçu d'achat original. La preuve d'achat est exigée pour tout service couvert par la garantie. Les concessionnaires JCS, les centres de service et les détaillants qui vendent des articles JCS n'ont pas le droit d'altérer, de modifier ou de changer d'une manière quelconque les modalités de cette garantie.

Cette garantie ne couvre pas l'usure normale des pièces ou l'endommagement attribuable à la négligence, à l'utilisation abusive du produit, au branchement sur un circuit de tension ou courant inapproprié, au non-respect du mode d'emploi, au démontage et à la réparation ou à l'altération par quiconque, sauf JCS ou un centre de service agréé JCS. Cette garantie ne couvre pas non plus les cas de force majeure comme incendies, inondations, ouragans et tornades.

Quelles sont les limites de la responsabilité de JCS?

JCS n'assume aucune responsabilité pour les dommages accessoires ou indirects résultant du non-respect de toute garantie ou condition explicite, implicite ou générale.

Sauf dans la mesure interdite par la législation pertinente, toute garantie implicite de qualité marchande ou d'application

INFORMATION


Aux États-Unis, cette garantie est offerte par Sunbeam Products, Inc. située à Boca Raton, Floride 33431. Au Canada, cette garantie est offerte par Sunbeam Corporation (Canada) Limited faisant affaires sous le nom de Jarden Consumer Solutions, située à 2000 Sunbeam Drive, Brampton, Ontario L6Y 0M1. **VEUILLEZ NE PAS RETOURNER CE PRODUIT À AUCUN DES ADRESSES CI-DESSUS.**

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by the manufacturer may cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

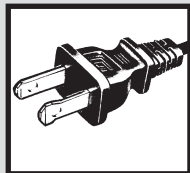

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

VEUILLEZ LIRE ET CONSERVER CES DIRECTIVES DE SÉCURITÉ IMPORTANTES

Lors de l'utilisation d'un appareil électrique, il faut toujours respecter les mesures de sécurité de base, y compris celles stipulées ci-dessous, afin de réduire le risque d'incendie, de choc électrique et de blessure :

1. Lisez toutes les instructions avant d'utiliser l'appareil.
 2. Afin d'éviter le risque d'incendie ou de choc électrique, branchez l'appareil directement dans une prise de courant 120 volts. c.a.
 3. Le radiateur est chaud lorsqu'il est en fonction. Afin d'éviter toute brûlure, NE touchez PAS les surfaces chaudes avec la peau nue. Si l'appareil est doté de poignées, utilisez-les pour le déplacer. Gardez les articles combustibles, tels que les meubles, oreillers, draps de lit, papiers, vêtements et rideaux, à une distance d'au moins 0,9 m (3 pi) de tous les côtés du radiateur.
 4. NE placez PAS le cordon sous une moquette. NE couvrez PAS le cordon avec une carpe, un tapis de couloir ou un autre genre de tapis. Placez le cordon loin des endroits passants où il ne fera pas trébucher personne.
 5. Ce radiateur n'est pas conçu pour être utilisé dans
- causer des chocs électriques ou un incendie, et même endommager le radiateur.
10. N'utilisez PAS le radiateur si le cordon ou la fiche est endommagé, si le radiateur ne fonctionne pas de manière appropriée, s'il est tombé ou s'il a été endommagé de quelque façon que ce soit. Retournez l'appareil au fabricant pour une vérification, une réparation ou un réglage électrique ou mécanique.
 11. L'intérieur d'un radiateur comporte des pièces chaudes ainsi que des pièces produisant des arcs électriques ou des étincelles. NE vous en servez PAS à des endroits où de l'essence, de la peinture ou des liquides inflammables sont entreposés ou utilisés.
 12. Cet appareil ne doit servir qu'aux fins domestiques pour lesquelles il a été conçu décrites dans ce guide. Tout autre usage non recommandé par le fabricant risque de causer un incendie, des chocs électriques ou des blessures. Toute utilisation d'accessoires non recommandés ou non vendus par The Holmes Group pourrait être dangereuse.
 13. N'utilisez PAS cet appareil à l'extérieur.
 14. Afin d'éviter un incendie, NE bloquez PAS les

FEATURES

TECHNICAL SPECIFICATIONS

- Amps: 12.5
- Wattage: 1500W (+5% -10%)
- Working voltage: 120V AC/60Hz

OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Make sure the unit is in the Off (I/O) position before plugging the heater into the outlet.
3. Plug unit into standard 120V outlet. Turn Thermostat fully clockwise to highest position (Largest ●). Select Mode to begin operation.
4. Avoid overloading your circuit by not using other wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

Mode Control

Turn the Mode Control to the desired setting:

I/O - Off Mode

If you want to shut off the heater at any time during operation, turn the Mode Control to Off (I/O) position. Power Light Ring will remain lit until the heater is turned to Off (I/O).

- Fan only Setting

Heater will run at fan-only operation without heat output.

1 - Low Heat

The heater will run continuously at 1000W.

2 - High Heat

The heater will run continuously at 1500W.

NOTE: To start heater or fan only operation, make sure the Thermostat Control is turned fully clockwise to the highest position (Largest ●).

Thermostat Control

1. Before setting the thermostat, allow heater to operate and warm up the room. As noted before, you need to turn the Thermostat Control to High (Largest ●) to start the heater.
2. When the desired temperature comfort level is reached, lower the thermostat setting until the

CARACTÉRISTIQUES

18. NE tentez PAS de réparer ou d'ajuster les fonctions électriques ou mécaniques de cet appareil. Cette action entraînera l'annulation de la garantie. Il n'y a aucune pièce qui peut être réparée par l'utilisateur à l'intérieur de cet appareil. Toute réparation doit être effectuée par un personnel qualifié.
19. Arrêtez l'appareil et ne l'utilisez plus si la fiche ou la prise de courant est chaude. Nous vous recommandons de faire remplacer la prise de courant si la fiche ou la prise est chaude au toucher.

VEUILLEZ LIRE ET CONSERVER CES DIRECTIVES DE SÉCURITÉ IMPORTANTES

FICHE TECHNIQUE