

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



George Foreman GRP106WP Owner's Manual

[Shop genuine replacement parts for George Foreman
GRP106WP](#)



[Find Your George Foreman Grill Parts - Select From 307 Models](#)

----- Manual continues below -----

GEORGE FOREMAN®

THE LEAN MEAN FAT REDUCING GRILLING MACHINE™

Please Read and Save this Use and Care Book

Por favor lea este instructivo antes de usar el producto



? USA/Canada 1-800-231-9786
www.prodprotect.com/applica

Accessories/Parts (USA/Canada)
Accesorios/Partes (EE.UU./Canadá)
1-800-738-0245

Model
Modelo
GRP106WP

CÓMO COMENZAR

- Retire todo el material de envoltorio y todos los adhesivos.
- Retire y guarde todo el material escrito
- Vaya a www.prodprotect.com/applica para registrar su garantía.
- Lave las placas con agua caliente y jabón, enjuague y seque bien como se indica en la sección CUIDADO Y LIMPIEZA de este manual de uso y cuidado.

Nota: Aunque las placas de la parrilla pueden lavarse en el lavavajillas, recomendamos el lavado a mano para preservar su apariencia. Al lavarlo en el lavavajillas sobre el metal se formará una película sin brillo que no afectará el rendimiento pero no luce bien.

COLOCACIÓN DE LAS PLACAS DE LA PARRILLA

Las placas removibles de su 360 Grill™ fueron diseñadas de modo a calzar sobre la parrilla en una sola dirección. Si está teniendo problemas para sujetar una placa, ¡no intente calzarla a la fuerza!

- Para ajustar la placa superior, verifique que la flecha sobre la

GETTING STARTED



- Remove all packing material and any stickers.
- Remove and save literature
- Please go to www.prodprotect.com/applica to register
- Wash plates in hot soapy water, rinse and dry thoroughly

Note: Although the plates are dishwasher-safe, we recommend hand washing to preserve their appearance. In dishwasher, you may get a cloudy film that will not affect the performance but is not as attractive.

ATTACHING THE PLATES


The removable plates of your 360 Grill™ are designed to attach in one way only. If you are having trouble attaching a plate, do not force it onto the grill!

- For the top plate, make sure the arrow on the plate is pointing towards the front of the grill.
- For the bottom plate, make sure the arrow on the plate is pointing towards the back of the grill (**B2**).

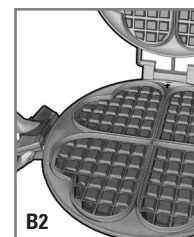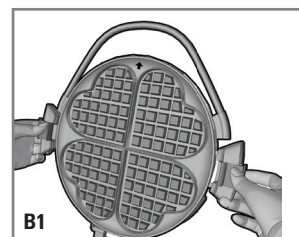


Caution: Attach plates when the appliance is cool.


1. Holding a plate with both hands, use your thumbs to push the handles (**C**).

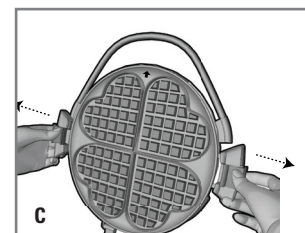

2. Set plate against frame of grill and release the handle latches on each side fit into the openings on each side.

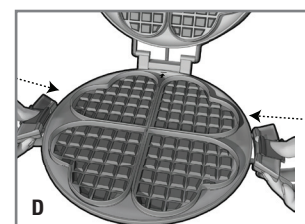

2. Coloque la placa contra el armazón de la parrilla y sujete asegurando que las trabas en cada costado calcen en las aberturas de cada lado de la parrilla (**D**).

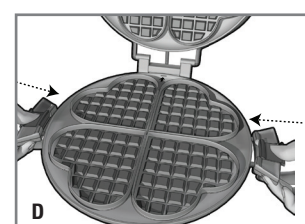

3. Si aún está teniendo problemas para lograr que ambas trabas calzen a la vez, intente trabar un lado primero y luego el otro.
4. Cuando las dos trabas estén en su lugar, la placa del waffle se sujetará.

Nota: Si sigue teniendo problemas para sujetar o quitar la placa de la parrilla, por favor llame sin cargo al 1-800-231-9786 y un