


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).






ASKO TL751XXLRR Owner's Manual

**[Shop genuine replacement parts for ASKO
TL751XXLRR](#)**

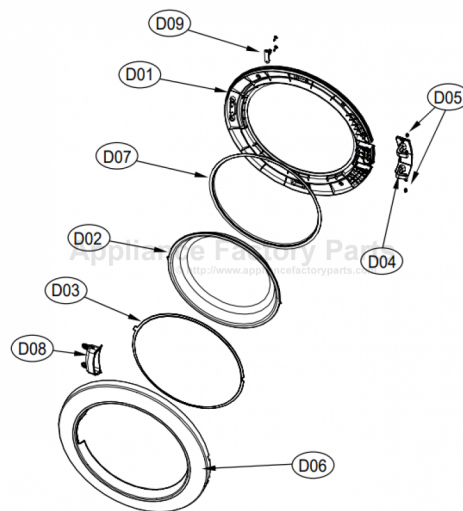

[Find Your ASKO Dryer Parts - Select From 73 Models](#)

----- Manual continues below -----

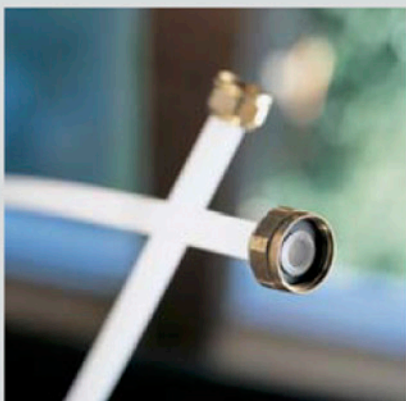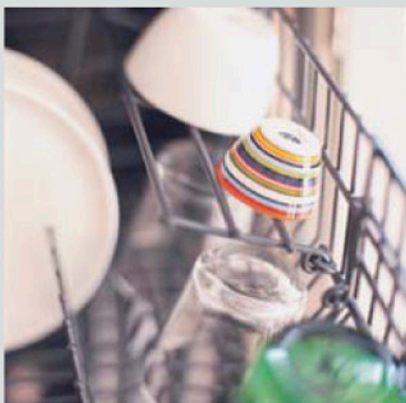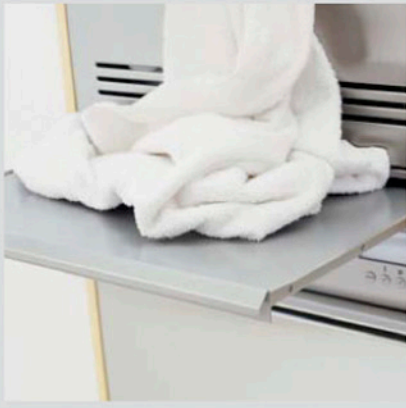

Spare Parts Catalogue

Tumble Dryers \ ASKO XXL Series
Type: TL751XXLRR

Model: TL751XXLRR Electronical Dryer XXL


Prod. No: 107751RR

October 20th 2009

ASKO Appliances Inc.

4001 E Plano Parkway #1004001 E Plano Parkway #100
Plano, Texas 75074

8. DOOR ASS'Y

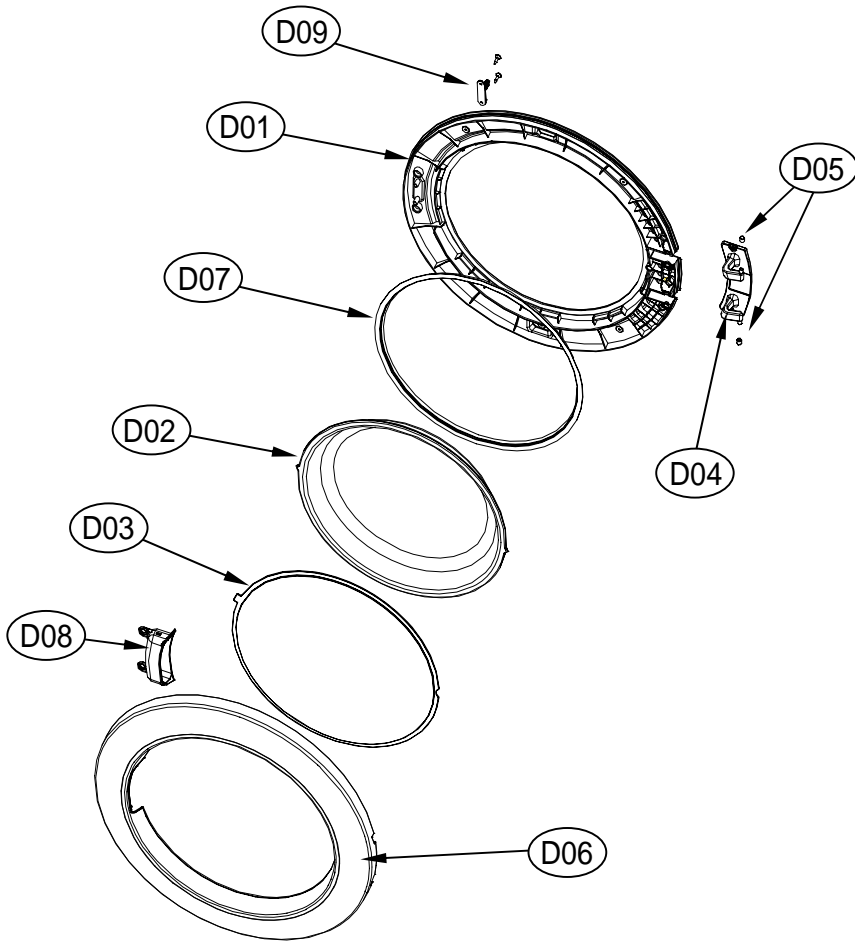


Door Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
D01	3612208000	Door Frame - Inner	1 Pc's	
D01a	7115402008	Screw - Self Tapping	15 Pc's	For attaching Inner & Outer door frames
D02	36117ABR00	Door Glass	1 Pc's	
D03	3618304300	Door Glass Protection	1 Pc's	
D04	3612903600	Door Hinge	1 Pc's	
D05	3610916500	Door Hinge Cap	2 Pc's	
D06	3612208120	Door Frame - Outer Chrome	1 Pc's	
D07	3612323000	Door Gasket	1 Pc's	
D08	3611428310	Handle Cover	1 Pc's	
D09	3613101100	Door Hook	1 Pc's	
D09a	7115401608	Screw-Self Tapping	1 Pc's	For attaching door hook

11. CONTROL PANEL F ASS'Y

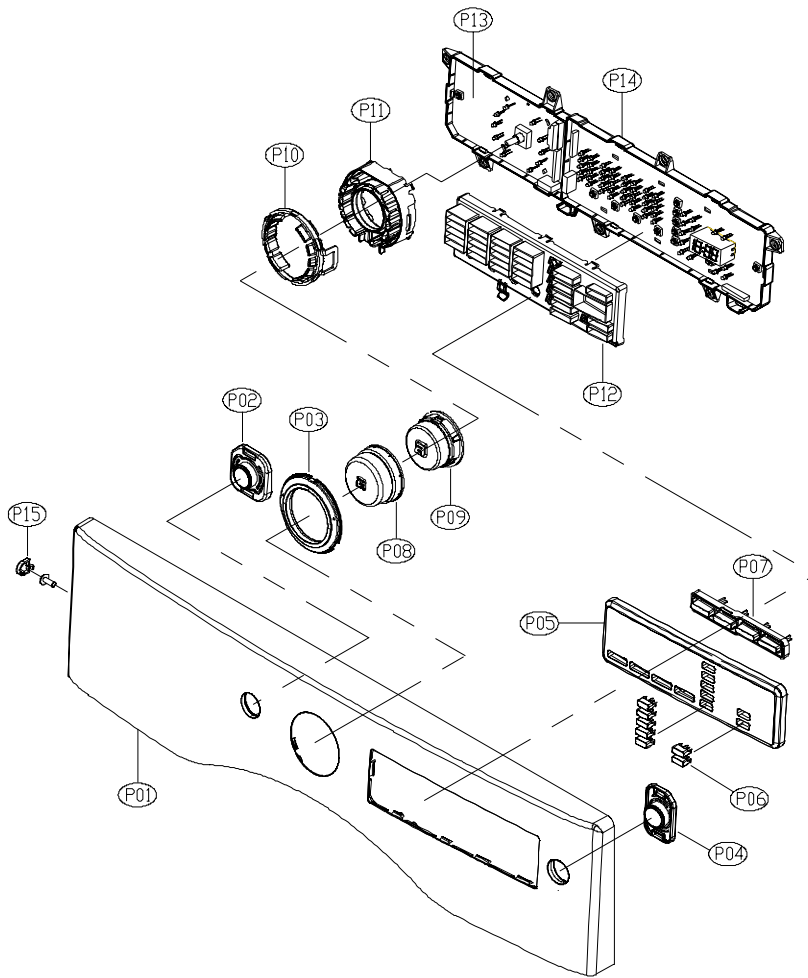


Control Panel Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
P01	3614288900RR	Front Control Panel	1 Pc's	
P01a	71224012411	Screw - Self Tapping	1 Pc's	To affix PCB case to control panel
P02	3616637800	Power Button	1 Pc's	
P03	3615506300	Lens Cover - Prg Selector	1 Pc's	
P04	3616637900	Start Button	1 Pc's	
P05	3615506400	Program Lens Cover	1 Pc's	
P06	3616638100	Option Button	7 Pc's	
P07	3616638000	Function Button	1 Pc's	
P08	3616638200	Program Knob - Outer	1 Pc's	
P09	3616638300	Program Knob - Inner	1 Pc's	
P10	3613054700	Program Knob Lens	1 Pc's	
P11	3613054500	Program Knob Lens Holder	1 Pc's	
P12	3613054600	Lens Cover - Prg Option	1 Pc's	
P13	PRPSSWAD55	Control Unit PCB - Dryer	1 Pc's	For Electric & Gas Dryers
P14	3611147600	Control Unit Case - PCB Front	1 Pc's	
P14a	71224012411	Screw - Self Tapping	7 Pc's	To affix PCB case to control panel
P15	3610917700RR	Screw Cap	1 Pc's	

1. DRYER CABINET ASS'Y


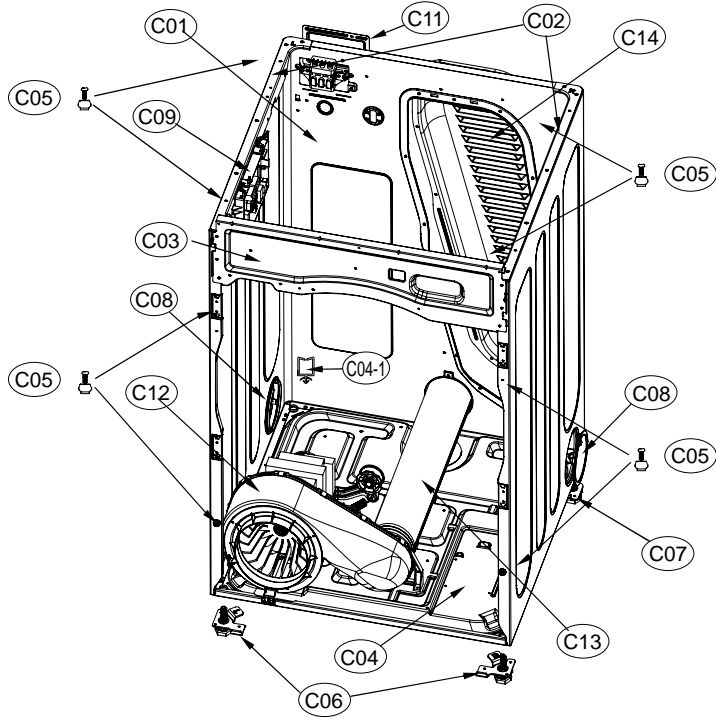


Cabinet Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
C03	3612207900	Front Frame Upper	1 Pc's	
C04	3610392900	Base	1 Pc's	
C04-1	3613802300	Harness Clip	12 Pc's	Rear cabinet panel
C05	3612008000	Panel Clip	8 Pc's	
C05a	7122401411	Screw - Self Tapping	8 Pc's	
C06	3617703900	Leveling Leg - Front	2 Pc's	
C07	3617704000	Leveling Leg - Back	2 Pc's	
C08	3611428010	Duct Cover	1 Pc's	
C09	PRPSSWAD40	Main PCB - Elec. Dryer	1 Pc's	
C10	3612797000	Harness - Power Main PCB	1 Pc's	
C11	3611428100	Terminal Block Cover	1 Pc's	
C11a	7112401411	Screw-Self Tapping	1 Pc's	
C12	36189L5A00	Motor Unit Cmpl.	1 Pc's	See Dryer Motor Assembly
C12a	7112401411	Screw-Self Tapping	4 Pc's	
C13	3614413600	Exhaust Pipe	1 Pc's	
C13a	7112401008	Screw-Self Tapping	1 Pc's	
C14	3611427900	Back Cover	1 Pc's	
C14a	7112401411	Screw-Self Tapping	12 Pc's	

8. TOP PANEL & Dryer Rack ASS'Y

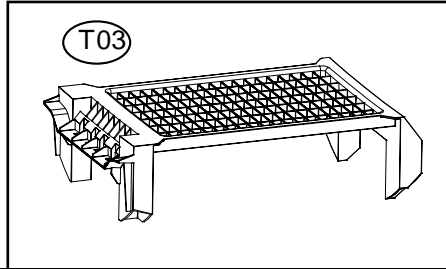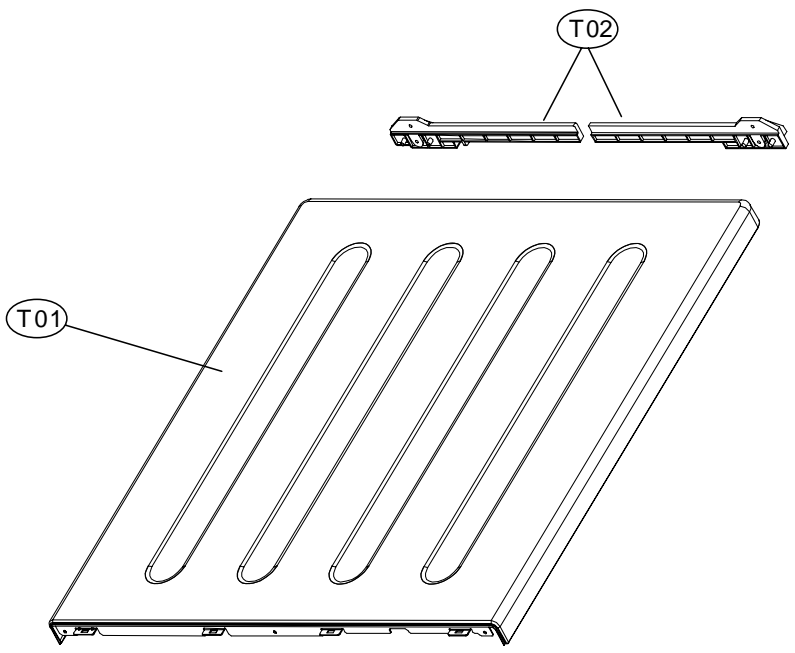


Top Panel & Dryer Rack

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
T01	3614533010RR	Top Panel	1 Pc's	
T02	3615304100	Top Panel Support	2 Pc's	
T02a	7122401411	Screw - Self Tapping	4 Pc's	
T03	36124234000	Dryer Rack	1 Pc's	

5. DRUM SUPPORT REAR ASS'Y

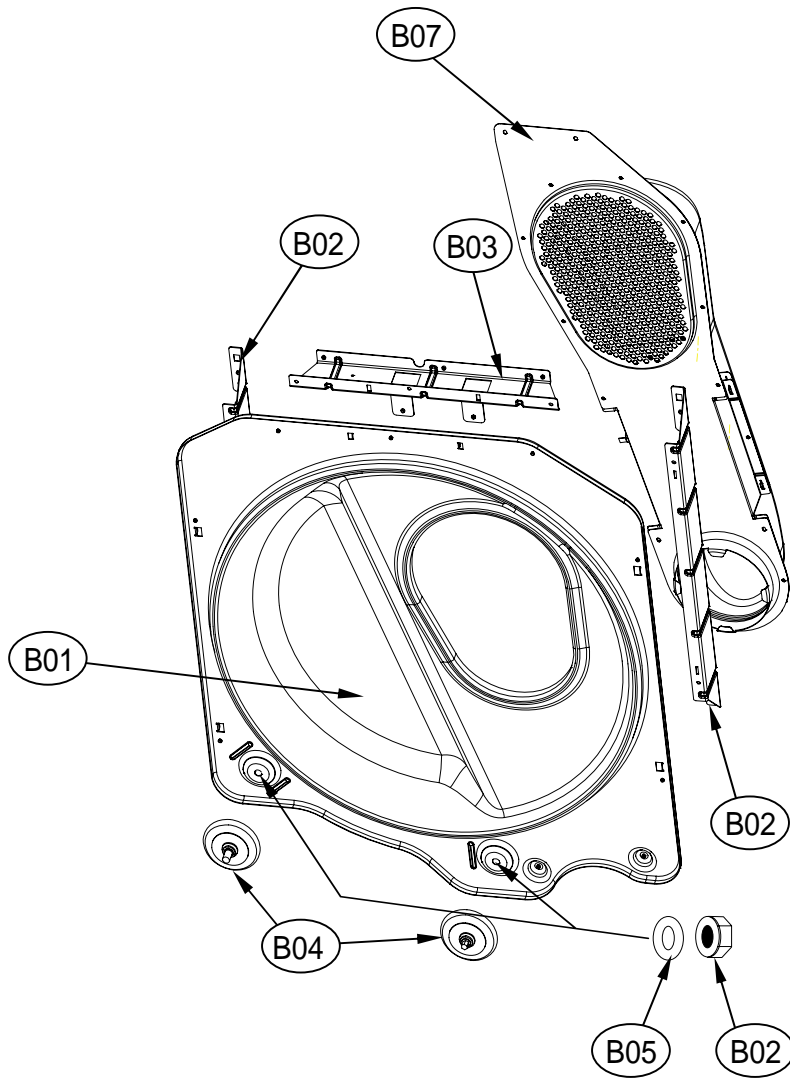


Drum Support Rear Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
B01	3615304500	Drum Support Rear	1 Pc's	
B02	3610608810	Support Bracket Right Side	1 Pc's	
B03	3610608910	Support Bracket Right Upper	1 Pc's	
B03a	7122401411	Screw - Self Tapping	7 Pc's	
B04	3614714400	Drum Roller	2 Pc's	
B05	3616039400	Washer - Roller	2 Pc's	
B06	3616039300	Nut - Roller	2 Pc's	
B07	3617510100	Inlet Duct Assembly - Elec. Dryer	1 Pc's	

2. DRYER MOTOR ASS'Y

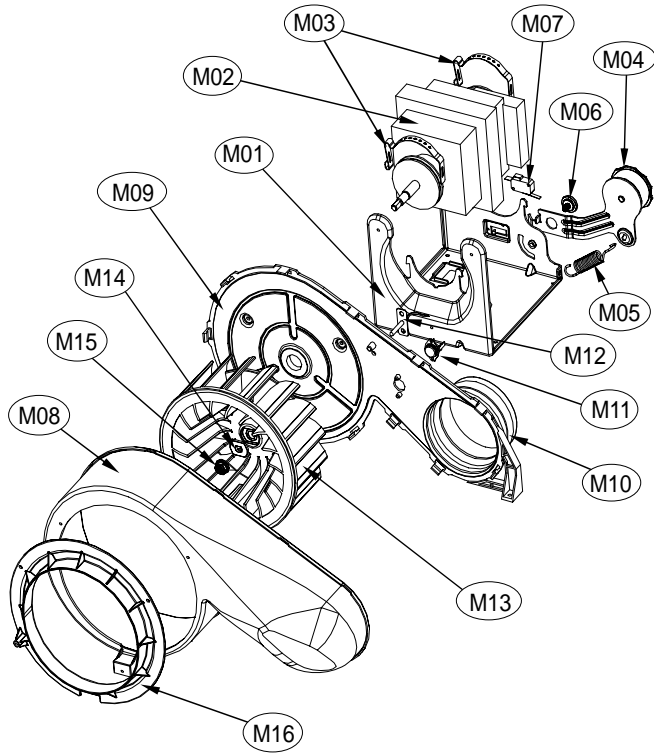


Dryer Motor Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
M01	3610608500	Motor Bracket	1 Pc's	
M01a	7122401411	Screw - Self Tapping	4 Pc's	
M02	36189L5D00	Dryer Motor	1 Pc's	
M03	3611206000	Motor Clamp	2 Pc's	
M04	3610609100	Idler Bracket	1 Pc's	
M05	3615115500	Idler Spring	1 Pc's	
M06	3616039000	Idler Bolt	1 Pc's	
M07	3619047500	Micro Switch	1 Pc's	
M07a	7121301611	Screw-Self Tapping	2 Pc's	
M08	3611144900	Fan Case - Front	1 Pc's	
M09	3611145000	Fan Case - Rear	1 Pc's	
M10	3612323200	Pipe Gasket	1 Pc's	
M10a	7112401411	Screw-Self Tapping	3 Pc's	
M11	3619047900	Fan T-Stat 70c on/85c off	1 Pc's	85C Off / 70C On
M11a	7121300811	Screw-Self Tapping	2 Pc's	
M12	361AAAAC20	Thermistor	1 Pc's	
M12a	7122401411	Screw - Self Tapping	1 Pc's	
M13	3611886200	Fan Impeller	1 Pc's	
M14	3616039100	Lock Washer	1 Pc's	
M15	3616039200	Lock Nut	1 Pc's	
M16	3611428200	Fan Cover	1 Pc's	
M16a	7122401411	Screw - Self Tapping	2 Pc's	

6. DRUM SUPPORT FRONT ASS'Y

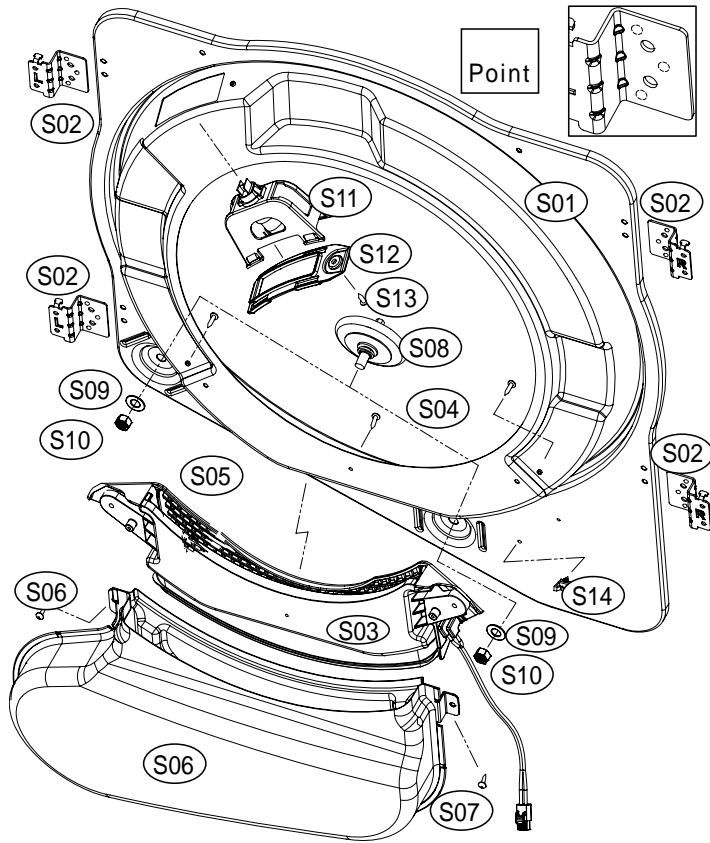


Drum Support Front Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
S01	3615304600	Drum Support Front	1 Pc's	
S02	3610609000	Support Bracket Front	4 Pc's	
S03	3611909500	Lint Filter	1 Pc's	
S04	7112401008	Screw-Self Tapping	1 Pc's	
S05	7112401008	Screw-Self Tapping	2 Pc's	
S06	3617510400	Outlet Duct Assembly	1 Pc's	
S07	7112401008	Screw-Self Tapping	2 Pc's	
S08	3614714400	Drum Roller	2 Pc's	
S09	3616039400	Washer - Roller	2 Pc's	
S10	3616039300	Nut - Roller	2 Pc's	
S11	3613625300	Lamp housing	1 Pc's	
S12	3615505100	Lamp Cover	1 Pc's	
S13	7112401008	Screw-Self Tapping	1 Pc's	
S14	3613802400	Harness Clip	1 Pc's	

10. CABINET FRONT ASS'Y

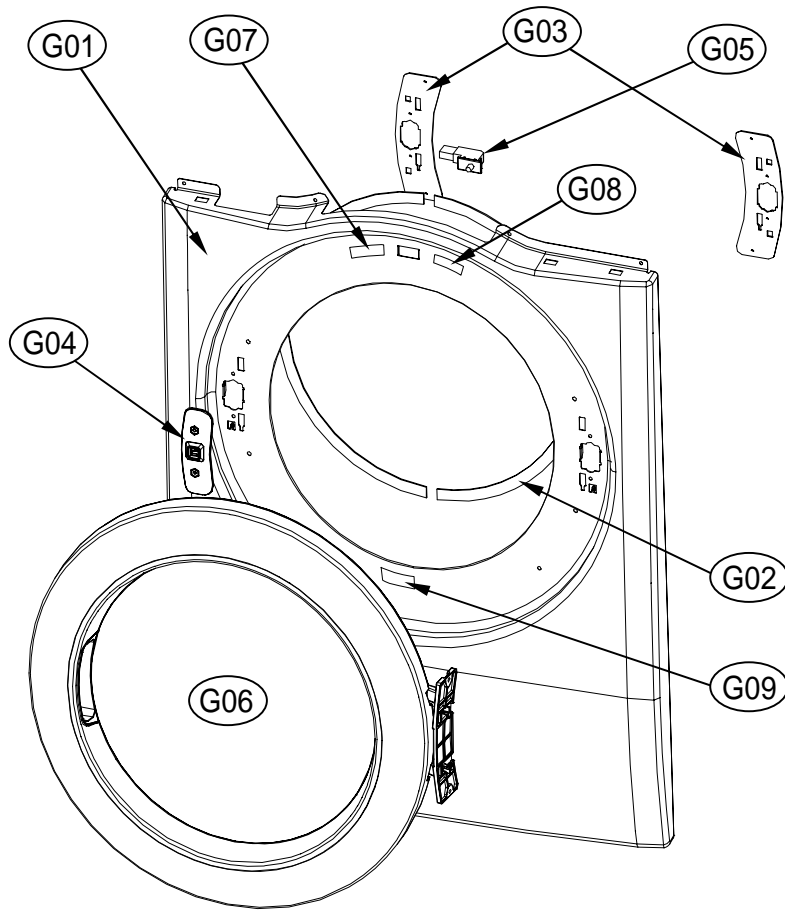


Cabinet Front Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)


Pos	Spare part No.	Description	Qty	Comment
G01	3610812500RRK	Front Panel RR w/labels	1 Pc's	
G02	3612323300	Front Panel Gasket	4 Pc's	
G03	3615304400	Hinge Support	2 Pc's	
G04	3613802500RR	Door Lock	1 Pc's	
G04a	7122401409	Screw-Self Tapping	2 Pc's	For attaching door lock
G05	3619047700	Door Switch	1 Pc's	
G06	3616051229	Screw - Self Tapping	1 Pc's	
G06a	3616051229	Screw - Self Tapping	1 Pc's	
G07	3613558800	Warning Label	1 Pc's	
G08	3613557600	Caution Label	1 Pc's	
G09	3613558900	Rating Label	1 Pc's	

4. HEATER DUCT ASS'Y

4-1. Electric Type

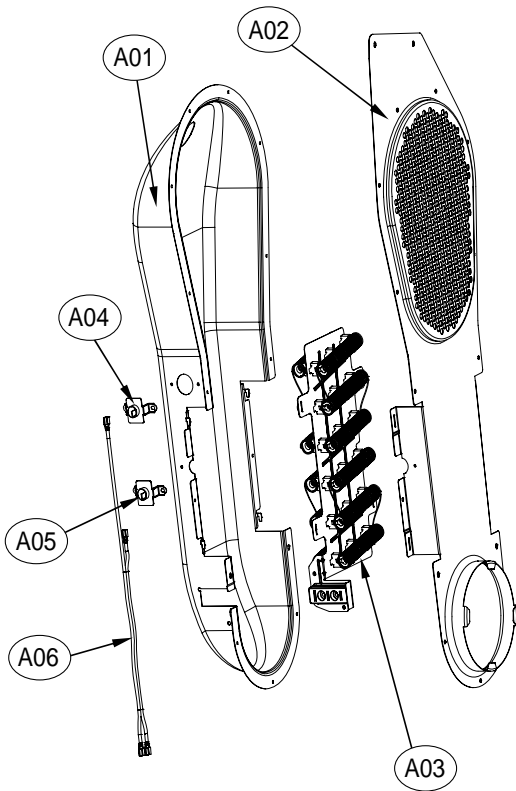

4-2. Gas Type

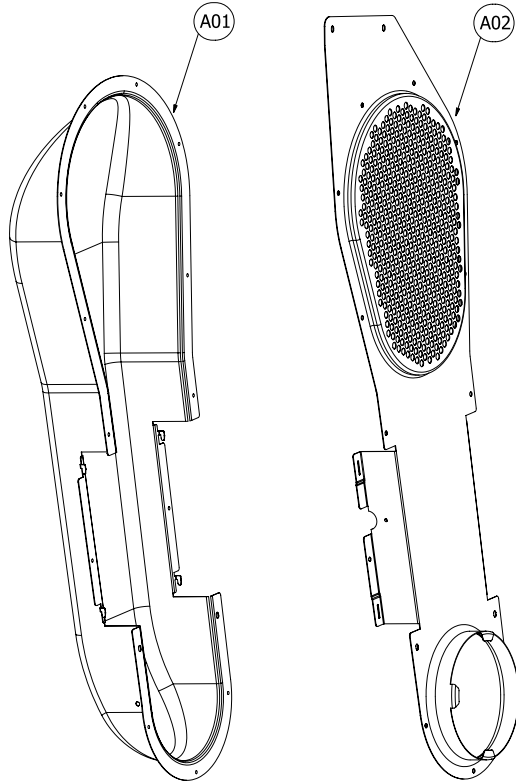


Air/Heater duct Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
A01	3617510200	Inlet Duct - Rear	1 Pc's	
A01a	7122400811	Screw-Self Tapping	12 Pc's	
A02	3617510300	Inlet Duct - Front	1 Pc's	
A02a	7122400811	Screw-Self Tapping	4 Pc's	
A03	3612802500	Heater - Dryer	1 Pc's	
A04	3619047600	Thermostat - Hi Limit	1 Pc's	125C Off / 94C On
A05	3619047800	Thermostat Cut-Out	1 Pc's	140C Off / -35C On
A06	3612797100	Heater Harness - Dryer	1 Pc's	

7. DRUM ASS'Y

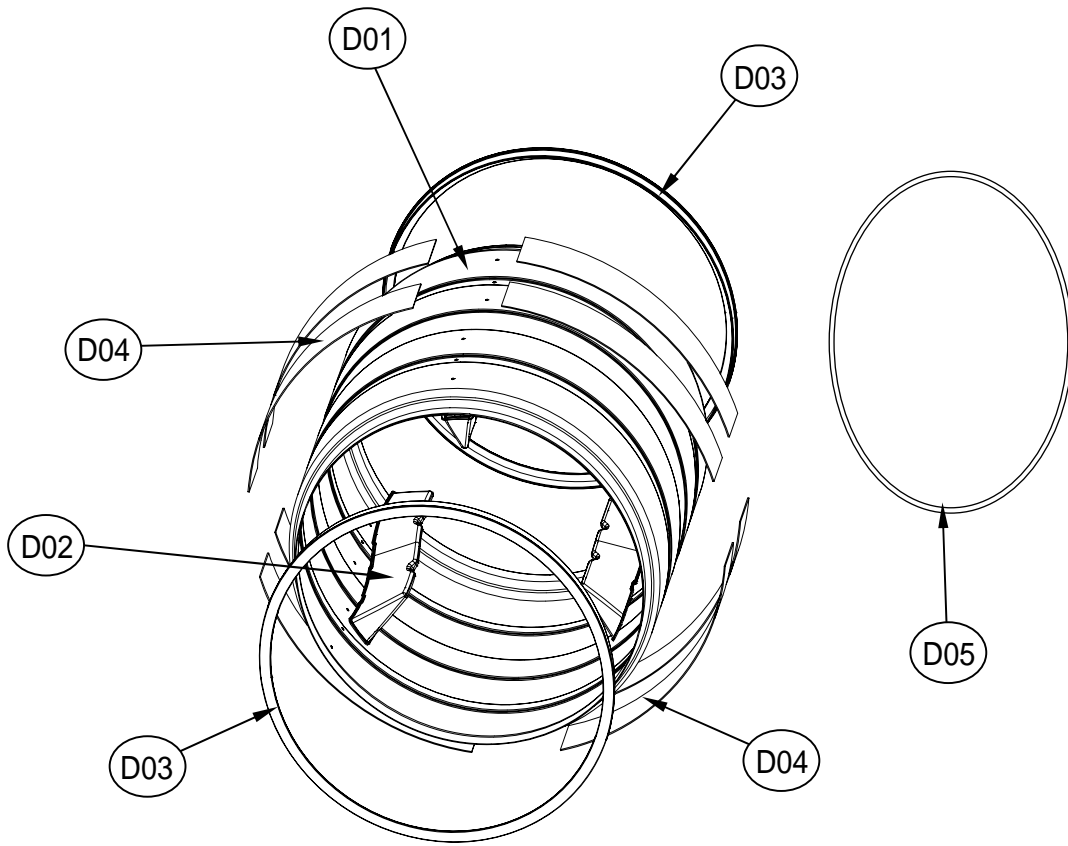

Drum Assembly

ASKO, TL751XXLRR - Electronical Dryer XXL (TL751XXLRR)

Pos	Spare part No.	Description	Qty	Comment
D01	3617010000	Drum	6 Pc's	
D02	361A401000	Drum Paddle	3 Pc's	
D02a	7122502008	Screw-Self Tapping	12 Pc's	
D03	3614010600	Drum Seal	2 Pc's	
D04	3614111110	Drum Pad	4 Pc's	
D05	3616591200	Belt	1 Pc's	

ELECTRIC DRYER DIAGRAM

